

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Item	In free service			After free service			
Service km Period from the date of sale	500 - 750		3rd 5000 - 6000 8 months	4th 8500 - 9000 12 months	Every 3000 km	Every 6000 km	Remarks
Engine oil	R	1&T	R	1&T	I&T	R	
Oil filter (strainer)	С	-	С	-	-	С	
Transmission oil	R	1&T	R	1&T	I&T	R	
Spark plug	C & A	-	-	-	-	-	Replace every 12000 km
Air cleaner (foam element)	1 & C	1 & C	1 & C	1 & C	1 & C	-	Replace every 12000 km (as a set)
Air cleaner (paper element)	ı	ı	I	I	I	-	Replace every 12000 km (as a set)
Air cleaner oil collection tubes	-	I & DR	I & DR	I & DR	I & DR	-	Drain oil if necessary
CVT filter element ¹	-	-	1 & C	-	-	1 & C	Replace every 12000 km
Tappet clearance	1 & A	-	1 & A	-	-	1 & A	Adjust if required
Drive belt and CVT rollers	-	-	-	-	-	-	Replace every 24000 km
Cover variator ³	-	-	I, C & L	-	-	I, C & L	
Clutch shoe	-	-	-	-	-	-	Replace every 24000 km
Hose fuel	-	-	-	-	-	-	Inspect every service after four years, replace if required.
Front and rear suspension	I	I	I	I	I	-	Inspect for proper functioning
All control cables ⁴	I, A & L	I, A & L	I, A & L	I, A & L	I, A & L	-	
Throttle grip	_	-	L	-	_	L	Lubricate using grease

Contd...

¹ Inspect for damage

² Clean and adjust every 12000 km after first service

³ Clean the cover with air. Lubricate kick starter with Bechem grease

⁴ Inspect for proper operation and adjust play. Lubricate ends using grease



Item		In free service After free service		e service			
	500 - 750	2nd 2500 - 3000		4th 8500 - 9000	Every 3000 km	Every 6000 km	Remarks
Period from the date of sale Steering smooth operation	2 months	4 months	8 months	12 months			C, L & A with fresh grease
/ play	1 & A	_	_	_	-	-	every 12000 km
Front fork oil	-	-	_	-	-	-	Replace every 24000 km
All fasteners	I & TI	I & TI	I & TI	I & TI	I & TI	-	
All bulbs, horn and switches	I	I	I	I	I	-	Inspect for proper functioning
Head lamp beam	1 & A	1 & A	1 & A	1 & A	1 & A	-	
Battery voltage ⁵	I	I	I	I	I	-	
Brake effectiveness / play	1 & A	1 & A	1 & A	1 & A	1 & A	-	Refer page No. 58 & 61 for details
Rear brake cam	-	-	C & L	-	-	C&L	Lubricate using grease
Brake pad wear**		I	I	1	- 1	-	Replace if necessary
Brake fluid**	1&T	1&T	1&T	1&T	1&T	-	Replace every 21000 km
Brake hose**	I	I	I	I	I	-	Replace every three years
Master cylinder cups**	-	-	_	-	-	-	Replace every 21000 km
Disc brake SBS cable play ⁶ **	I	I	I	1	1	-	Inspect for brake levers rattling
Wheel freeness	Ī	I	I	I	Ī	-	
Front wheel bearing	_	_	_	_	_	_	Lubricate using grease every 12000 km
Tyre pressure at cold condition	1 & S	1 & S	1 & S	1 & S	1 & S	_	

⁵ Recharge if necessary with MF battery charger

⁶ Adjust if rattling play is observed in both the brake levers

Cont ...

^{**} Applicable only for Disc Brake version



Item	In free service			After free service			
Service km Period from the date of sale	500 - 750		3rd 5000 - 6000 8 months		Every 3000 km	Every 6000 km	Remarks
Malfunction codes		ı	I	I		-	
Evaporative emission control system	I	I	ı	I	I	-	Check for intactness of hoses and canister
Fuel tank assembly**	1 & C	1 & C	1 & C	1 & C	1 & C	-	
Centre / side stand pivot	L	L	L	L	L	-	Lubricate using TRU4 oil
Kick starter pedal pivot	L	L	L	L	L	-	Lubricate using TRU4 oil

R - Replace; I - Inspect; T - Top up; C - Clean; A - Adjust; DR - Drain; L - Lubricate; TI - Tighten; S - Set

^{**} Check for abnormal vehicle jerk / noise while opening the cap / leak. If found any, contact TVS Motor Company Authorised Main Dealer or Authorised Dealer.



RECOMMENDED LUBRICANTS

APPLICATION	QTY	MANUFACTURER	BRAND
Engine oil	880 ml (during regular service)	TVS Motor Company	TVS TRU4 SKUUTA oil
	930 ml (incase of disassembly)		(SAE 10W30 API-SL, JASO MB)
Transmission oil	120 ml (during regular service)	-do-	-do-
	130 ml (incase of disassembly)		
Front fork oil	91 ± 1 cc / leg	IOC / HPCL	Gabriel front fork fluid
Disc brake fluid (only for Disc brake version)	-	TVS Girling	DOT 3 / DOT 4
Grease	_	Bharat petroleum	MP Grease no. 3
		IOC	Servo Gem no. 3
		Bechem	Bechem premium 3
		Kluber Lubrication	Kluber Centoplex 2