



LEAD THE PACK.
LIGHT THE WAY.

• The All-New •

Apache
RTR 200 4V

- Now with Projector Headlamp -

20 YEARS OF WINNING PERFORMANCES

The all-new TVS Apache RTR 200 4V is designed to lead with race-tuned precision. Its Class D Projector Headlamp with signature LED DRLs cuts through the dark with commanding clarity, while features like Traction Control System and Assist & Slipper Clutch keep you in charge when you ride the edge of control. With a 5" Connected TFT Cluster with SmartXonnect this machine is built to lead the pack and light the way.



CLASS D PROJECTOR
HEADLAMP WITH LED DRLs



5" CONNECTED
TFT CLUSTER



ASSIST & SLIPPER CLUTCH



TRACTION CONTROL
SYSTEM



LED TURN
SIGNAL LAMPS



SCAN FOR 24X7
ROADSIDE ASSISTANCE NOW

**WE GO THE DISTANCE
WHEN IT COMES
TO YOUR ASSISTANCE.**

MAKE YOUR RIDES HASSLE-FREE AND STRESS-FREE
WITH SERVICE BEYOND JUST ASSISTANCE.

Sign up for our 24X7 Roadside Assistance and enjoy
quick and efficient service anytime, anywhere.

24 / 7
**ROADSIDE
ASSISTANCE**
TOLL FREE NO. **1800 258 7111**



Drive In.

Drive Out.



**Say bye-bye to waiting time
for servicing your bike.**

Get your vehicle serviced in 1 hour at no additional cost. Contact your nearest Dealership for details.[†]

[†] Facility available at selected Dealerships only. Terms and conditions apply





Busy Life? Easy Servicing!

Now, service your bike anywhere, anytime.

- ★ Service the vehicle at your door step.
- ★ Available for regular maintenance or breakdown service only.
- ★ Offered at nominal convenience charges.

Contact your nearest Dealership for details.[†]

[†] Facility available at selected Dealerships only. Terms and conditions apply



Busy Life? Easy Servicing!

Now, service your bike anywhere, anytime.

- ★ Service the vehicle at your door step.
- ★ Available for regular maintenance or breakdown service only.
- ★ Offered at nominal convenience charges.

Contact your nearest Dealership for details.[†]

[†] Facility available at selected Dealerships only. Terms and conditions apply



CONTACT(S) FOR SUPPORT	1
FOREWORD	5
NOTICE	9
SAFETY INFORMATION	10
RUNNING-IN INFORMATION	11
ANTI-LOCK BRAKING SYSTEM	12
SAFE RIDING TIPS	17
KNOW YOUR TVS APACHE RTR 200 4V	21
RIDING YOUR TVS APACHE RTR 200 4V	74
MAINTENANCE	80
WARRANTY AND SERVICES	108
PRIVACY POLICY	114
TECHNICAL SPECIFICATIONS	120
GENERAL INFORMATION	126

Incase you need any clarification please contact

TVS Motor Company Authorised Main Dealer / Authorised Dealer

Or

TVS Motor Company's Area Offices (flip over for addresses)

Or

Toll Free Number : 1800-258-7111

Email : customercare@tvsmotor.com

Disclaimer : TVS Motor Company or any of its officials / Authorized Main dealer / Authorized Dealer do not ask customers for bank / card / wallet details / authentication. In case you face any such claim, please report to the relevant local authorities immediately.



CONTACT AT OUR AREA OFFICES

TAMILNADU - 1

2. TVS Motor Company Limited

V Floor, Gee Gee Universal,
No. 2, MC Nichols Road,
Chetpet, Chennai - 600 031.
Phone : 044 - 28361651/28361654
Email : AO.Chennai@tvsmotor.com

TAMILNADU - 2

2. TVS Motor Company Limited

No. 10, 2nd floor,
Shree Shanmugapriya Towers,
Kannuswamy Street,
Behind Hotel Annapoorna,
R S Puram, Coimbatore - 641 002.
Phone : 0422 - 4350060/2541035
Email : AO.Coimbatore@tvsmotor.com

TAMILNADU - 3

3. TVS Motor Company Limited

Sastha Square, 2nd Floor,
No. 46/4,5, 46/6A6,
Bypass Road, Kalavasal,
Next to Bharat Petroleum, Ponmeni,
Chandragandhi Nagar,
Madurai - 625 016.
Email : AO.Madurai@tvsmotor.com

KERALA

4. TVS Motor Company Limited

Ambady Towers, Second Floor,
Door No. 27/631, A6,
Edappally-Pookkattupady Road,
Edappally PO., Cochin - 682 024.
Phone : 0484 - 2544578/2556938
Email : AO.Cochin@tvsmotor.com

KARNATAKA - 1

5. TVS Motor Company Limited

TVS Focus Towers, Plot No. 25 and 23,
Konappana Agrahara Village,
Begur Hobli, Electronics City phase 1,
26A, 1st Main Rd,
Bengaluru - 560 100.
Email : AO.Bangalore@tvsmotor.com

KARNATAKA - 2

6. TVS Motor Company Limited

5th Floor, Marvel Ecron building.
CTS No-4784/A1/B2
Gokul Road, Hubballi - 580 030.

TELANGANA

7. TVS Motor Company Limited

Rukumani Towers, First Floor,
No. 3-11-30, Plot No. 11,
Paigha Colony, Behind Anand Theater,
Secunderabad - 500 003.
Phone : 040 - 27840590/27844419
Email : AO.Hyderabad@tvsmotor.com

ANDHRA PRADESH

8. TVS Motor Company Limited

1st Floor, Passport Office Building,
Sri Venkateswara Theatre,
D.No. 38-8-45, MG road, Punnammathota,
Vijayawada - 520 010.
Email : AO.Vijayawada@tvsmotor.com

MAHARASHTRA - 1 & 2

9. TVS Motor Company Limited

Poloroche Business Avenue, #302,
3rd Floor, CTS No. 218/3, Airport Road,
Opposite Symbiosis Law School,
Lohegaon,
Pune - 411 047.
Email : AO.Pune@tvsmotor.com

MAHARASHTRA - 3**10. TVS Motor Company Limited**

No. 502B, 6th Floor, B Wing,
Shriram Shyam Towers,
Near LIC Square, Sardar,
Nagpur - 440 001.
Phone : 0712 - 2569932
Email : Service.Nagpur@tvsmotor.com

CHATTISGARH**11. TVS Motor Company Limited**

Office No. B518- B527, 5th Floor,
Currency Tower, VIP Road Corner,
Raipur – 492 001.
Phone : 0771 - 4260006
Email : AO.Raipur@tvsmotor.com

GUJARAT**12. TVS Motor Company Limited**

101-08, 11th Floor, Solitaire Connect,
Near Gallops Motors,
S G Highway, Makarba,
Ahmedabad – 380 051.
Phone : 0755 - 65443748
Email : AO.Ahmedabad@tvsmotor.com

MADHYA PRADESH - 1**13. TVS Motor Company Limited**

No. 211-212, 2nd Floor,
Chinar Incube Business Centre,
Chinar Fortune City,
Near Brindhavan Dhaba,
Hosangabad Road,
Bhopal - 462 026.
Phone : 0755 - 2499406/2499306
Email : AO.Bhopal@tvsmotor.com

MADHYA PRADESH - 2**14. TVS Motor Company Limited**

501, N R K Tech Park,
5th floor, Plot No. 9-C-C-A,
Scheme No. 94, Ring Road,
Indore - 452 010.
Phone : 9685558301
Email : AO.Indore@tvsmotor.com

RAJASTHAN - 1 & 2**15. TVS Motor Company Limited**

Plot No. 17-18,
2nd Floor of National Motors Building,
Jhotwara Industrial Area,
Jaipur - 302 012.
Phone : 0141 - 5150901/5150902
Email : AO.Jaipur@tvsmotor.com
AO.Udaipur@tvsmotor.com

DELHI, HARYANA, UTTAR PRADESH WEST & UTTAR PRADESH HILLS**16. TVS Motor Company Limited**

Block D & E, Third Floor, "Golden-I",
Plot No. 11, Sector-Techzone - 4,
Gr. Noida West - 201 318.
Phone : 011 - 29834640/29834773
Email : AO.Delhi@tvsmotor.com

PUNJAB & CHANDIGARH**17. TVS Motor Company Limited**

4th Floor, Royal Business Park,
Chandigarh Ambala Highway,
Zirkapur - 140 603.
Phone : 01762 - 464777/465777
Email : AO.Chandigarh@tvsmotor.com

UTTAR PRADESH CENTRAL & EAST**18. TVS Motor Company Limited**

1st Floor, Cyber Tower, TC-34/V-2,
Vibhuti Khand, Gomti Nagar,
Lucknow - 226 010.
Phone : 0522 - 4918300/4918301
Email : AO.Lucknow@tvsmotor.com

WEST BENGAL**19. TVS Motor Company Limited**

Mediasiti, 6th Floor, Plot No. XI-4,
Salt Lake City, Electronic Complex,
Sector-V, PE & GP block, PO-Sech,
Bhawan, P S - Electronics Complex,
Kolkata - 700 091.

Email : AO.Kolkatta@tvsmotor.com

NORTH EAST STATES**23. TVS Motor Company Limited**

147, Udayan, Ganesh Guri,
Near Hotel D Courtyard,
R G B. Road, Guwahati - 781 005.
Phone : 0361 - 2202030/2202031
Email : AO.Guwahati@tvsmotor.com

BIHAR**20. TVS Motor Company Limited**

Sai Corporate Park, Block-A, 4th Floor,
Bailey Road, Rukanpura,
Patna - 800 014.
Email : AO.BNJ@tvsmotor.com

ORISSA**21. TVS Motor Company Limited**

No. 303, 3rd Floor,
Creative Plaza, Rasulgarh,
Bhubaneshwar - 751 010.
Phone : 0674 - 2580019
Email : AO.Bhubaneshwar@tvsmotor.com

JHARKHAND**22. TVS Motor Company Limited**

Second Floor, Lucas Service Building,
Argora Byepass Road,
Ranchi - 834 002.
Phone : 0651 - 2244715
Email : AO.Ranchi@tvsmotor.com

Revision 1, As on 6th Jan 2026

Dear Rider**TVS Apache RTR 200 4V**

20 years. 6 million riders. One name that means performance.

The TVS Apache RTR 200 4V carries forward a legacy of race-tuned precision, sharper control, and advanced tech that redefines street performance.

Its 20.8 PS engine delivers explosive acceleration and a crisp throttle response—made more intelligent with 3 ride modes (Urban, Sport, Rain), a slipper clutch, and SmartXonnect with Voice Assist. Every detail is built for the ride:

- Adjustable brake and clutch levers
- LED headlamp with DRLs
- Fully digital instrument cluster

And now, it gets even sharper with:

- 37mm Upside Down (USD) front forks for cornering confidence
- Hydroformed handlebar for enhanced handling
- Striking red alloy wheel and new colour options: Gloss Black, Matte Black, Granite Grey

#RacingDNAUnleashed**TVS MOTOR COMPANY LIMITED**

Brand Experience

Live the pure performance life.

Since 2005, TVS Apache has been at the helm of performance motorcycling, creating an entirely new breed of racers. And now that you have chosen the ultimate race machine, you are also part of this esteemed legacy. Not just that, you are also standing at the portal to a 360 moto-experience encompassing from out riding your limits at the racetrack to becoming part of a league of riders who share your passion for motorcycling.

Apache Owners Group

Join the league of Apache motor enthusiasts that share your passion for riding. Explore the unchartered, tame every terrain, forge unbreakable bonds, and make unforgettable memories with every journey.

Go on thrilling rides all year round –

Breakfast ride | Overnight ride | Marquee ride | Chapter ride

Apache Racing Experience

If you have the mettle, we have the track. Apache Racing Experience (ARE), a flagship property of TVS Racing & Apache, is the embodiment of our philosophy, **“the bikes we race are the bikes we sell.”** Hone your racing skills and techniques with the INMRC Champion riders from TVS Racing and test the limits of your machine and yourself.

TVS Racing Training School

Founded in 2017, TVS Racing Training School aims at fostering motor sports in India. We believe that all our riders are racers at heart and here, they can unleash that racer and learn the skills under National Champions. And through multiple levels of training, we hope to turn these racing zealots into the podium winners of tomorrow.

Join the AOG community - <https://www.tvsapache.com/assets/pdf/AOG-Regulations.pdf> and also download the TVS Connect app / <https://www.tvsapache.com/aog.aspx>



PERFORMANCE GEAR

When you ride your performance machine, you need to have gear that performs too. That's why we have TVS Racing Performance Gear – an entire range of riding gear designed to offer you the ultimate riding experience. With utmost safety and extreme comfort, it lets you take on every terrain and any weather.

With the range of urban wear, you can wear your passion even off track. And the racing DNA woven in is all you need to get your podium look on.


Riding Jackets & Pants | Helmets | Riding Boots | Riding Gloves
Polo T-Shirts | Caps | Sunglasses | Backpacks

To know more log on to –
<https://accessories.tvsmotor.com/performance-gear.aspx>



OUR RACING HERITAGE IS NOW YOURS TO TAKE FORWARD

Your TVS Apache is born of the legacy of TVS Racing

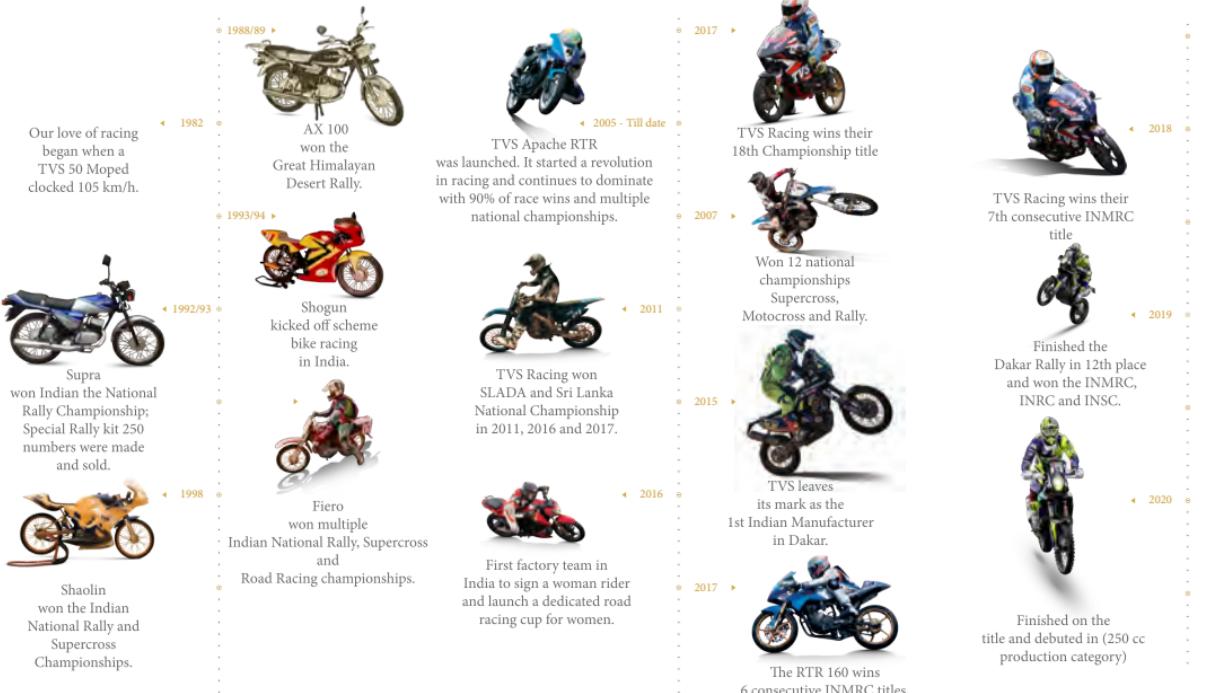

Keep up with our pace. Follow TVS Racing on -



Take time to familiarize yourself with your TVS Apache RTR 200 4V and its performance characteristics.

This manual is designed to help you to maximize the performance of your TVS Apache RTR 200 4V. Inside this manual, you'll find essential guidance on riding techniques and maintenance tips. By following these instructions carefully, you can ensure optimal performance and longevity of your vehicle.

Get familiarised with the operation of your TVS Apache RTR 200 4V for maximum safety and pleasure. The better you know your vehicle, the more pleasure you will experience riding your new vehicle. Ensure that anyone else riding your TVS Apache RTR 200 4V does the same.

All information, illustrations, photographs and specifications contained in this User Manual are based on the latest product information available at the time of this publication. TVS Motor Company Limited may, however, incorporate modifications or improvements on its vehicles at any time without notice, and therefore, in such events it is possible that the relevant part of the User Manual does not apply to your vehicle.

Prior permission of TVS Motor Company Limited is required for quoting, copying or reproducing any part of this User Manual.

Note

Accessories shown in the picture may not be a part of standard equipment.

Pictures shown in the manual are of TVS Apache RTR 200 4V disc brake with dual channel ABS until otherwise specified.

Your motorcycle is provided with a daytime running lamp (DRL) / Front Position lamp (FPL). The DRL / FPL glows automatically once the ignition is turned 'ON' and Headlamp will be switched on while the engine is running based on Headlamp switch position.

Since your vehicle is fitted with side stand cut-off system ensure to retract the side stand before starting / moving the vehicle.



Riding this vehicle safely is a key responsibility of the rider. To support informed and safe decision-making, this User Manual provides essential operating procedures and safety-related information. These guidelines are intended to alert you to potential hazards that could cause harm to you or others. However, since it's not possible to cover every possible risk associated with operating or maintaining the vehicle, it's important to exercise sound judgment at all times.

You will find critical safety instructions presented in specific formats throughout the User Manual. These formats use particular terms that convey the following meanings:

Warning

This message might result in injury to the rider or deadly accidents.

Caution

This message indicates special procedures or precautions to be followed to avoid damage to the vehicle.

Note

This message provides further clarification for clear understanding of any particular information.

The first 1000 km is a crucial part for the life of your TVS Apache RTR 200 4V. Proper running-in operation during this period helps in ensuring a maximum life and smooth performance of your motorcycle.

The reliability and overall performance of your TVS Apache RTR 200 4V greatly depend on the care taken during the initial running-in period. During this period, it is especially important that you avoid operating the engine in high speed (RPM), as this can place the engine parts under undue stress. To ensure optimal engine health and longevity, please adhere to the recommended maximum speed limits during the running-in phase:

Maximum 50 km/h speed upto 750 km for TVS Apache RTR 200 4V (vary the engine speed for better mating of parts).

The first free service at 500 ~ 750 km or 1 month (whichever occurs earlier) is most important. During running-in period all the engine components and other parts will have set in. All adjustments to be restored, all fasteners to be tightened. Engine and transmission oil to be replaced. Timely performance of the first free service will ensure optimum service life and performance of the engine.

 **Caution**

Replacing the engine cum transmission oil during first service is most important for better life of engine. Always use TVS TRU4 FULLY SYNTHETIC oil (SAE 10W30 API-SL, JASO MA2) for better performance and life.

*Since your motorcycle is fitted with Evaporative Emission Control System, **the motorcycle should not be laid on the floor during water wash**. Else it may lead to difficulty in starting and improper running of the motorcycle.*



Anti-Lock Brake System (ABS)

Your motorcycle is fitted with an Anti-lock braking system (ABS) which is designed to prevent skidding and help riders to maintain steering control during emergency-stopping situation in dry or wet roads, loose gravels etc. Incase of single channel ABS system, the ABS system is provided only on the front brake whereas in dual channel system has the ABS system on both front and rear brakes.

How does ABS work?

When a rider applies the front brake (in single channel system) or any of the brake (in dual channel system) continuously, as he detects a dangerous obstacle in dry or wet roads, loose gravels etc. transmits an excessive brake force to the wheels. This excessive force may cause the wheels to stop spinning and leads to lose of road grip. With no firm contact between the tire's contact patch and the road surface, the bike becomes unstable and a crash is imminent.


The slipping wheels on a riding surface results in losing control of whole motorcycle which usually occurs in fractions of a second. Restoring traction while keeping the bike balanced is only a result of luck, or extreme training, as is the case of professional stunt riders who drift. Preventing the wheels from slipping due to excessive braking force compensates losing control and help the rider to maneuver the vehicle and to avoid accidents.

So what the ABS does is actually limiting the braking force exerted by the rider by either squeezing the lever and keep the wheel spinning. Once the imminence of the locking (and therefore skidding) is avoided, the system re-applies the maximum braking force until the next skid is anticipated. By limiting the max force of the braking maneuver, the ABS systems practically allow the riders to use the greatest stopping force possible without locking the wheels.

How does the ABS understands the wheel locking?

The ABS uses continuous wheel speed monitoring system; wheel speed sensors and toner rings and a Hydraulic Electronic Control Unit (HECU).

During normal operation the ABS works similar to a normal brake. The speed sensors fitted on the both the wheels (incase of dual channel ABS) measures the rotational speed of the wheels, when the wheel speed reduces rapidly i.e. wheels tends to lock, the HECU modulates the pressure in the brake circuit and thereby prevents the wheels from locking.

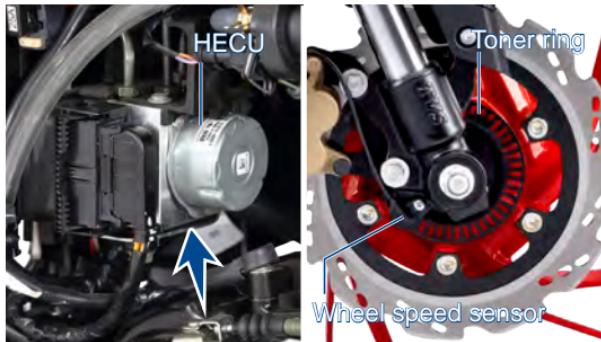

How the irregular road surface affects the braking?

Humps and irregular surfaces of the road can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to road surface is zero.

If the brakes are applied under these condition, the ABS has to reduce the braking force to ensure and maintain the directional stability when the wheels regains its contact with the road surface. At this instant the ABS must reduce the traction, so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability.

As soon as the actual circumstances arises, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

Why does brake pedal / lever pulsate during brake application?

Vehicles fitted with ABS uses the conventional brake system during normal operation. **But during hard stop the brake pedal / lever feels different, i.e., a rapid pulsation in the brake pedal / lever; This is absolutely normal.**

It is not necessary to have this pulsation feel every time the brake is applied. Pulsations are felt only during wheel locking tendency, occurs due to the modulation of pressure in the brake circuit by HECU. Pulsation means that the vehicle is in limit. This pulsation feel also depends on the road condition.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the ABS unit fitted in your vehicle will be unable to prevent the rear wheel from lifting clear of the ground and flip over. Severe braking can cause the rear wheel to lift off the ground.



When you brake, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of ground.

Warning

The ABS can apply and release the pressure in the brake circuit much faster than that rider can do with brake lever / pedal to avoid wheel locking. So there is no need to pump the brake, it requires only continuous application.

Incase of single channel ABS system, only the front brake of your motorcycle is fitted with ABS system and not the rear brake. Applying rear brake alone can cause wheel skidding just like normal braking system incase of single channel ABS system. Always apply both front and rear brake for better performance.

ABS warning lamp

The TVS Apache RTR 200 4V does an automatic self check every time when the ignition switch is turned 'ON'. The ABS warning lamp provided at the speedometer console blinks and informs you that the ABS is under check.

This ABS warning lamp goes 'OFF' once the bike reaches 6 km/h speed and above. It will blink whenever the bike speed is less than 6 km/h speed (only in single channel vehicles) indicating that the ABS is working fine.

If the warning lamp glows continuously even after the bike crossing the specified speed limits, then the ABS has an error and your bike should be taken to any of our nearest TVS Motor Company Authorised Main dealer / Authorised Dealer.



DO'S AND DONT'S

Do's

- ◆ Check the ABS warning lamp for any warning before driving the vehicle.
- ◆ Apply both front and rear brake for better performance.
- ◆ Apply continuous brake in ABS mode for better performance. Do not pump.
- ◆ Perform the periodic maintenance as per the schedule.
- ◆ ABS should be serviced only at TVS Motor Company Authorised Main dealer / Authorised Dealer.
- ◆ Carefully remove the wheel during puncture / tyre replacement to prevent toner ring damage / bend.
- ◆ **Keep the wheel in such a way that the toner ring is facing upwards.**
- ◆ Always use recommended brake fluid. Use fresh, clean brake fluid.
- ◆ Use only the recommended make, type and size of tyre (ABS tuned with tyre specified by the TVS Motor Company).

Don'ts

- ◆ Do not use **non-standard tyres**.
- ◆ Do not pump the brakes. Apply the brakes continuously.
- ◆ Do not ignore any warning lamp on speedometer.
- ◆ Do not adjust the wheel speed sensor air gap your self.
- ◆ Do not run the engine and ride or rotate the rear wheel alone in gear with vehicle on centre stand, for drive chain lubrication, during water wash etc.,
- ◆ Do not attempt to correct the toner ring teeth by bending manually or by using any other method.

Warning

ABS only helps in improving the vehicle control. It is always good to remember not to exceed the physical limits of the vehicle stability. It is rider's responsibility to ride at a suitable speed, while taking care of conditions and road surface. ABS will not compensate for errors in the judgment or improper brake use in the various situation. ABS never eliminates the danger of falling while turning.

Hard braking during sharp cornering on slippery surface may lead to vehicle instability. Under such circumstances gradual braking is recommended.



- ◆ Do not use different toner ring.
- ◆ Do not insert any metallic parts near wheel speed sensor.
- ◆ Do not test the ABS on road!!, but use ABS (it is already tested).

Note

Incase of ABS failure, the braking system will work like a non ABS braking system and provides normal stopping distance.

This motorcycle is equipped with ABS and tubeless tyres. For repair or replacement of tyres please contact nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer.

As a general riding practice it is advisable to apply more front brake and less of rear brake.

Use of non-genuine brake pads, tyres, disc etc. leads to poor braking performance and unsafe riding conditions.

Never open HECU on your own, it is a very sensitive part of ABS and needs to be handled only by the trained personnel. Contact your nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer.

- ◆ **Do not use non-genuine spares like pads, discs, tyres etc.**
- ◆ Do not try to service HECU or open to separate parts.
- ◆ Do not disengage the ABS by removing the ABS coupler.

Warning

Do not ride the vehicle in conditions like wheelie, stoppie, on-stand engine revving in gear for chain lubrication and during water wash etc... for more than three minutes as it will result in ABS error and ABS warning lamp glowing continuously. In such cases, just switch 'OFF' and switch 'ON' the ignition key once. ABS warning lamp may glow continuously if any ABS error had occurred before.

*This error gets cleared automatically and ABS warning lamp goes 'OFF' after riding the vehicle above 6 km/h speed. If the ABS warning lamp is still 'ON', then contact the nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer (**applicable only for dual channel ABS system**).*

SAFE RIDING RECOMMENDATIONS

Any two wheeler riding requires some precautions to be taken to ensure the safety of the rider, pillion rider and other road users. These precautions are:

Familiarise yourself with new TVS Apache RTR 200 4V

Riding skill and your mechanical knowledge forms the foundation of safe riding practices. We suggest you to practice riding TVS Apache RTR 200 4V in a low-traffic condition until you are thoroughly familiar with your vehicle and its controls. Remember practice makes you perfect.

Riding apparel

Loose, fancy clothing can be uncomfortable and unsafe when riding a two-wheeler. Choose good quality two wheeler riding apparel.

Know your limits

Ride within the boundaries of your own skill at all times. Knowing these limits and staying within them will help you avoid accidents.

Warning

Two wheeler safety starts with wearing a good quality helmet. One of the most serious injuries that can happen is a head injury. Always wear an ISI approved helmet that should fit your head comfortably and securely. You should also have good quality goggles to protect your eyes and help your vision.

To prevent or minimize accident, never consume alcohol or drugs before or during the operation of your vehicle. Even minimal consumption of these will affect the rider's ability to control the vehicle.



Posture

Proper vehicle riding starts with proper posture.

1. Sit erect on the seat at the position which you feel most comfortable.
2. Keep your arms relaxed to give extra cushion for body on uneven road surfaces.
3. Keep right arm and foot close to the brake lever and pedal, so as to enable fast action during panic braking.

⚠ Warning

One-hand riding is dangerous. Keep both hands firmly on the handle bar and both feet securely on the foot rest. Under no circumstances should both the hands be removed from the handle bar, as it is very dangerous.

Avoid use of mobile phones while riding as it could lead to fatal accident.

Do not downshift the gears in the midst of cornering. Slow down to a safe speed before negotiating a corner. If this is the first time that you are riding a vehicle of this type, we suggest that you practice on a safe, open area to thoroughly familiarise with the operation of the vehicle.

4. Look widely instead of gazing at one point.
5. After your sitting location / posture slightly at intervals during long rides. This will reduce fatigue.

Cornering

When cornering, centrifugal force works in a direction perpendicular to the direction in which the vehicle is moving. Centrifugal force increases in proportion with speed and the radius of the corner.

During cornering, reduce speed so as to reduce the effects of centrifugal force. Avoid abrupt application of brake or sudden steering by all means.

Braking

For safe riding, it is very important to master the braking techniques.

1. Close / release the throttle.
2. Hold the vehicle upright as you apply the brake.
3. Progressive application of brakes is safer.
4. Never declutch while braking at higher speeds.

5. Apply both the brakes.

6. Do not pump the brakes.

7. Riding down hills, while cornering and wet roads close throttle and down shift the gear to take advantage of gearbox and engine which acts as an additional brake. This will avoid the loss of control over the vehicle due to over speed.

Causes for poor braking

1. If the brake shoes / pads or drum / disc are worn out or if there is water or oil on them, sufficient friction does not develop and brakes do not work well.

Warning

As the vehicle speed increases, the stopping distance also increases progressively. Be sure that, you have sufficient distance between you and the vehicle or obstruction ahead of you.

Avoid directing the water jet directly towards brake drum / disc pads during water wash.

*Using only the front or rear brake is dangerous and can cause skidding and loss of control. **Apply both the brakes together and with great care on a wet road or other slippery surfaces.***

Any abrupt braking on slippery or irregular roads can cause loss of rider control.

2. Even when the brake works normally, if the road surface is wet or the tyre surface is worn-out, tyres do not take a firm hold on the surface, increasing the stopping distance.
3. Approximately 60% braking effect is from front brake. **Non-usage of front brake causes poor braking.**

ACCESSORY INSTALLATION AND SAFETY TIPS

Use extreme caution while selecting and installing the accessories for your motorcycle.

The addition of **unsuitable accessories can lead to unsafe operating conditions.** Your friendly Dealer will assist you in selecting quality accessories and installing them correctly.

While selecting the accessories, make sure the accessories **should not obstruct lighting, steering, suspension level and ground clearance.** Please ensure that, if the tank cover is used, it is not getting en-trapped between fuel tank and fuel tank cap.

Additional electrical equipments is not acceptable as it will void the warranty terms of the vehicle.



EMISSION CONTROL

All the TVS vehicles are tested in the factory for optimum fuel efficiency and CO levels. If the vehicle needs any adjustments, please consult nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer.

While adequate care is exercised at the factory to ensure that the emissions are within the limits, it is essential for the owner to always maintain the motorcycle in good condition by getting it periodically checked and serviced by TVS Motor Company Authorised Main Dealer / Authorised Dealer so that the emission and fuel consumption levels are maintained as per norms.

Crankcase emission control system

The engine of new TVS Apache RTR 200 4V is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and the fuel system.

Evaporative Emission Control System

The TVS Apache RTR 200 4V is equipped with an evaporative emission control system which consists of a canister and associated piping. This system prevents the escape of fuel vapors from the fuel tank.



Warning

If there is any abnormal jerk, startability issue felt in the vehicle or noise due to sudden escape of gas during opening of fuel tank cap, immediately report to the TVS Motor Company Authorised Main Dealer / Authorised Dealer.



Note


Your vehicle is tested and certified for emission which meets BS VI emission norms and is valid for initial 12 months from the date of purchase. Get your vehicle certified by the Government authorised emission testing station after initial 12 months of usage. And ensure to get the vehicle certified on expiry of the certificate obtained.

VEHICLE IDENTIFICATION NUMBER

The frame and engine serial numbers are the only means of identifying your vehicle from others of the same model and type. They are also required to assist your Dealer for ordering parts or referring to special information.



Frame serial number is engraved on the right side of the steering head tube as shown.

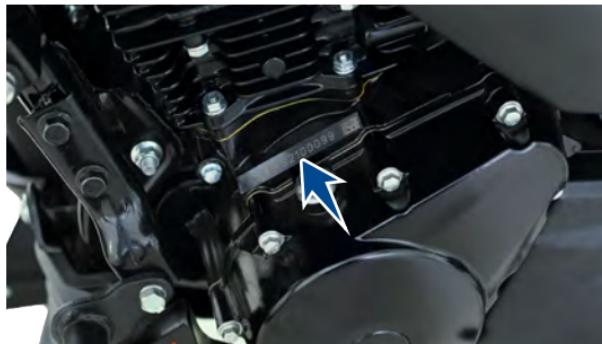

Engine serial number is engraved on the left side crankcase assembly near the cylinder block as shown.



LOCATION OF PARTS - VEHICLE LEFT SIDE

1. Rear wheel axle
2. Pillion foot rest L
3. Side stand
4. Center stand
5. Rider foot rest L
6. Gear shift lever
7. Cover frame L
8. Front wheel axle

LOCATION OF PARTS - VEHICLE RIGHT SIDE

1. Disc plate front
2. Toner ring front
3. Front wheel axle nut
4. Wheel speed sensor front
5. Caliper assembly front
6. Location of spark plug
7. Gauge oil level
8. Rear brake pedal
9. Rider foot rest R
10. Pillion foot rest R
11. Disc plate rear
12. Muffler assembly
13. Cover frame R
14. Location of ram air duct



LOCATION OF PARTS - VEHICLE FRONT & REAR**FRONT**

1. Turn signal lamp front L
2. Projector Headlamp LED
3. DRL / FPL (LH)
4. Oil cooler
5. Crash guard
6. DRL / FPL (RH)
7. Turn signal lamp front R

REAR

1. Pillion handle
2. Turn signal lamp rear R
3. Reflex reflector
4. Number plate lamp
5. Turn signal lamp rear L
6. Seat lock
7. Tail lamp assembly

License plates are mandatory accessory will be charged extra

CONTROL KEY

Your TVS Apache RTR 200 4V comes with a pair of identical control keys. These keys are to operate ignition cum steering lock, fuel tank cap and seat lock.

IGNITION CUM STEERING LOCK

The ignition cum steering lock enables and disables the electrical circuit and steering lock. The three positions of the switch are described below.

1. 'OFF' position

All electrical circuits are deactivated. The key can be removed from the lock.

2. 'ON' position

All electrical circuits are activated. The instrument cluster and warning lights performs self-diagnostic cycle. Engine can be started. Control key cannot be taken out from the lock.

Note

When the ignition is turned 'ON' with the engine kill switch 'ON', priming noise of pump may be heard which is absolutely normal.

Frequent switch 'OFF & ON' of ignition to be avoided. After ignition key reset, there may be a delay in start of vehicle for couple of seconds.



3. 'LOCK' position

TVS Apache RTR 200 4V's steering can be locked in both 'left' and 'right' directions. To lock the steering, turn the handlebar all the way to the 'left' or 'right' direction. Push the key 'IN' and turn it to the 'LOCK' position and take out. All the electrical circuits are turned and take out.

Insert the control key into the lock and push the key 'IN' and turn it to 'OFF' or 'ON' position to unlock the steering.

Warning

Never attempt to move the vehicle when the steering is locked, you may lose balance.





Caution

Before turning the ignition key to 'ON' position, ensure the availability of adequate fuel in the tank **to avoid dry run of fuel pump**. Fuel level always to be maintained above single bar. **Never run the fuel pump dry to avoid failure of fuel pump.**

Leaving the ignition cum steering lock in 'ON' position for a prolonged time will drain the battery when the vehicle is not in use. Switch 'OFF' and take the key out when the vehicle is not in use.

Note

Connected instrument cluster's background illumination, daytime running lamp (DRL) / front position lamp (FPL), tail lamp and number plate lamp glow automatically once the ignition is turned 'ON' without activating any other switch.

When the ignition switch is turned 'ON', a message 'GEAR UP' followed by a Race flag, Welcome message, Ride mode name and Average speed details will be displayed on the connected instrument cluster's display. Wait till the 'AVG. SPEED' details appears on the display.

Always lock the steering while parking for safety.

HANDLE BAR LEFT SIDE

1. Info switch

Info switch 'i' is used to cancel a incoming call, hopping widgets to clear a notification on cluster display, to start / stop the 'LAP' in the lap timer mode, to accept / reject the nearest fuel location suggestion.

2. Horn switch

Press the switch (▶) to blow horn. It is used to attract the attention of other road users in case of danger.

3. Turn signal lamp switch

Slide the turn signal lamp switch to left '⬅' or right side '➡' to operate the respective turn signal lamps (LH/RH). Press the switch to turn 'OFF'.



Warning

Failure to switch the turn signal lamp 'ON' or 'OFF' at the right time may lead to an accident.

4. Adjustable clutch lever

Use the clutch lever to disengage the drive to the rear wheel while shifting the gears. Squeezing the lever towards grip disengages the drive.

5. Pass-by switch

Press the switch to flash the head lamp high beam. It is used to give signal to the vehicles coming from the opposite direction while overtaking other vehicles during day.

The pass-by works only when the head lamp is glowing in low beam. If the switch is pressed while the head lamp is switched 'ON' and glowing in high beam, there will be no change in beam of the head lamp.

Note

Pass by system will not work if the head lamp is glowing in 'High' beam.

Clutch lever position can be set to your convenience. Refer page no. 72 for details.

6. Beam control switch

The head lamp beam (high/low) can be controlled by pressing the beam control switch.

Press the switch towards '  ' to turn-on the head lamp high beam or press the switch towards '  ' to turn-on the head lamp low beam.

Warning

Use appropriate head lamp beam 'high / low' as per the traffic and road conditions for your safety and to avoid inconvenience to other riders.

Note

The headlamp glows in low beam when the head lamp switch is turned 'ON'. Only after the engine is started the head lamp high beam will work provided if the beam control switch is in high beam.



HANDLE BAR RIGHT SIDE**1. Head lamp switch**

Head lamp switch has two positions. Working of switch at these positions are as followed:

OFF: The head lamp will be turned 'OFF' but other lamps like DRL, speedometer back illumination, tail lamp and number plate lamp glows when the switch is positioned at '●' position with ignition 'ON'.

ON: The head lamp low beam glows along with all other lamps when the switch is positioned at '●' position with the ignition 'ON'. The headlamp high beam can be obtained only after starting the engine. The DRL will act as a FPL on switching 'ON' the head lamp switch.

 **Note**

The DRL will act as a FPL once the head lamp is turned 'ON'.

2. Electric starter switch

Ensure the transmission is in neutral or else press the clutch lever and side stand is retracted before engaging the electric starter switch '⚡'.

3. Throttle grip

It controls the fuel-air mixture supplied to the engine, which regulates the engine speed. Rotate the throttle grip in counter-clockwise from its idle position to increase the engine speed and vice-versa to reduce.

 **Note**

Ensure to turn 'ON' the engine cut-off switch before starting the vehicle. Release the electric starter switch immediately after pressing.

3. Adjustable front brake lever

It controls a hydraulic circuit (ABS) that operates the front brake system. The front brake is applied by pressing the front brake lever gently towards the grip. The brake lamp glows on application of front brake.

4. Engine cut off switch

It is used to switch off the engine but to keep other DC system active. If the switch is positioned at 'X', the ignition circuit will be disabled, preventing the engine from being restarted.

To restart the engine, return the switch to the 'O' position.

5. Mode switch

Press the mode switch to switch between 'Urban', 'Sport' and 'Rain' modes and for other features refer page no. 35 for further details.

Note

When the ignition switch is turned 'ON' with the engine kill switch 'ON' condition, priming noise of fuel pump may be heard which is absolutely normal.

Frequent switch 'OFF' & 'ON' of ignition to be avoided to prevent unnecessary run of fuel pump.

Note


Front brake lever can be set to your convenience. Refer page no. 72 for details.



GEAR SHIFT LEVER

TVS Apache RTR 200 4V is equipped with a 5 speed constant mesh transmission. Neutral (N) position of the transmission is indicated by the warning light on the speedometer.

To shift the transmission from neutral to first gear, push the gear shift lever down.

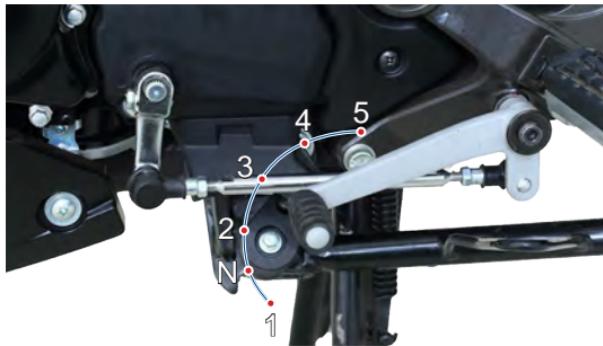

Caution

Never shift gears without disengaging the clutch and releasing the throttle. Failure to comply this will lead to rough shift or jerk while shifting the gears. Remember to return to neutral position before restarting the engine.

To change it to the second gear, lift the lever up. Lifting the lever up repeatedly engages all the gears in succession up to the fifth gear.

Neutral position (N) will it be indicated in RED as a warning, or the warning light only give indication to customer when to up shift or down shift gears.

Note

Gear shift lever position can be set to your convenience. Contact your TVS Motor Company Authorised Main Dealer/Authorised Dealer for setting the gear shift lever position.

REAR BRAKE PEDAL

The rear brake pedal operates a hydraulic circuit (ABS circuit incase of Dual channel ABS) that operates the rear brake system and it is located adjacent to the right side foot rest. To control the speed of your vehicle close the throttle completely and gradually press the brake pedal downwards.



Note

Rear brake pedal position can be set to your convenience. Contact your TVS Motor Company Authorised Main Dealer / Authorised Dealer for setting the brake pedal position.



Caution

Independent use of rear or front brake reduces the overall braking efficiency. In extreme conditions braking with only rear or front brake may lock the wheel which would result in skidding or toppling of vehicle.

Braking performance is affected adversely with wet surfaces, loose surfaces and overheating of brake system due to unnecessary continuous application of brakes. For safety, exercise extreme caution while braking and also at turning. Do not accelerate while turning.



CONNECTED TFT INSTRUMENT CLUSTER

Your TVS Apache RTR 200 4V is provided with a fully digital 5" TFT instrument cluster with lots of features and various modes.

The connected instrument cluster also has a mobile app for 'Smart Phones', navigation assist and voice assist etc. additionally along with other features.

Instrument cluster will be activated once the ignition lock is turned 'ON'.

All segments and tell-tale indicators glow for 2 seconds on activation of instrument cluster for checking and ensuring the proper working of segments and indicators.



⚠ Warning

Risk of accident through the use of integrated information systems and communication devices during the journey.

Operate these systems or devices only if the traffic situation allows. If necessary, stop and operate the system or devices at a standstill.

Warning and indicator lights

- A. Photo sensor cum shift light indicator
- B. Turn signal indicator RH
- C. EMS malfunction indicator
- D. High beam indicator
- E. Gear shift light indicator
- F. Traction control indicator
- G. Low fuel indicator
- H. ABS malfunction indicator
- I. Turn signal indicator LH

Symbol	Lights	Meaning
	A. Photometric sensor	Adjusts the TFT brightness and tell tale indicators brightness automatically as per day and night conditions.
	B. Turn signal indicator RH	Flashes when the right side turn signal indication is activated
	C. EMS Malfunction indicator	Glows when any problem is detected in the engine management system causing vehicle to exceed on-board diagnostic emission threshold.*
	D. High beam indicator	Glows when the head lamp high beam is activated
	E. Gear shift light indicator	The gear shift indicator blinks to alert the rider when it's time to upshift or downshift while riding the vehicle.
	F. Traction control indicator	Glows when there is a traction control fault or disabled by rider blinks when initializing and when active
	G. Low fuel warning indicator	Glows when the fuel level in the tank reaches to minimum safe level or any malfunction in the fuel level sensor*
	H. ABS indicator	Flashes when the ABS self-diagnostic not completed / not yet initiated - Ride the vehicle few kms. Glows continuously when the ABS has an error or malfunction* Goes OFF after few kms run - ABS is active and ready to use
	I. Turn signal indicator LH	Flashes when the left side turn signal indication is activated

* Contact TVS Motor Company Authorised Main Dealer / Authorised Dealer.



TFT multifunction display



- 1) Ride mode
- 2) Engine rpm indicator
- 3) Fuel level indicator
- 4) Speedometer
- 5) Engine temperature indicator
- 6) Gear position indicator / Gear shift indicator
- 7) Service reminder
- 8) Clock

1) Ride mode

TVS Apache RTR 200 4V has three different ride modes, select the desired ride modes by pressing the mode switch on the right hand switch assembly (refer page no. 28).

The modes are explained in the following pages in the below sequence.


- 1a. URBAN
- 1b. SPORT
- 1c. RAIN

The preferences of mode usage are: Sport mode especially on race tracks and dry roads, Urban mode especially in city on all types of roads and Rain mode especially on wet roads.

Note

At the end of self-check active ride mode information will be displayed on the TFT display.

Mode changes are effected only when the throttle is closed after a mode change request. To guide you to do the same, a message 'CLOSE THROTTLE' will be popped-up in the notification area of the cluster.

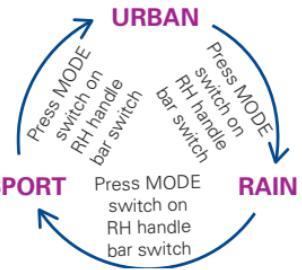

Caution

In case any fault is detected with respect to the ride mode change in the EMS or ABS system, then your motorcycle will operate only in the 'Urban' mode after ignition key reset.

Note

If conditions for mode change are not successful 'MODE CHANGE ERROR' appears on display of the cluster.



1a. URBAN mode

Urban mode has been associated with two different themes for day and night modes.

In 'Urban' mode the engine and ABS braking system is modified to suit city on all types of roads and riding condition. The max speed is limited to 103 Km/h and the ABS braking is optimized.

Night theme



Day theme



1b. Rain mode

The 'Rain' mode also has been associated with two different themes for day and night modes.

In 'Rain' mode the engine and ABS braking system is modified to suit wet or rainy condition. The max speed is limited to 103 Km/h and the ABS intervention is earlier and safe braking will be felt.

Night theme



Day theme



1c. Sport mode

The 'Sport' mode has been associated with two different themes for day and night modes.

In 'Sport' mode the engine and ABS braking system is modified to suit highway riding condition. The vehicle's maximum speed in sport mode is 114 km/h and the ABS braking will be aggressive with late ABS intervention however, basic safety is ensured.

Night theme



Day theme



2) Engine rpm indicator

- Digital band (2) indicates the engine rpm in multiples of 1000 rpm.
- Digital bands are indicated in blue and red band based on the engine coolant temperature.



3) Fuel level indicator

- Digital bars (3) indicates the approximate quantity of fuel available in the tank.



- There are eight bars to indicate the quantity fuel.
- All the eight bars will be displayed when the fuel level in the tank reaches approximately 10.4 liters.



- When the fuel level reduces to 6.5 liters (approx.) the indicator displays only five bars.



- If the fuel level is less than 3.5 liters, the low fuel indicator '  ' starts glowing.
- If the fuel level reaches to minimum safe level ie. lesser than 1.8 liter approximately, fuel level indicator displays a single bar.
- Fill fuel immediately Refer page no. 28 for procedure.



Note

Please ensure that the fuel bar indication in cluster is greater than 1 bar always. It is unsafe to ride with 1 bar or less.

Incase of any error in input system, all the bars of fuel level indicator flashes and low fuel warning indicator turns ON. Contact nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer incase any of these problems are noticed.

Warning

If the vehicle runs with very less fuel it will result in improper engine operation or shutdown due to lack of fuel which may result in accident.

Caution

Do not run the fuel tank dry to avoid failure of fuel pump and other consequential damages if any.

4) Speedometer



- Displays the road speed in km/h (4) (in India).

5) Coolant temperature indicator

- Digital bars (a1.7) indicates the engine temperature.



- The engine temperature indicator displays more than six bars if there is any problem in the cooling system.



- In case of any error in input system, all the bars engine temp indicator flashes.
- Take the vehicle to TVS Motor Company Authorised Main Dealer / Authorised Dealer for further diagnosis.

6a) Gear position indicator

- Gear position indicator (6a) indicates vehicle's present gear position and neutral condition. Gear position indication displays "--" if there is any problem in the system. Take the vehicle to TVS Motor Company Authorised Main Dealer / Authorised Dealer .




6b) Gear shift indicator

- The Gear Shift Indicator notifies the rider to shift up or down based on the engine's RPM and the selected ride mode. An upward arrow signals a shift to a higher gear, while a downward arrow indicates a shift to a lower gear.



7) Service reminder

- If the service is due, whenever the ignition is turned 'ON', a icon with spanner symbol '🔧' blinks for 10 seconds after the self-check cycle of connected instrument cluster and continue to glow till the vehicle is serviced and the reminder is reset. Get the vehicle serviced at TVS Motor Company Authorised Main Dealer / Authorised Dealer.

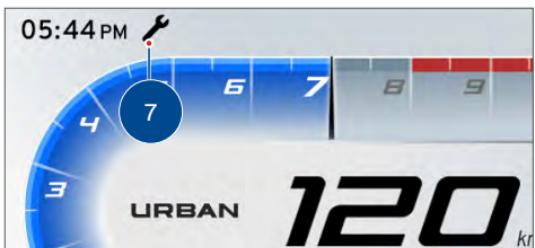

Note

Service reminder works only based on the distance (km) covered by the vehicle. This is only a reminder indicator. Customers are advised to keep track and follow the service schedule.

Note

Service reminder and battery low indicator pop-ups can be cancelled by pressing the 'Info switch (**i**)' on the handle bar.

8) Clock

- Indicates the time in 12 hour format (AM or PM).

Note

The digital clock time cannot be re-set manually and it gets set automatically on pairing the speedometer with your mobile. Refer page no. 50 for pairing procedure.

Incase of battery disconnection or fuse failure the clock displays 1.00 AM by default.




'Mode' and 'Info' switches

'Mode switch' is located at the right side of the handle bar. 'Mode switch' is used to access the connected instrument cluster's display to various options used for widget hopping like Trip A, Trip B, top speed, Average speed, Average mileage, Lap timer etc.



'Info switch' is located at the left side of the handle bar. 'Info switch' is used to erase the stored value in cluster / to accept or reject the incoming call / voice assist invoking, also ongoing call can be ended. Low fuel auto navigation can be accepted or rejected etc.

Mode and Info switch sequence:

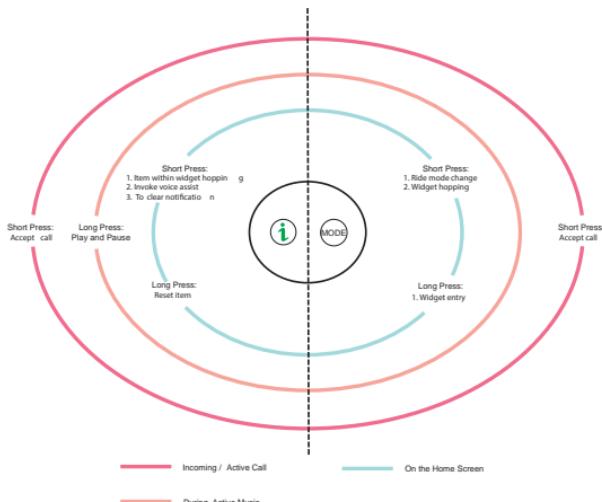

Custom Widgets

In custom widgets (viz. ODO, Avg. Speed, Trip distance A&B, Lap timer, top speed, traction off, etc.) can be used to display live feeds in the home screen of your connected TFT instrument cluster.



In the 'Custom Widgets' section, you can choose from four available widget layouts, each of which can be personalized to suit your needs. You can add different widgets to each layout, and every widget column is designed to display a specific set of information. Once customized, you can set any of these layouts as your default home screen view.

From the below-mentioned nine specified widgets list, you can select any four for displaying on the custom widget screen of main window:

Widget 1	Widget 2	Widget 3	Widget 4
Traction ON/OFF	0 - 60 km/h	DTE	ODO meter
Auto brightness ON/OFF	Top speed	Avg. Speed	Trip Distance A
	Lap Timer	Avg. Mileage	Trip Distance B
		Avg. Mileage A	
		Avg. Mileage B	

Odometer

 
Odometer registers the total distance covered by the vehicle in kilometer. The digit after the dot mark denotes one tenth of a kilometer. Set the meter in 'ODO' mode to know the odometer reading.

ODO
29 km

Trip distance

Trip distance indicates the trip distance travelled in kilometer. The digit after the dot mark denotes the one tenth of a kilometer.

Provision to measure two different distance 'TRIP DISTANCE A' or 'TRIP DISTANCE B' is provided for the users to use as per their convenience.



To reset any of the trip distance, while ensuring the widget is in 'TRIP DISTANCE A' or 'TRIP DISTANCE B', press and hold the 'Info switch ()' for a few seconds.

Trip F

 
'TRIP F' function shows the distance travelled after the low fuel indication symbol () starts blinking and fuel gauge shows no bar or the low fuel indication glows continuously with the fuel gauge showing no segment in the display.

At this condition, the display automatically switches to the 'TRIP F' indicator after 0.5 km and 'TRIP F' meter starts counting from 0 km.

If the fuel level continues to remain in minimum safe level, the reading is saved even after the ignition is turned 'OFF'.


The count stops and clears automatically after certain distance covered by the vehicle after the fuel level rises above minimum safe level.

'TRIP F' meter cannot be activated or deactivated manually. It will be enabled automatically until fuel level rises above minimum safe level (2.5 L).




DTE

 Indicates the approximate distance that can be covered by the vehicle with the available fuel in the tank.



Average Speed

 
Displays the average speed of the vehicle based on total distance covered since last reset / by the total time when the engine rpm is greater than 500 rpm.



- To reset the 'AVG. SPEED', keep the widget is in 'AVG. SPEED', press and hold the 'Info switch (i)' for a few seconds.

Average Mileage

 Indicates the average mileage (fuel economy) of the vehicle.



Average Mileage A & B

Indicates the average mileage (fuel economy) of the vehicle in the particular Trip distance A & B.

 


- This value gets updated only after the vehicle speed increases more 10 km/h for the first time after ignition 'ON' and continue to update till the engine is switched 'OFF'.
- To reset any of the average mileage, keep the widget is in 'AVG. MILEAGE', 'AVG. MILEAGE A' or 'AVG. MILEAGE B' press and hold the 'Info switch (i)' for a few seconds.

0 - 60 km/h

This function lets you to measure the time to reach 0 to 60 km/h speed from rest and to view the best time taken so far.

If the current time is lesser than the stored value, the new value will get updated automatically.



Note

Overall best time achieved so far and the last recorded time to reach 60 km/h speed will be displayed when the ignition is turned 'ON' and the cluster is set in '0 - 60 km/h'.



Note

For recording a new time, the last recorded shortest time need to be reset. On resetting time, the value will be reset to 0.0 (but the default value is 9.9 secs.). Overall best time recorded cannot be reset manually. It will be replaced automatically by next overall best time.

If the 0-60km/h exceeds more than the value of 9.9s, it shall be displayed as INVALID (i.e., “-.”(sec.ms)) and stops calculating.

 
In the same ignition cycle, if the vehicle crosses 2kmph/2mph again the timer starts again from 0.0 s (sec.ms) and starts calculating. Once the speed reached 60 km/h, then the time will stop at the exact point.

- To reset the last achieved shortest time, keep the display in '0 - 60 km/h', press and hold the 'Info switch ()' for a few seconds.

Top Speed

Displays the top speed achieved by any user so far.

- If the vehicle's current speed is greater than the recorded speed, the new value will get updated automatically.



- To reset the 'Top speed', keep the widget in 'Top speed', press and hold the 'Info switch ()' for a few seconds.

Lap timer

Lap timer indicates the time taken to complete a particular lap. Lap timer can be selected in the widget to use the feature. Lap distance will automatically populate in another widget when lap timer is selected. On entering the lap timer mode, press the 'Info switch ()' on the handle bar to start a lap timer. The timer starts counting current lap's time and displays in active lap timer as shown (before starting the lap timer, ensure that the timer is reset).



Press the 'Info switch' again to stop the current lap timer.

To start a lap timer again, after stopping it by pressing the 'Info switch',

- To reset the lap timer, keep the display in 'LAP TIMER' and wait till the cluster displays the lap timings. Now press and hold the 'Info switch ()' for a few seconds.

Note

Lap timer works only when the lap timer mode is active. Once the lap timer is stopped by pressing the 'Info switch', the timer cannot be started again until the timer is reset.

 
Traction control

Traction control can be turned 'ON' or 'OFF' using long press the 'Info switch ()' when traction control is selected. Refer page no. 72 for features details.



Auto brightness

Auto brightness can be turned 'ON' or 'OFF' using the 'Info switch ()' when auto brightness is selected.



When auto bright is ON the connected instrument TFT cluster's intensity adjusts automatically based on the ambient light sensor.

Bluetooth pairing mode '★'

Using the Bluetooth pairing mode the connected instrument cluster of 'TVS Apache RTR 200 4V' can be connected to your Android™ smart phones and iPhone® via Bluetooth® through a TVS CONNECT app which can be download from Google Play and the Apple store®.



TVS CONNECT

Note

Maximum of Android phones can be auto-paired with the instrument cluster.

Only can be auto-paired with a single instrument cluster at a time. If the user need to connect multiple iPhones with the single instrument cluster, the previous connected iPhone has to be forgotten by clicking, 'Forget This Device' from Bluetooth settings in the iPhone.

If the vehicle battery is reset or fuse is blown, then too 'Forget This Device' from Bluetooth settings in the iPhone has to be done.

First time Bluetooth paring:

To pair your Android smart phone or iPhone with your TVS Apache RTR 200 4V motorcycle's connected instrument cluster, via Bluetooth, for the first time, follow the procedure as described below:

1. Switch 'ON' the vehicle.
2. Speedometer can be in any mode for first time pairing.
3. Open the app and press the '**CONNECT**' tab, ensure the smart phone is near to the vehicle.
4. The app searches for all Bluetooth devices near by and displays the list of devices available.
5. The connected instrument cluster's Bluetooth name is prefixed by TVS and followed by alpha-numeric digits. Ex : 'TVSXXXXXX'. This Bluetooth name can be found in the speedometer dial after turning the ignition 'ON'.
6. Now, select the 'TVSXXXXXX' in the app to initiate the pairing process.

7. On pairing, the TFT display of connected instrument cluster displays a message 'Bluetooth device paired' along with the profile name set in TVS CONNECT app for 2 seconds, after this the initial weather data is given as a visual and auditory message for 5sec.
8. In Addition to this icons, phone's battery level icon, mobile signal strength level, missed call icon, unread message icon, a few unread social media icons will be present on the bottom side.
9. For initiating first time pairing, logout from the app, login again using your login credentials and then press 'CONNECT'.

Note

During the course of pairing process, there is any occurrence of error, the connected instrument cluster should be turned 'OFF' and 'ON', and the application also need to be restarted.

Please remember that, all the smart phones are not compatible for pairing with the TVS Apache RTR 200 4V motorcycle's connected instrument cluster.

Note

During the search of Bluetooth devices in app, if the vehicle's connected instrument cluster Bluetooth device ID is not visible, try for one or two more iterations.

If the phone enters battery saver mode, auto-pairing might not happen. It takes maximum of five minutes for auto-pairing and it can happen in vehicle running below 10 km/h speed or engine at idling or engine off condition.

Auto-pairing happens only if the application is locked in the RAM in multitasking screen of the phone with manufacturer's customised OS (Ex. : MI, Vivo etc.).




In case of Android phones with Android OS version above 8.0 for App to work seamlessly, any battery optimisation setting to be removed in the TVS Connect app and GPS shall be allowed to run in background in high accuracy mode.

Even if your phone's Bluetooth is already paired to other gadgets like smart watch, health band or helmet, the auto-pairing works with your TVS Apache RTR 200 4V motorcycle's connected instrument cluster.



Steps to “Forget This Device” in iPhone:

If the user needs to connect multiple iPhones with the single instrument cluster, the previous iPhone has to be forgotten using ‘Forget This Device’ from Bluetooth settings in the following manner:

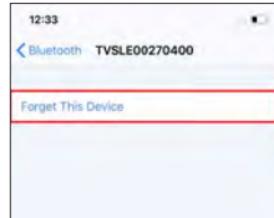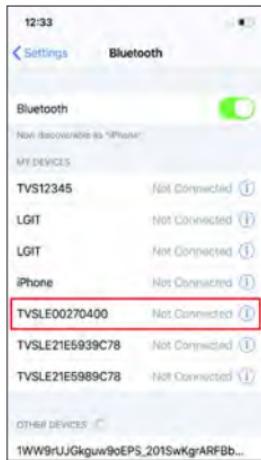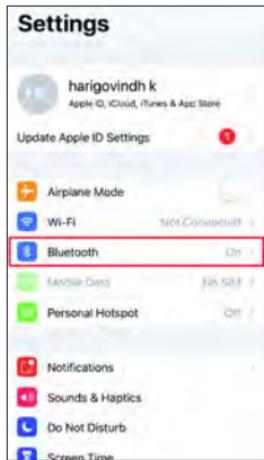

1. In the previous connected iPhone, open the SETTINGS -> BLUETOOTH.
2. Select the instrument cluster, which was connected previously.
3. Click on the ‘Forget this device’.

Note



Only one iPhone can be auto-paired with a single instrument cluster at a time. If the user need to connect multiple iPhones with the single instrument cluster, the previous connected iPhone has to be forgotten by clicking, ‘Forget This Device’ from Bluetooth settings in the iPhone.

If the vehicle battery is reset or fuse is blown, then too ‘Forget This Device’ from Bluetooth settings in the iPhone has to be done.

Steps to 'unpair' in android Phone:

If the user needs to connect multiple android Phones with the single instrument cluster, the previous android Phone has to be forgotten using 'unpair' from Bluetooth settings in the following manner:

1. In the previous connected android Phone, open the SETTINGS -> BLUETOOTH.

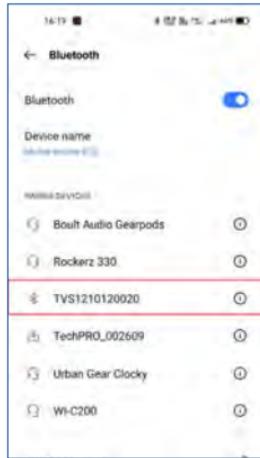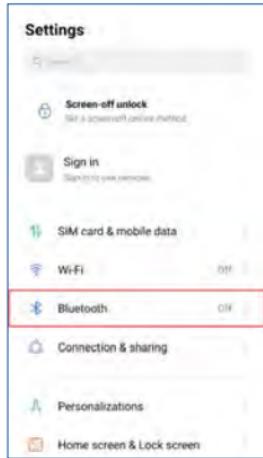

2. Select the instrument cluster, which was connected previously.
3. Click on the 'Unpair'.



Once the cluster is connected with the smart phone, the cluster displays the signal strength of the network provider and the battery level of the smart phone. Number of unread messages and number of missed calls.



Incoming call alert display

The connected instrument cluster will display the incoming calls alerts from the smart phone via Bluetooth. Ex. 'AKASH', will be displayed if the contact is stored in the smart phone otherwise number will be displayed. Ex. '9897712345' **(in IOS only "Incoming call" will be displayed).**



Note

Incase multiple SIM cards are used in smart phone, by default, SIM 1's network provider's signal strength is shown in the display of connected instrument cluster.

 
Signal strength displayed in connected instrument cluster might vary from the display in smart phone as the former is referred from telephonic standards.

Missed call alert display

The connected instrument cluster displays the missed call notification from the smart phone via Bluetooth on top right of the connected instrument cluster.

Navigation window

Once the navigation assist is turned 'ON', the display of your TVS Apache RTR 200 4V motorcycle's connected instrument cluster enters into navigation window and displays the turn by turn navigation instruction with a simple and elegant graphical representation.



Note

Incoming calls and missed calls can be cancelled by pressing the 'Info switch (i)' on the handle bar (in IOS, pressing the switch only clears the notification but the call will not be cancelled in the phone).

Low fuel alert

When the fuel level in the vehicle reaches below reserve level, the app sends a low fuel alert to the connected instrument cluster to give notification of the fuel level. The same alert will be also shown in the app.

LOW FUEL

Low fuel assist \Nearest location alert

When the fuel level is low, the app sends a fuel assist message to the instrument cluster. You can either accept or reject the assist request.

If you accept the request (by pressing the 'Info switch' on handle bar about 3 secs.) the app will automatically provide navigation to the nearest fuel pump.



**Navigate to the nearest
fuel station**



The customer also can choose to reject the request (by pressing the 'Info switch' on the handle bar for about 1 sec.). In that case, the previous display will remain in the cluster.

Side stand alert

The side stand alert indicator turns 'ON' to alert you whenever the vehicle's side stand is deployed.

SIDE STAND DOWN

 **Note**

In geared condition, if the side stand is deployed the vehicle will not start. In neutral condition, if the side stand is deployed the vehicle will start but as soon as the gear is engaged the vehicle will switch off.

If there is error in the side stand sensor the indication will blink and the vehicle will not start. In such a condition, please visit the nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer.

Low Battery alert

An low battery alert displays when the battery charge is too low.

Following message also will be popped-up in instrument cluster the area when the low battery symbol is turned 'ON'.

LOW BATTERY

Get the battery checked at TVS Motor Company Authorised Main Dealer / Authorised Dealer.



TVS CONNECT APP

Dedicated smart phone app is available in the Google Play and the Apple store for your TVS Apache RTR 200 4V and it can be installed in your Android smart phones and iPhones. To access the features of your TVS Apache RTR 200 4V's connected instrument cluster like:

1. Incoming call alerts in connected instrument cluster.
2. Missed call alerts in connected instrument cluster.
3. Battery status of your smartphone in connected instrument cluster.
4. To send navigational assist instructions inputs to the connected instrument cluster from your smartphone.
5. To save the last traveled route.
6. To know the signal strength of your mobile network in connected instrument cluster.
7. To generate and store Ride reports.

8. To sync the connected instrument cluster clock with smartphone clock.
9. To receive personalized message on special occasions (once's set on the app) on the connected instrument cluster.

This dedicated mobile app of your TVS Apache RTR 200 4V can be downloaded from the Google Play and the Apple store by searching the key word 'TVS CONNECT' else by scanning the below QR code.

*Android**iOS*

How to login

On opening the **TVS CONNECT** App the following introductory screen will be displayed.



Click on the 'Login' tab provided at the top of the screen to begin a login process.

On entering the login screen you will be prompted for your registered mobile number entry. Enter the mobile number and press 'Continue' tab to proceed further.


Now, an OTP verification screen will get open. Key-in or copy & paste the OTP received from TVSM to login.





Onboarding TVS Vehicle

You can onboard your TVS vehicle into the App by following the procedure given below:


- Scroll down the initial screen and click on the 'Onboard TVS Vehicle or Accessory' tab and select the 'Onboard a TVS Vehicle' option.

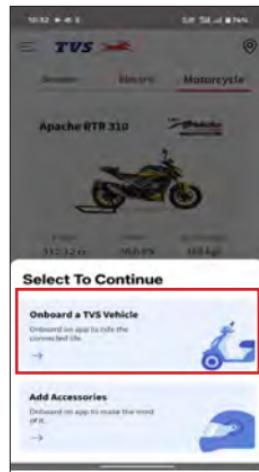


- You need to authorize TVS Motor Company Ltd. or its partners to contact you via SMS, Email, WhatsApp and any other modes of communication for marketing purposes. By clicking continue.
- You need to agree to terms of service and privacy policy and click agree and continue.

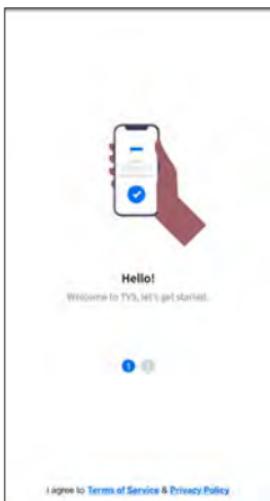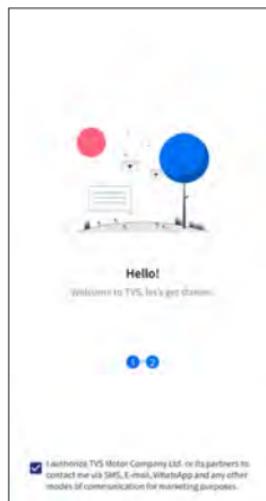

- Now Select the 'Add Vehicle by VIN' tab of the screen.
- Now, Another screen gets open with the VIN number and Invoice date or Engine/Motor number entering options.

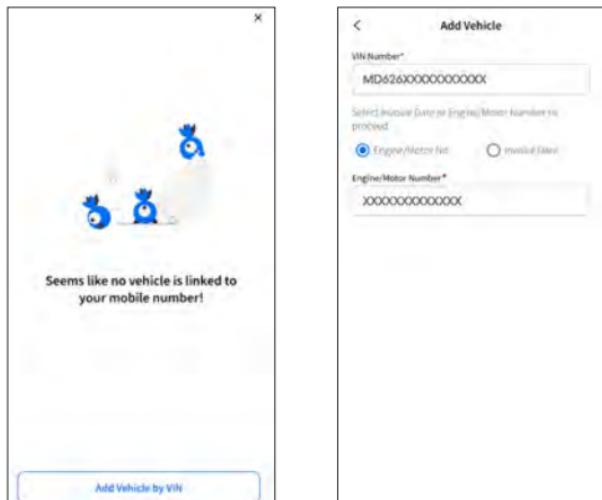


- An logging in successfully the default vehicle screen opens as shown below with various informations.

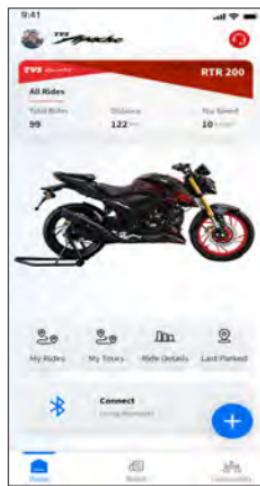

- Now press 'CONNECT' tab. Ensure the smart phone is nearer to your vehicle.



- Ensure that Bluetooth is turned ON. If it is OFF, the app will prompt you to enable it. Once Bluetooth is enabled, the device name will appear with the prefix “TVS” followed by a unique alphanumeric code. For example: “TVSEKA002”.

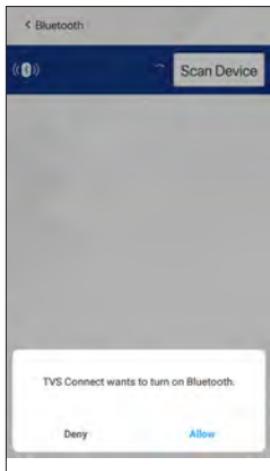

- Select the device Bluetooth name and pair the device with your vehicle.
- On successful pairing, the initial screen with the ride details will be shown as below:



 **Note**

During the course of pairing process, if there is any occurrence of error, the connected instrument cluster should be turned 'OFF' and 'ON', and the application also need to be restarted.

Please remember that, all the smart phones are not compatible for pairing with the TVS Apache RTR 200 4V's connected TFT instrument cluster.

During the search of Bluetooth devices in app, if the vehicle connected instrument cluster's Bluetooth device ID is not visible, try for one or two more iterations.

Auto pairing

Once the first time pairing is done between vehicle's connected TFT instrument cluster and your smart phone, the phone will automatically pair with the vehicle when the following conditions are met:

- Auto connect will happen after pairing only if app is opened in the mobile and connect button is pressed on the App.
- If the ride is on going and the rider does ignition lock 'OFF' and then ignition lock 'ON', then app gets auto connected and ride will continue on App until user ends the ride.
- Once the rider ends the ride, to start a new ride he has to press connect button in the app.

**Caution**

In certain Android phones auto pair functionality does not work after first time pairing due to compatibility with various OS versions.

 **Note**

If the phone enters battery saver mode, auto-pairing might not happen. It takes maximum of five minutes for auto-pairing and it can happen in vehicle running or engine at idling or engine off condition.

Auto-pairing happens only if the application is locked in the RAM in multitasking screen of the phone with manufacturer's customized OS (Ex : MI, Vivo etc.)

In case of Android phones with Android OS version above 8.0, for App to work seamlessly, any battery optimization setting to be removed in the TVS Connect App and GPS shall be allowed to run in background in high accuracy mode.

Even if your phone's Bluetooth is already paired to other gadgets like smart watch, health band or helmet, the auto-pairing works with your TVS Apache RTR 200 4V's connected instrument cluster.

If the application unfortunately stops due to unforeseen circumstances, close and reopen the application and do the manual pairing for the first time, then auto pairing will happen subsequently.

 **Note**

In Android and IOS smart phones, if the Bluetooth is 'ON', and if the app is already paired with the cluster, when the user opens the app with the ignition turned 'ON', the app connects automatically with the cluster once the user takes his phone to near by the vehicle (if the auto connect setting of your smart phone is turned 'ON'). This feature can be disabled if required. Auto connect will only work with the last paired mobile phone.

If the application unfortunately stops due to unfrozen circumstances. Close and reopen the application and do the manual pairing for the first time, then auto-pairing will happen subsequently.

For first time pairing, logout from the app, login again with your login credential and press 'Connect' icon.

 **Warning**


TVS Motor Company Limited does not recommend usage of any type of Mobile Hand Held Devices, and applications / features whether installed or associated with the vehicle which deprives the rider's attention and focus while riding the Two Wheeler. The customers and riders are strictly advised to understand the applicable laws, road safety Rules and the local laws on usage of electronic devices while operating the vehicle. Usage of any Mobile or hand held devices, and / or applications / features while riding the vehicle is totally at customer's / rider's risk. The product and features have technical limitations and are for general overview only.



COOLING SYSTEM

TVS Apache RTR 200 4V is designed with an external oil cooler with stone guard arrangement for optimal engine cooling.

The oil cooler is mounted in front of the engine which improves the engine durability and provides better heat management without compromising the engine performance.

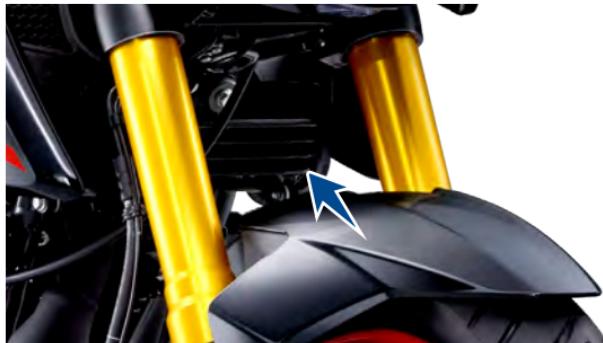

RAM AIR DUCT

TVS Apache RTR 200 4V is designed with a ram air duct on the right side of the fuel tank. This ram air duct throws air exactly above the spark plug while the vehicle is in move.

The air thrown above the spark plug cools the plug and maintains its temperature in optimum level. Which in-turn results in better heat management without any compromise on the engine performance and improves the engine's durability.



Caution

Care should be taken not to block the ram air duct air passage by cover or any other means. Else it will lead to over heating of engine or seizure.

DAY TIME RUNNING LAMP (DRL)

TVS Apache RTR 200 4V comes with a day time running LED lamp which glows automatically once the ignition key is turned 'ON'.

After starting the engine / switching 'ON' the head lamp, the DRL continue to glow with reduced intensity of illumination (becomes Front Position Lamps). Refer page no. 28 for the control switch position details.



PROJECTOR HEAD LAMP

TVS Apache RTR 200 4V comes with a projector head lamp which glows in 'low beam' after switching 'ON' the head lamp switch even if the engine is in 'OFF' condition and 'high beam' glows based on the beam control switch position and engine running condition.

The head lamp beam (high/low) can be controlled by pressing the beam control switch refer page no. 27.



FUEL TANK# CAP

Flush type fuel tank cap (1) is provided in TVS Apache RTR 200 4V. To open the fuel tank cap, lift the protection lid (2) and insert the control key into the lock. Turn the key in clockwise and lift the cap. Press the cap back to close. Rotate the key in anti-clockwise direction and take out. Close the lid.

To avoid accumulation of water in the fuel tank, a small drain hole and a pipe is provided in the fuel tank lid cavity so that the water entering through the lid is drained out through the hose.



⚠ Warning


Do not smoke while refueling. Do not use cell phones while refueling. Avoid spilling of fuel on the hot engine. Refill petrol in well ventilated area.

Switch off the engine while refueling as petrol is highly inflammable. After refilling close the cap properly.

- # The fuel tank is not a measuring instrument and the capacity of the fuel tank may slightly vary from the indicated capacity.

EVAPORATIVE EMISSION CONTROL SYSTEM

This vehicle is fitted with Evaporative Emission Control System (EVAP).

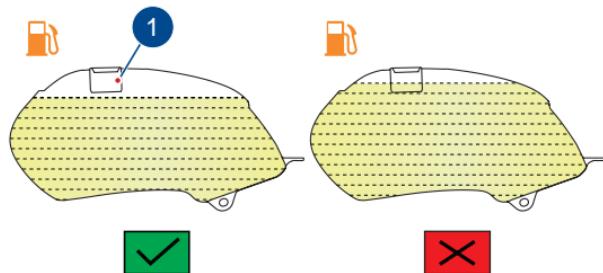

Caution

Never fill fuel beyond the fuel tank inlet (1). Filling above the inlet may result in improper breathing of fuel tank which leads to difficulty in starting as well as improper running of the vehicle.

Whenever refueling the bike fill only the recommended quantity of fuel (10 liter including reserve).

Do not clean the vehicle by laying down on floor, to avoid fuel entry into EVAP system.

If there is any abnormal jerk, startability issue are felt in the vehicle or noise due to sudden escape of gas during opening of fuel tank cap, immediately report to the TVS Motor Company Authorised Main Dealer / Authorised Dealer.




STANDS

TVS Apache RTR 200 4V is equipped with a centre (1) and side stand (2).

To place the vehicle on the centre stand, hold the handle bar left grip with left hand and pillion handle with right hand. Place your foot firmly on the centre stand extension (1a) and press with adequate effort. Ensure both the legs of centre stand are touching the ground before placing the vehicle on the stand.

Side stand can be operated by sitting on the vehicle with your left foot by pushing it away from the vehicle to its extreme end.

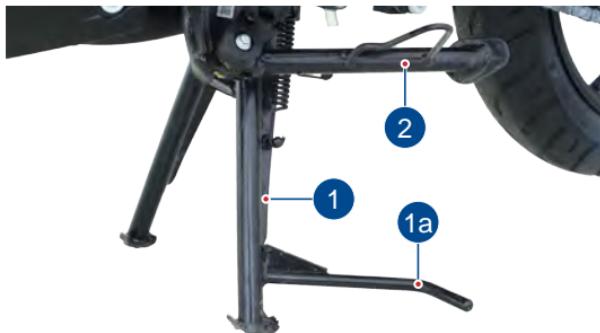

Warning

Park the motorcycle safely on a solid ground. On slopes, engage the first gear and park the vehicle in such a way that the front wheel faces uphill.

Always retract the side stand to its full up position before moving the vehicle. Else, the vehicle will get 'Switched OFF'.

Caution

Do not sit on the vehicle when it is parked on the side stand / centre stand, as your full weight would rest on the vehicle's only support.

SEAT

The seat lock is located between the rider and the passenger seat assembly.

Rear seat (passenger seat)

To remove the rear seat (1), insert the ignition key into the seat lock (2). Turn it clockwise, pull & release the front section of the seat first, followed by the rear section as shown in the figure. To install the rear seat, reverse the removal procedure.



Caution

Make sure that the seat is locked securely in position.

Utility box is located under the passenger seat to store some important items and it provides security to things placed inside.

Front seat (rider seat)

To remove the front seat (3), remove the rear seat (passenger seat) and take out the key from the lock. Take out the utility box by gently dislocating it from seat release cable (A).

Pull the seat release cable (A) to release seat lock. Keeping the seat release cable pulled, lift the seat from rear end & slide it backward to remove.

To install the front seat, reverse the removal procedure.



TOOL KIT AND FIRST AID KIT

To assist you in performing certain aspects of periodic maintenance and emergency repairs, a tool kit is supplied along with the vehicle. A first aid kit is also available along with the tool kit.

Both tool kit and first aid kit are located under the passenger seat. To access the tool kit / first aid kit, remove the passenger seat as explained in page no. 69.

Tool kit consists of one number each of the following.

- 1. Grip driver
- 2. Bit (+) (-)
- 3. 12 x 14 open end spanner
- 4. Tool bag



Warning

Do not remove the tool kit and first aid kit from the vehicle. Always ensure to keep them along with the vehicle. Ensure the first aid equipments are changed periodically based on the date of expiry.

Caution

It is recommended to use the tool kit in case of any emergency only. It is always advisable to take your vehicle to TVS Motor Company Authorised Main Dealer / Authorised Dealer.

COVER FRAME R



Removal

Cover frame R is to be removed to access the battery and rear disc brake master cylinder. Follow the procedure to open the cover frame:

1. Remove the seats as explained in page no. 69.
2. Remove the mounting screws fixed at the locations (1), (2) and (3).

Caution

Make sure that the cover frame is locked securely in position after installation.

3. Gently dislocate and take out the cover frame from the vehicle.

Re-install

1. Locate the lugs of the cover frame at the holes provided on the frame carefully while ensuring the availability of cushions.
2. Install and tighten the mounting screws (1), (2) and (3).
3. Reassemble the seat assembly.

ADJUSTMENTS

CLUTCH LEVER - ADJUSTMENT

TVS Apache RTR 200 4V comes with an adjustable clutch lever. There are three positions provided for you to adjust the lever to suit your palm size. The lever can be adjusted by adjusting the position adjuster (A) provided in the knob itself. 'Position-1' is the closest position of the lever to the handle bar grip and 'Position-3' is the farthest.


To adjust the lever position, push the lever forward and rotate the position adjuster to any of the three positions by aligning the 'arrow mark' on the lever to the number provided on the adjuster.



FRONT BRAKE LEVER - ADJUSTMENT

TVS Apache RTR 200 4V comes with an adjustable front brake lever. There are three positions provided for you to adjust the lever to suit your palm size. The lever can be adjusted by adjusting the position adjuster (B) provided in the knob itself. 'Position-1' is the closest of the lever to the handle bar grip and 'Position-3' is the farthest.

To adjust the lever position, push the lever forward and rotate the position adjuster to any of the three positions by aligning the 'arrow mark' on the lever to the number provided on the adjuster.

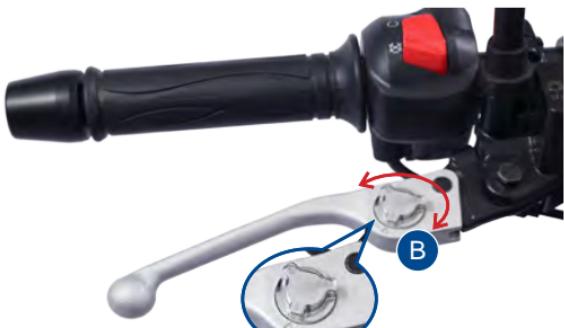

 **Caution**

Do not try doing any adjustment while riding as it may lead to fatal accident.

Do not use any tool or objects to turn the position adjuster. Do it by hand only.

 **Note**

While adjusting the lever position, ensure the proper aligning of position adjuster number with the arrow mark on the lever.

Check and ensure the proper free play of both clutch and front brake after adjusting the lever position.



PRE RIDE INSPECTION

Check the following items before riding

ITEM	WHAT TO CHECK FOR
Engine cum transmission oil	Availability of oil upto the level (page no. 91)
Fuel	Enough fuel for the planned distance of running
Tyres	Correct pressure (page no. 98) Adequate tread depth / No cracks or cuts.
Battery	Proper working of all lamps, horn and pass by switch. Low battery indication Battery charge (page no. 86)
Digital instrument cluster	Performing self check / Proper working of ABS warning lamp (page no. 31)
Malfunction indicator	Turned 'OFF' after starting the engine (page no. 32)
Steering	Smooth movement / No play or looseness
Throttle	Correct free play of cable / Smooth operation
Clutch	Correct free play of cable (page no. 92) / Smooth and progressive action
Brakes	Availability of brake fluid and proper working of brake (page no. 95)
Wheels	Free rotation
Drive chain	Slackness and lubrication of chain (page no. 102)


Caution

Do not switch 'ON' the ignition without minimum level fuel in tank. It will cause damage to the fuel pump.



STARTING THE ENGINE

As you turn the ignition switch to the 'ON' position, the instrument cluster and the warning lights will go through the self-diagnostic cycle. During this phase, make sure that all the warning lights on the cluster comes on.

The following conditions must be verified before starting the engine.

- ❑ The engine cut off switch is in 'O' position.
- ❑ Side stand is in retracted condition.
- ❑ The gear is in neutral.
- ❑ If gears are engaged, the clutch lever must be pulled.

Press the start button without applying the throttle. As soon as the engine starts, release the start button. The engine will not start if the throttle is opened full.



Caution

Do not keep the engine in idling rpm for long.

Do not open excessive throttle when the vehicle is parked. It leads to overheating of engine and damage to the internal components.

SETTING THE VEHICLE IN MOTION

1. Press the clutch lever and engage first gear by pressing the gearshift lever down.
2. Open the throttle slowly and simultaneously release the clutch lever gently and gradually. The vehicle starts moving forward.
3. As the vehicle picks up speed, shift to the next higher gear by closing the throttle, applying the clutch and lifting the gear shift lever up.
4. Release the clutch lever and open the throttle smoothly. Select the required gears in a similar manner.

Using the transmission

The transmission is provided to keep the engine to run smoothly in its normal operating speed range.

The gear ratios have been carefully chosen to meet the characteristics of the engine. The rider should always select the most suitable gear to achieve the necessary speed and pulling power smoothly.



Riding on hills/gradents

When climbing steep hills, the motorcycle may begin to slow down and show lack of power. At this point, the rider should shift to a lower gear so that the engine will again be operating in its normal power range. Shift gears rapidly to prevent the motorcycle from losing momentum.

When riding down a hill, the engine may be used as brake by shifting to a lower gear.

STOPPING AND PARKING

1. Close the throttle completely and apply both the brakes simultaneously.
2. Down shift the gears with clutch lever pressed / disengaged as the road speed decreases. Bring the engine to neutral position just before the vehicle stops.
3. Turn the ignition 'OFF'.
4. Park the vehicle on a firm, flat surface.
5. Lock the steering.

⚠ Warning

Reduce speed to a safe limit before turning/cornering. Do not apply brake while turning/cornering. Do not disengage clutch before braking.



Warning

Since the engine and exhaust system becomes very hot, make sure to park the vehicle in a place where pedestrians or children are not likely to touch the hot surface. Do not park near dry grass or any other flammable resources which might catch fire.

To avoid deterioration of paint gloss due to ultra violet rays and heat of sunlight, always park your motorcycle in a covered parking.

FUEL RECOMMENDATION

Use only BS VI petrol with minimum RON 98.

BS VI petrol containing upto 20% of ethanol by volume can be used.

Higher ethanol content in petrol can lead to

- degrade plastic and rubber components of fuel system and vehicle parts
- cause corrosion damage to metal parts like fuel tank, etc
- result in startability & drivability issues
- decrease fuel economy

Ethanol absorbs water very easily, resulting fuel separation. Extra care shall be taken to prevent moisture entry into fuel tank while filling ethanol blended petrol and water washing of vehicle. Painted parts (viz. panels, covers) shall not come in contact with ethanol blended fuels.

Manufacturer is not responsible for any warranty issues that results from using ethanol blend in excess of 20% by volume.

In case of any abnormalities observed due to use of ethanol blended fuels, customers are advised to use a different fuel station / brand for standard E20 fuel or contact authorised service centres.



Caution

Never mix oil and petrol in the fuel tank. Always fill fuel from reputed and reliable fuel stations.

CHECKS AND TIPS FOR IMPROVING FUEL ECONOMY

Regular checks

Carry out the periodic maintenance checks as specified in this manual (refer page no. 81).

Regular maintenance checks will save fuel ensuring trouble-free, enjoyable and safe riding besides keeping the environment clean .

Spark plug

A dirty or defective spark plug leads to wastage of fuel due to incomplete combustion. Inspect and clean the spark plug if necessary. Visually inspect the spark plug gap. If the gap is found more replace the plug with a new one.

However the spark plug need to be replaced every 12000 kms or 1 year whichever is earlier. Always use recommended spark plug only.

Air cleaner element

A dirty air cleaner element restricts airflow and increases fuel consumption. **Replace the element every 12000 kms.**



Since paper filter is used in your motorcycle, it is not advised to clean the filter. Replace the filter in case of any abnormalities.

Caution

Do not remove the spark plug when the engine is hot.

Please ensure that the ram air duct is not getting damaged during removal / reassembly of spark plug.

Clutch

Increase in engine speed during acceleration and constant speed running, without increase in vehicle speed indicates clutch slip. The clutch slip will cause high fuel consumption, poor acceleration and overheating of engine.

If the condition persists even after adjusting the clutch lever play, immediately have the clutch checked by TVS Motor Company Authorised Main Dealer / Authorised Dealer.

Engine cum transmission oil

Dirty or less engine cum transmission oil increases the friction between various parts of the engine and reduces the engine life, thereby increases fuel consumption.

Regularly inspect the engine cum transmission oil for correct level and top-up if necessary. Get it replaced at regular intervals as per the maintenance schedule. Always use TVS TRU4 FULLY SYNTHETIC oil only (SAE 10W 30 API-SL, JASO MA2).

Fuel leak

If any fuel leak from tank is suspected, tow the vehicle to the nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer.

Tyres

Low tyre pressure has adverse effects on the vehicle. The **drag on the vehicle** increases resulting in decreased fuel economy. Further more, handling may be affected adversely.

Caution

Never drive the vehicle with the clutch lever pressed. This will reduce the life of clutch and affect the vehicle performance and fuel economy.

Do not attempt to do any rectification, as fuel lines are normally pressurized upto 3.5 bar and any activity by any untrained personnel, may lead to un-safe condition.

Check the tyre pressure regularly (weekly) and inflate them to the recommended pressure (refer page no. 98). Never use tyres which are worn out beyond the permissible limit.

Chain slackness

Check and ensure drive chain slackness. Excess slackness leads to higher fuel consumption (refer page no. 102).

Wheels free movement

Check and ensure the free movement of wheels by rotating them at least once in a week to avoid wastage of fuel.

Fast starting from rest wastes fuel

A racing start from rest at full throttle will waste fuel and damage the engine. It also creates a potentially dangerous traffic situation. Fuel is wasted whenever the rider suddenly accelerates or applies brake.

Avoid unnecessary idling

While waiting for someone or stopping in signals for long time, if the engine is kept running at idle speed, it causes unnecessary wastage of fuel.

Avoid frequent braking

Anticipate corners and slopes as well as the traffic conditions. **Unnecessary and frequent braking reduces the fuel economy.**

Note

The on-road mileage of TVS Apache RTR 200 4V is dependent on several factors like road condition, quality of fuel, riding speed, operation of clutch and brake, tyre inflation, maintenance / timely servicing of vehicle, load etc. and hence will differ from the mileage given under standard test conditions such as made in recognised institutes.



MAINTENANCE SCHEDULE

The maintenance schedule indicates the intervals between periodic services. At the end of each interval, be sure to inspect, check, replace, adjust, lubricate and service as instructed. If the maintenance is not done periodically, it will result in rapid wear and severe damage to the vehicle. If the vehicle is used under high stress conditions such as continuous full throttle operation or is operated in dusty area, certain jobs should be performed more often to ensure reliability of the vehicle. Cylinder head, steering components, suspension, chain and wheel components etc., are key items and require very special and careful servicing. TVS Motor Company Limited strongly recommends that the jobs as per the maintenance schedule be performed by your TVS Motor Company Authorised Main Dealer / Authorised Dealer.

Periodic inspections may reveal one or more parts that may need replacement. Whenever replacing parts on TVS Apache RTR 200 4V, it is recommended that you use only the TVS Motor Company Genuine parts.

 **Caution**

Proper running-in and maintenance are mandatory for making certain that your vehicle is reliable and gives optimum performance at all times. Make sure that the periodic maintenance is performed thoroughly in accordance with the instructions given in this owner's manual.

In more dusty areas, the air filter element required early replacement than the mentioned kilometers to avoid costly damages to the engine.

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Item	Service km	In free service			After free service	Remarks
		1st 500 - 750 1 month	2nd 5000 - 6000 6 months	3rd 11500 - 12000 12 months		
Period from the date of sale						
Engine cum transmission oil	R	R	R	R		
Oil filter (strainer)	C	C	C	C		
Oil filter (paper filter)	R	R	R	R		
Spark plug ¹	I	-	R	-	Inspect and clean if required. Replace every 12000 km	
Air cleaner element	I	-	R	-	Replace every 12000 km	
Tappet clearance	I	I & A	I & A	I & A	Inspect for any noise / starting trouble and adjust if required	
Clutch plates	-	-	-	-	Inspect and replace if required every 24000 km	
Oil cooler fins	-	I & C	I & C	-		
Oil cooler pipes	-	I	I	-	Inspect and replace if required every 18000 km	
Engine breather hose	I	I	I	-	Replace every 24000 km if required	
Fuel filter	I	I	I	-		
Hose fuel with respective clamps	I	I	I	-	Replace every 24000 km if required	
Throttle grip	-	L	L	L	Lubricate using grease	

¹ Replace every 12000 km or 1 year whichever is earlier

Contd...



Item	Service km Period from the date of sale	In free service			After free service	Remarks
		1st 500 - 750 1 month	2nd 5000 - 6000 6 months	3rd 11500 - 12000 12 months		
Clutch and throttle cable play ²	I, A & L	I, A & L	I, A & L	–	–	Lubricate using grease
Steering smooth operation / play ³	I & A	–	C, L & A	–	–	C & L with fresh Bechem premium grade 3 grease every 12000 km
Front fork oil	–	–	–	–	–	Replace every 18000 km
Front and rear suspension ⁴	I	I	I	–	–	–
All fasteners	I & TI	I & TI	I & TI	–	–	Tighten if necessary
Drive chain**	C, L & A	C, L & A	C, L & A	–	–	Adjust if necessary
All bulbs, horn and switches	I	I	I	–	–	Inspect for proper functioning
Head lamp beam	I & A	I & A	I & A	–	–	Inspect & adjust as per Aiming procedure of Headlamp
Battery voltage ⁵	I	I	I	–	–	–
Brake effectiveness	I	I	I	–	–	–

² Inspect for proper operation and adjust play. Lubricate ends using grease.

³ Inspect for smooth steering rotation, steering shake / noise. Adjust the steering if necessary.

⁴ Inspect for smooth and proper function of front and rear suspension. Also inspect for any visual damage and oil leakage.

⁵ Recharge if necessary

** Clean the drive chain with TVS TRU SPRAY Chain Cleaner and apply TRU SPRAY Chain Lube as frequently as every 500 km for better chain life and smooth vehicle running (refer page 102 for details). Check drive chain, rear sprocket and engine sprocket for wear. If any part is worn, replace the same. Always replace the engine sprocket, rear sprocket and chain together.

Contd...

Item	Service km Period from the date of sale	In free service			After free service	Remarks
		1st 500 - 750 1 month	2nd 5000 - 6000 6 months	3rd 11500 - 12000 12 months		
Brake pedal shaft		L	L	L	–	Lubricate using TRU4 oil
Brake pad wear		I	I	I	–	Replace if necessary
Brake fluid ⁶		I & T	I & T	I & T	–	
WSS / toner ring		I & C	I & C	I & C	–	Replace if damaged
WSS cable clamps		I	I	I	–	Fix new clamp if found missing
WSS cable		I	I	I	–	Replace if damage
Brake hose / bundy tubes		I	I	I	I	Replace every 30000 km
Bundy tube mounting (all joints)		I & TI	I & TI	I & TI	–	Inspect for leak
HECU mounting cushions		–	I	I	I	Replace every 30000 km
Toner rings teeth damage		I	I	I	–	Replace if necessary
Malfunction indicator lamp		I	I	I	–	Check and resolve the errors using diagnostic tool if the lamp is 'ON' even after starting the engine
Master cylinder cups		–	–	–	–	Replace every 24000 km
Wheel freeness		I	I	I	–	
Tyre pressure at cold condition		I & S	I & S	I & S	–	
Ball joint gear shift lever		–	L	L	L	Lubricate using grease

⁶ Replace every 24000 km or 2 years whichever is earlier

Contd....



Item	Service km Period from the date of sale	In free service			After free service	Remarks
		1st 500 - 750 1 month	2nd 5000 - 6000 6 months	3rd 11500 - 12000 12 months		
Centre / side stand pivot	L	L	L	—	—	Lubricate using TRU4 oil
Swing arm bearings	—	—	—	—	—	C & L with fresh Bechem premium grade 3 grease every two years
Wheel balancing ⁷	—	—	I	—	—	Inspect at every 12000 kms
Evaporative emission control system	I	I	I	—	—	Check for intactness of hoses and canister
Fuel tank assembly**	I & C	I & C	I & C	—	—	—

R - Replace; I - Inspect; T - Top up; C - Clean; A - Adjust; DR - Drain; L - Lubricate; TI - Tighten; S - Set

⁷ Wheel balancing to be done every 1 year or every 12000 kms and also after every tyre puncture repair or tyre replacement to have better high speed performance.

** Check for abnormal vehicle jerk / noise while opening the cap / leak. If found any, contact TVS Motor Company Authorised Main Dealer or Authorised Dealer.

RECOMMENDED LUBRICANTS

APPLICATION	QTY	MANUFACTURER	BRAND
Engine cum transmission oil	1200 ml (during regular service) 1400 ml (incase of disassembly)	TVS Motor Company	TVS TRU4 FULLY SYNTHETIC oil (SAE 10W30 API-SL, JASO MA2)
Front fork oil	Fork leg LH - 340 ± 3 cc Fork leg RH - 390 ± 3 cc	IOC / HPCL	Front fork fluid
Disc brake fluid	–	TVS Girling	DOT 3 / DOT 4
Grease	–	Bharat petroleum IOC Bechem	MP Grease no. 3 Servo Gem no. 3 Bechem premium grade 3
Chain cleaner	–	TVS Motor Company	TRU SPRAY chain cleaner
Chain lubricant	–	TVS Motor Company	TRU SPRAY



SELF - MAINTENANCE PROCEDURES

BATTERY

To ensure better performance and long life of battery, you are requested to follow the steps given below:

1. Remove the cover frame R (refer page no. 71).
2. Check the battery voltage. If the voltage measured is less than 12.4V, charge the battery using TVS Motor Company Limited recommended battery charger only at TVS Motor Company Authorised Main Dealer / Authorised Dealer.
3. Adding any additional electrical accessories other than TVS Motor Company recommended ones, may lead to disqualification of warranty coverage.



4. While connecting the terminals, observe the correct polarity. Connect the red wire to the '+' terminal and black wire to the '-' terminal of the battery.
5. Apply petroleum jelly to the terminals to avoid corrosion.

Incase of any abnormality or for removal of the battery from the vehicle, contact TVS Motor Company Main Dealer / Authorised Dealer.

Caution

Never check the battery charge by shorting the terminals. Always connect the positive terminal first (red wire) and then negative (black wire) to avoid sparking.

The inversion of the battery wires can damage the battery and the recharging system.

If the motorcycle is to remain unused for a long time (a month or longer), it is advisable to disconnect the battery cables or have the battery removed by skilled personnel.

Recommendations to maintain battery health during prolonged parking conditions

While your vehicle is parked for prolonged duration, battery continues to discharge and if left unattended can get completely discharged. It is recommended to ride the vehicle for minimum 60 km every week to keep the battery in healthy condition. This could be at a stretch in one ride or several rides during the week. The vehicle speed will vary during the ride but an average speed of minimum 30 kmph will be helpful to ensure proper battery charging. Use kick-starting, if available, to conserve battery charge during such period. This is only a recommendation to maintain battery charge and regular service schedules must be followed to maintain your vehicle in good running condition.

The following are the recommendations to the users regarding battery maintenance before, during and after long storage of battery:

1. Before Storage

- Store the battery only after fully charging it.
- Battery fuse to be disconnected and stored safely. This will reduce the sleep mode current and hence enhance storage life of battery*.

- Alternatively, battery connecting wires (positive and negative wires) can be disconnected and fasteners can be secured with battery terminals*.

2. During Storage

- Store it at room temperature or lower.
- Store the vehicle in the shade and protected from rain and cover the vehicle to prevent rodents from entering and damaging the wires.

3. After Storage

- Connect the wires and fuse, if disconnected earlier, with ignition switch in 'OFF' position*.
- Start the vehicle by kick starting.

(Above recommendations do not consider storage effects on other systems such as induction and fuel systems and wheels).

Periodic Maintenance of Batteries:

- Keep top of battery clean.
- Check cables, clamps, and case for obvious damage or loose connections.
- Clean terminals and connectors as necessary.

* To be done by skilled personnel



- Recharge battery if voltage is below 12.4 Volts.
- Valve Regulate Lead Acid (VRLA) / Lead Acid batteries are prone to water damage. Any water entry, through vents or otherwise; will result in irreparable damage to the battery or the vehicle.



Warning

Battery develop explosive gases. Keep it away from heat sources. If charging is required the battery must be charged in well ventilated area.

Unusable battery must be disposed in environment friendly manner. Do not discard it with household thrash. Handover the battery to the battery Dealers or to a recycle center that accept used battery.



Caution

Never operate the vehicle with discharged battery as it may damage electrical components.


Do not push start the vehicle, use a good battery to start the vehicle.

FUSE REPLACEMENT


The electrical components of your motorcycle are protected by four fuses. Out of which three fuses are housed inside a fuse box and located below the rear seat (passenger seat). One fuse is located below the cover frame near the battery.

To access the fuses located below the passenger seat:


1. Turn 'OFF' the ignition.
2. Park the motorcycle on a flat firm surface and remove the passenger seat and utility box as explained in page no. 69.
3. Open the fuse box lid.

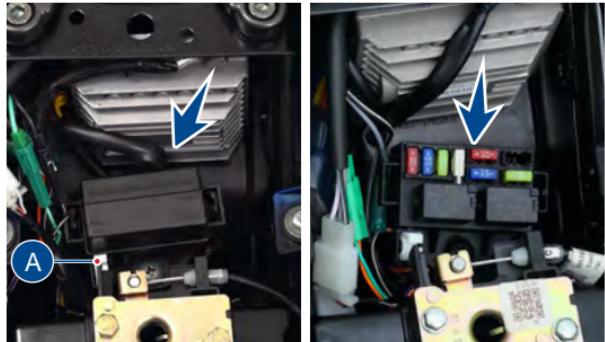

Good Fuse

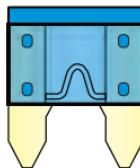

Blown Fuse

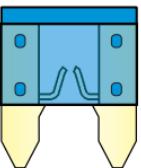


4. The fuse box contains one 15A fuse, one 10A fuse and one 20A fuse. The 20A fuse is used for dual channel ABS system. Incase of single channel ABS system, 15A fuse is provided instead of 20A fuse. 15A fuse used for DC loads and 10A fuse used for EMS. Use the 'fuse puller' (A) placed near the fuse box to pull out the blown fuse.
5. Replace the blown fuse with a new one with same rating (extra fuses are provided inside the fuse case itself).
6. Close the fuse case and fix back the utility box and passenger seat.

To access the fuse located below cover frame:

1. Remove the cover frame R as explained in page no. 71.
2. Open the fuse holder and pull out the blown fuse (Main Fuse - 25A).



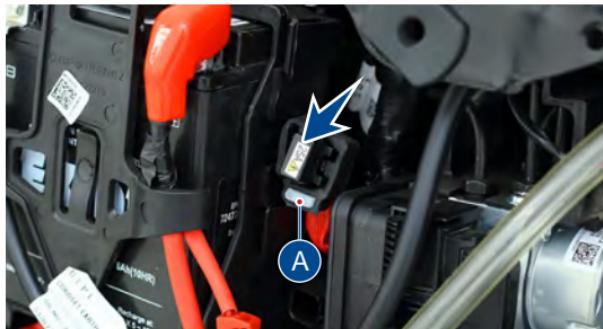

3. Replace the blown fuse with a new one with the same rating (extra fuse (A) is provided in the fuse holder itself).
4. Turn 'ON' the ignition and check for proper functioning of electrical and ABS system. Incase if the fuse fails again, consult the nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer.



Caution

Do not use vehicle by shorting the wires without fuse. This may result in overheating of electrical / wiring and may result in fire. Never replace a fuse with a rating other than that prescribed in order to avoid damage to the electrical equipment.


SPARK PLUG

1. Wipe and clean the dust and mud around the spark plug mounting to avoid their entry inside the cylinder.

2. Pullout the suppressor cap from spark plug.
3. Remove the spark plug using a plug spanner.

A spark plug with heavy carbon deposits will not produce strong sparks. Hence, only if necessary, remove the carbon deposits from the spark plug with a small wire brush or spark plug cleaning tool.

Inspect the spark plug electrodes (A) and (B) for any corrosion. If found any replace the spark plug with a new one.

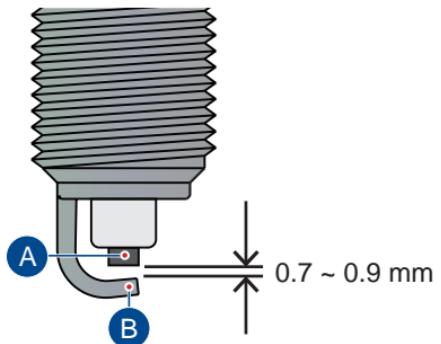

Inspect the spark plug gap visually (0.7 ~ 0.9 mm). If the gap is found to be more, replace the spark plug with a new one.

After cleaning and inspecting the gap, reinstall the spark plug and tighten by hand to avoid cross threading. Finally tighten using the spanner. Do not over tight or cross thread the spark plug. After reassembling the plug fix back the suppressor cap and ensure its proper fitment.



Caution

Always use only recommended make and type of spark plug. Since the hook type spark plug is used, it is not advised to adjust the plug electrodes as it may damage the electrodes. Replace spark plug every 12000 km or 1 year whichever is earlier.

Cover the spark plug hole with a cloth when the plug is removed to prevent entry of dust / water.

Do not remove the spark plug when the engine is hot. It is advisable to tighten the new spark plug by hand till the end and then loose. Again re-tight the spark plug by 1/8 of rotation after sealing by using only the hand tool. Care should be taken not to damage the spark plug cooling duct (ram air duct) during dismantling / assembling the spark plug.

ENGINE CUM TRANSMISSION OIL

Check the engine cum transmission oil level periodically. The gauge oil level is provided at the right-hand side crankcase cover. The check must be performed when engine is in cold condition, after placing the motorcycle in center stand with front wheel touching the ground.



1. Place the motorcycle in an upright position on a horizontal and firm surface.
2. Wipe-off the surroundings of gauge oil level.
3. Remove the gauge oil level and wipe it clean.
4. Re-insert the gauge oil level by completely screwing it in.
5. Once again remove the gauge and check the oil level



6. The oil level should be between the minimum and maximum level marks on the gauge as shown in the figure.
7. If the oil level is below the minimum level, top up with TVS TRU4 FULLY SYNTHETIC oil (SAE 10W30 API-SL, JASO MA2) upto the maximum level mark. Do not overfill.
8. Wipe out the oil traces with a clean cloth to prevent dust accumulation and re-fix the gauge.

Caution

Do not run the vehicle with insufficient / without engine cum transmission oil as it will cause serious damage to the engine components.

Excessive oil filling will cause oil leak and other malfunctions. Always use TVS TRU4 FULLY SYNTHETIC oil only (SAE 10W30 API-SL, JASO MA2).

Make sure that no foreign object gets in the crankcase while topping up the engine oil.

Warning

Correctly recycle or dispose the used engine oil in order to avoid environmental pollution.

CLUTCH ADJUSTMENT

Clutch lever free play is one of the most important adjustment which you may need to check in-between services for better life of the clutch plates. The free play of the clutch lever should be 8 ~ 13 mm as measured at the clutch lever end at the handle bar before the clutch begins to disengage.

Adjust the clutch lever free play periodically by means of clutch cable adjuster at arm clutch release if the free play is found more.



1. Ensure that the engine is cold (engine oil at room temperature).
2. Loosen the lock nut (2) while holding the clutch cable adjusting nut (1). Adjust the clutch cable adjusting nut (1) 'in' or 'out' to give sufficient play in the clutch lever.
3. After adjusting the play, hold the adjuster nut in the same position, tighten the lock nut (2).



Caution

Too much or too less clutch lever free play will damage the clutch plates, thereby affecting the performance of the vehicle.


Adjust the clutch lever free play only when the engine is cold.

After adjusting free play properly, if there is a clutch slip or there is difficulty in shifting gear, visit your TVS Motor Company Authorised Main Dealer / Authorised Dealer for rectification.



REAR SHOCK ABSORBER

TVS Apache RTR 200 4V is provided with dual rated, 7 step adjustable, gas filled rear shock absorber to meet different road and load.

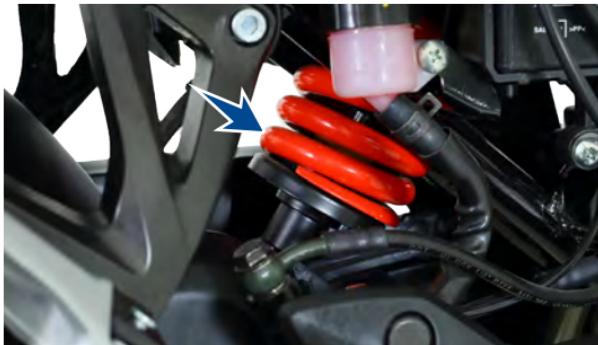


⚠ Warning

The rear shock absorber contains highly compressed gas. Do not try to open or disassemble it in any way.

⚠ Caution

Adjust step by step. Do not go at a stretch as it will damage the cam.

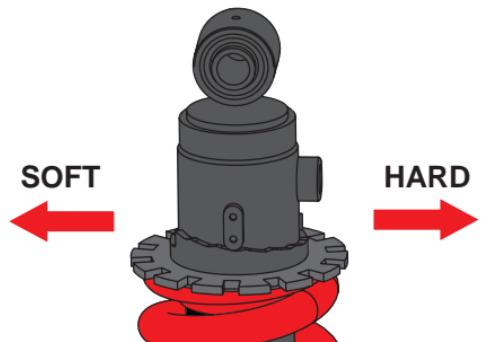

👁 Note

During the time of delivery of the motorcycle, the rear suspension is adjusted to the standard configuration.

Rear shock absorber spring stiffness can be set to your convenience. Contact your TVS Motor Company Authorised Main Dealer / Authorised Dealer for setting the rear shock absorber load.

BRAKES

Front brake

You can observe a master cylinder (1) on the right side of the handle bar, a caliper assembly (2) fitted to the fork leg R along with a wheel speed sensor (3), a disc (4) and the toner ring (5) to the front wheel. Also you can observe a high pressure hose connecting the master cylinder to the HECU of ABS system and another hose connecting HECU to the caliper assembly.

1. Check the master cylinder brake fluid level through the view piece glass (A).



2. Brake fluid level always should be above the 'LOWER' mark (B) on the master cylinder when the master cylinder is parallel to the ground.
3. If the brake fluid level is below the mark or while applying brake if you feel the brake is more spongy or ineffective due to air entry, contact TVS Motor Company Authorised Main Dealer / Authorised Dealer for topping-up the brake fluid, air bleeding and other brake related inspections.



Note


Check the brake fluid level only when the master cylinder is parallel to the ground.



Rear brake

You can observe a master cylinder (1) mounted on the right side pillion foot rest, a reservoir (2) below the cover frame R, a caliper assembly (3) fitted on the rear wheel axle along with wheel speed sensor (4)*, a disc (5) and toner ring (6)* to the rear wheel. Two high pressure hoses connecting the master cylinder to HECU* and HECU* to the caliper (in non ABS version high pressure hose is connected directly to the caliper assembly).

1. Remove the cover frame R (refer page No. 71 for removal procedure).

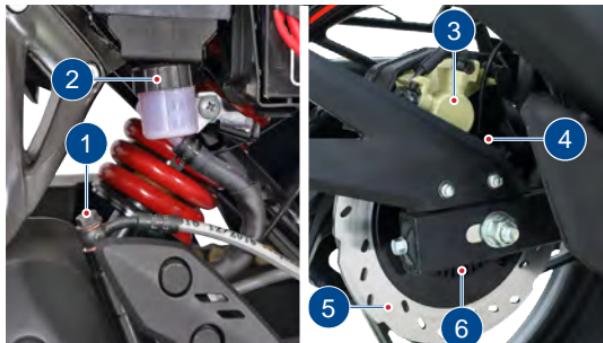

* Not applicable of non ABS type rear brake system

2. Check the brake fluid level in the reservoir. It should be between maximum and minimum level.
3. If the brake fluid level is below minimum or while applying brake if you feel the brake is more spongy or ineffective due to air entry, contact TVS Motor Company Authorised Main Dealer / Authorised Dealer for topping-up the brake fluid, air bleeding and other brake related inspections.




Note

Check the brake fluid level only when the master cylinder is parallel to the ground.

Brake pad wear indicator

Visually check the brake pads for wear. If the wear is found beyond the wear indicator groove as shown in the figure then, replace the brake pads as a set with a new one.

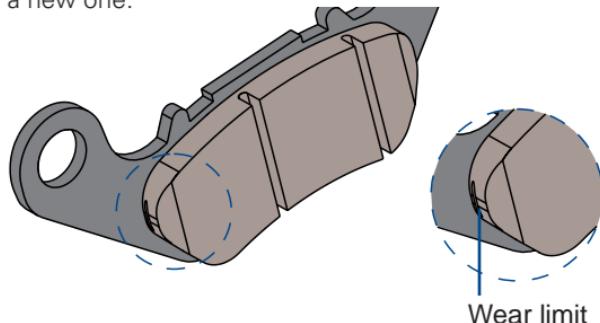

Warning

Lack of maintenance of the brake system increases the risk of accident. If you notice any malfunction in brake system contact nearest TVS Motor Company Authorised Main Dealer / Authorised Dealer.

Caution

Replace the brake pads as a set, if the wear indicator shows beyond the wear limit.



TYRES***Tyre pressure:**

Check the tyre pressure atleast once in a week if not more frequently. Insufficient air pressure in the tyres not only hasten tyre wear, but also seriously affects the stability of the vehicle.

Under-inflated tyres make smooth cornering difficult and over-inflated tyres decreases the tyre contact with the ground which can lead to skidding and loss of control. Be sure that the tyre pressure is within the specified limits at all times. Be sure that the tyre pressure is within the specified limits at all times.

	Solo	Pillion
Front	1.75 kg/cm ² (25 psi)	1.75 kg/cm ² (25 psi)
Rear	2.00 kg/cm ² (28 psi)	2.25 kg/cm ² (32 psi)

 **Warning**


*The tyre inflation pressure in cold condition and the tyre tread condition are extremely important for the performance and safety of the rider. Check the tyres frequently for inflation pressure as well as the wear pattern on it. **Use of a tyre other than the standard will cause instability.***

Tyre tread condition

Operating the vehicle with excessively worn tyres will decrease riding stability and can lead to loss of control. It is recommended to replace the tyre when the tyre wears off to the tyre wear indicator level (indicated by TWI on the tyre).

Tyre rotation direction

While reassembling the tyre, after removing from wheel rim, ensure that the arrow mark (A) provided on the tyre, faces the direction of wheel rotation.

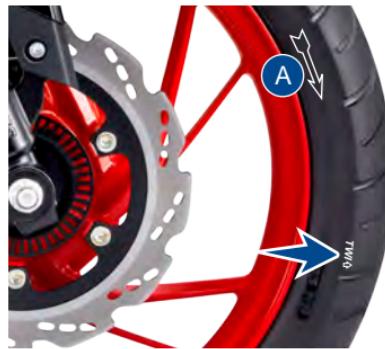

* *The pneumatic tyres fitted in this vehicle meet the requirements specified by BIS and comply with the requirements under the Central Motor Vehicles Rules (CMVR), 1989.*

Tyre puncture

TVS Apache RTR 200 4V is fitted with a tubeless tyre on both front and rear wheel. Incase of any puncture / tyre damage it is advised to visit nearest tyre manufacturer Dealer or the tyre repair shops who know the repairing methods of tubeless tyre.

It is not necessary to remove the tyre from wheel rim always to attend the puncture. Even though, if there is a need of tyre removal, it is strongly recommended to use a tyre removal / fitment machine.

If at all, tyre levers need to be used, the levers should be free from sharp edges. Care should be taken not to damage the rim and tyre.

Caution

Side walls of the tubeless tyres which are in contact with the wheel rim are only seals the air inside the wheel assembly. Hence, care should be taken not to damage the side walls of the tyres during removal / reassembly.

Wheel balancing to be done every 1 year or every 12000 km and also after every tyre puncture repair or tyre replacement to have better high speed performance.



Warning

Use of a tyre other than the standard may cause instability and improper function of ABS.

Keep the toner ring upwards whenever the wheel is removed in order to avoid damage to the toner ring. Damaged toner ring affects the ABS function.



Tyre Maintenance Tips

Inflation Pressure Check - Condition

**👁 Note**

If vehicle is in hold condition for long time


- *Need movement of vehicle to avoid particular spot of tyre not to touch the ground for more than week time.*
- *Inflation pressure should check on cold condition maximum travel time should not exceed more than 1 km.*
- *Weekly basis inflation pressure check helps to improve 10% of tread life & fuel efficiency.*

Head Lamp Aiming

To check and adjust the head lamp focus:

- Inflate the tyres to the correct pressure.
- Place the motorcycle upright in a uniform flat surface while ensuring the headlamp center is 5 meter away from a vertical wall or screen
- Mark a horizontal line on the wall or screen around 820 ± 20 mm from the ground level and mark a vertical line in the middle of the horizontal line
- Sit on the vehicle to check the headlamp focus after completing the above procedure.
- Start the vehicle and turn the headlamp to 'high beam' mode.
- Rotate the handle bar left / right side and focus the headlamp on the vertical line of the wall / screen.
- Now, turn the headlamp to low beam mode and ensure the headlamp low beam focus falls between 820 ± 20 mm from the ground level as shown

Incase if any deviation is found, adjust the headlamp adjuster screw below the headlamp focus as explained below:

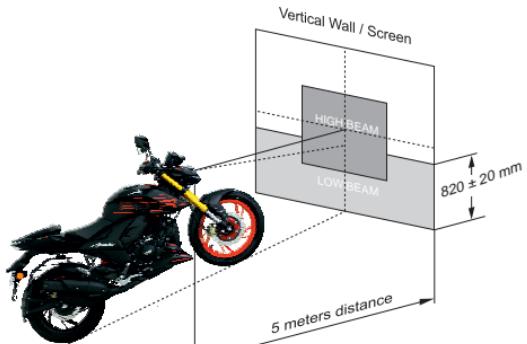

- Adjust the lamp adjuster clockwise (Down) or in anti-clockwise (Up) using the screw driver.
- Adjust the headlamp falls below the low beam cut-off line (820 ± 20 mm) marked on the vertical wall or screen.

Note

Head lamp aiming to be done with the unloaded vehicle only. The adjustment levels mentioned is for solo riding condition. For dual riding condition, the head lamp beam may be adjusted as per need for better visibility.

Warning

Do not stare at Projector head lamp beam to avoid damage to the eyes.



DRIVE CHAIN

Proper lubrication and adjustment of drive chain gives long service life of the chain. Poor maintenance of the chain causes premature wear or damage to the drive chain and sprockets. **Poor chain maintenance also affects mileage of the vehicle.**



Warning

Riding with improperly adjusted chain / high slackness can cause the chain to come off the sprockets resulting in accident or serious damage to the motorcycle. Misalignment of rear wheel or sprockets can cause abnormal wear of chain and sprockets and results in unsafe riding condition.

The drive chain must be cleaned, checked, lubricated and adjusted at specified intervals mentioned in the maintenance schedule.

Even though the chain is cleaned, lubricated and adjusted during regular service by the Dealers, the user must clean the chain with TVS TRU SPRAY Chain Cleaner and lubricate using TVS TRU SPRAY Chain Lube as frequently as every 500 km for better chain life and smooth vehicle running.

Check, clean and lubricate the drive chain in the following manner:

1. Place the vehicle on centre stand with the transmission in neutral.
2. Clean the chain in the as explained below:
 - Turn OFF the engine.
 - Shake the TVS TRU SPRAY chain cleaner bottle well.
 - Rotate the rear tyre so as the chain, front and rear sprockets rotate along with it. Apply TVS TRU SPRAY chain cleaner front and sideways.
 - Clean the chain using soft brush.
 - Repeat the steps if needed until the dust is removed completely.
 - Let the vehicle be parked for 10 ~15 mins to ensure the chain is dry.

3. After the chain is completely dry, apply TVS TRU4 Chain Lube by rotating the rear wheel by hand in forward direction.
4. Now, check the slackness of the drive chain (as shown). The slackness of the drive chain should not exceed the limit (maximum 20 ~ 25 mm).
Excess slackness consumes more fuel.
5. If the slackness is found more contact TVS Motor Company Authorised Main Dealer / Authorised Dealer for adjustment.

Caution

Lubricate the drive chain after the motorcycle is washed with water or riding in rainy / wet condition.

The chain must be serviced more frequently when the vehicle is operated under severe conditions like dusty, muddy, wet, high speed or frequent starting / stopping.

FRONT WHEEL REMOVAL AND REASSEMBLY

1. Remove the axle nut (1) along with a washer.
2. Pull out the axle (2) along with a washer and remove a spacer from both the sides of the wheel.
3. Place a support below the frame to prevent vehicle from falling and lift the vehicle up.
4. Carefully dislocate the disc from the caliper assembly and slide the wheel out.
5. Reverse the procedure for reassembling.




⚠ Warning

Ensure proper seating of disc in the caliper assembly while reassembling the wheel. Ensure to re-fix the right spacers at both the sides of the wheel.

Keep the toner ring upwards whenever the wheel is removed in order to avoid damages to the toner ring. Damaged toner ring affects ABS function.

REAR WHEEL REMOVAL AND REASSEMBLY

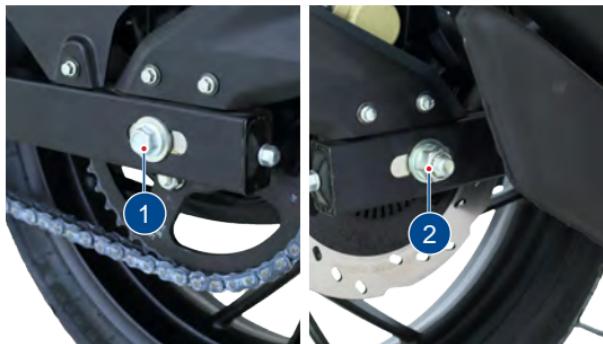

* Not applicable of non ABS type rear brake system

1. Remove the wheel hugger rear.
2. Remove the axle nut (1) and along with the washer and partially pull out the axle (2).
3. Take out the caliper assembly along with the wheel speed sensor* by dislocating it from the disc and the swing arm lug.
4. Carefully hang the caliper assembly in the swing arm itself. Take out the spacer and pull out the axle fully.
5. Remove the wheel assembly by gently tapping it along with the disc and toner ring*.
6. During re-assembly, engage the drum sprocket with the wheel along with the drive chain and then assemble the wheel into swing arm.
7. Re-assemble the other parts in the reverse order of removal.

⚠ Caution

While assembling the caliper assembly ensure that the slot provided in the caliper is properly located to the lug provided in the swing arm assembly. Always make sure that whenever the wheel is removed, axle nut is properly re-tightened to the specified torque and chain play is rechecked and adjusted if required.

Warning

Keep the toner ring upwards whenever the wheel is removed in order to avoid damages to the toner ring. Damaged toner ring affects ABS function.*

Note

During removal of rear wheel axle hold the drum sprocket assembly with the hand as it may fall. Carefully hang the drum sprocket along with chain in the swing arm itself.

STORAGE PROCEDURES

For storage of your motorcycle for longer periods of over a month and above, we recommend to carry out the following steps:

1. Clean the vehicle thoroughly. Park the vehicle on centre stand.
2. Warm up the engine and drain engine cum transmission oil. Store the oil, if new, in a dust free container.
3. Empty the fuel tank.
4. Remove the spark plug and feed in several drop of engine cum transmission oil through spark plug hole. Crank the engine few times and reinstall the spark plug.

5. Remove the battery, store it away from direct sunlight and freezing temperatures.
6. Place a suitable support at the bottom of the frame so that both the tyres are off the ground. This will ensure better tyre life.
7. Cover up the vehicle completely with a clean tarpaulin or any other suitable cover. Store the vehicle inside a garage or similar area to avoid damage due to dust and rain. Make sure that the storage area is well ventilated and free from any source of flame or spark.

Caution

Do not park the vehicle on a slope or soft ground or else it may fall.

During storage, the battery must be recharged on a TVS Motor Company recommended battery charger at atleast once in a month.

Warning

The exhaust system becomes hot after a run. Park the vehicle in a place where pedestrians or children are not likely to touch the vehicle.



TAKING THE VEHICLE OUT OF STORAGE FOR REGULAR USE

1. Take the vehicle out of the garage and clean it thoroughly.
2. Remount the battery after bench charging if required.
3. Fill the engine cum transmission oil (TVS TRU4 FULLY SYNTHETIC - SAE 10W30 API-SL, JASO MA2) and check the oil level using the gauge.
4. Lubricate the parts as instructed in the periodic maintenance schedule.
5. Fill up fresh petrol in the fuel tank.
6. Check and inflate the tyres to the specified tyre pressure.
7. Check and correct the points mentioned in page no. 74.
8. Turn the ignition switch to 'ON' position. Retract the side stand if the vehicle is parked on side stand. Start the engine and allow it to idle for a few minutes and ride out.



Caution

Avoid using alkaline solution like detergent soaps for washing. This may damage head lamp and other lamp assemblies.

RECOMMENDED TIPS WHEN TAKING A LONG TRIP OF MORE THAN 500 KM

- A) Please keep the following items for use in case of emergency:
 1. Complete tool kit / first aid kit
 2. Recommended spark plug one number.
 3. Turn signal lamp bulb one number.
 4. Throttle and clutch cables one number each.
- B) Precautions to be taken for the journey:
 1. Ensure engine cum transmission oil and brake oil level are up to the level.
 2. Adequate fuel in fuel tank.
- C) Check your motorcycle for the following:
 1. Tightness of all bolts and nuts with correct torque value.
 2. Fitness of tyres / tyre pressure / tread depth.
 3. All bulbs, indicators and horn function.
 4. Balancing of wheel
 5. Check for the proper functioning of ABS (through ABS warning lamp)
 6. Smooth functioning of all cables and their free plays.
 7. Smoothness of steering operation.

8. Slackness and lubrication of chain (page no. 102)
9. Front / rear brake functioning and rear brake lamp switch adjustment.
10. Front fork for any abnormality.
11. Spark plug cleanliness and condition of spark plug.
12. Air filter element cleanliness.
13. Correct idling speed.
14. Lubrication of all items mentioned in the periodic maintenance schedule.
15. Intactness of EVAP system hoses and canister.
16. Any other job as necessary.
17. Have your vehicle checked at any TVS Motor Company Authorised Main Dealer / Authorised Dealer.

 **Note**

Ensure the first aid equipments are changed periodically based on the expiry.

 **Caution**

Long journey are to be taken only after the running-in period of 1000 km.



TVS Motor Company Limited ('the Company') give this warranty with respect to the TVS Apache RTR 200 4V manufactured by the Company.

While the Company has taken every care to maintain quality in the manufacture of the TVS Apache RTR 200 4V, the above said warranty is subject to other terms of warranty:

During 5 Years from the date of purchase or during the first 60,000 km of run for the vehicle, whichever is earlier, the parts of the vehicle covered under warranty which prove to the satisfaction of the Company to have a manufacturing defect will be repaired or replaced free of cost. In the event of a change in vehicle ownership, the remaining warranty period is effective for the new owner.

The Company's obligation under this warranty is limited to repairing or replacing, free of cost, those parts of the vehicle which upon examination by the Company may prove to the Company's satisfaction to have a manufacturing defect, and in such cases the Company's decision either to repair or replace the affected parts will be final. In the event of replacement of parts, the Company also reserves the right to use parts of the same brand as the affected parts or any other brand which is used by the Company in the course of manufacture. All parts replaced under this warranty will become the property of the Company and must be returned to the company.

Limitations of Warranty:

This warranty shall not apply to following condition:

1. Any natural wear and tear, including without limitation, aging.
2. Warranty claims on proprietary items such as tyres, tubes and batteries etc., should be preferred by the user directly on the respective manufacturer, as per their warranty terms and the Company shall not be liable in any manner in respect to the same.
 - Battery warranty for "MF type (Maintenance Free)" is applicable for a period of 21 months from the date of charging or 18 months from the date of sale or 20,000 kms, whichever is earlier.
 - Battery warranty for "Lead Acid type" is applicable for a period of 15 months from date of charging or 12 months from date of sale or 10000 kms whichever is earlier.

3. Parts repaired or replaced under this warranty are warranted only throughout the remainder of the original warranty period.
4. The Company is not liable for any delay in servicing due to reasons beyond the control of the Company or any of its Authorised Main Dealers / Authorised Dealers.
5. In any event, the Company is not liable for indirect, remote, incidental or consequential damages.
6. The Company may make any modification or improvement to vehicles in future production at any time without prior notice and without any obligation to install the same on vehicles previously dispatched for sale.
7. Any claim under this warranty will lie only when the customer:
 - takes his vehicle to an Authorised Main Dealer / Authorised Dealer of the Company and reports the problem he / she felt in the vehicle to enable the Authorised Main Dealer / Authorised Dealer to inspect the same and assess the cause for the reported problems.
 - produces to such Authorised Main Dealer / Authorised Dealer the Service Handbook for the concerned vehicle for verification of relevant details.
8. This is the only warranty given by the Company for the TVS Apache RTR 200 4V. No employee, Dealer or other person is authorised to extend or enlarge this warranty.

Following Toll Free numbers can be contacted for battery related queries if any.

In the case of EXIDE battery, call :- 1800 103 5454

In the case of AMARON battery, call :- 1800 571 5858

In the case of TATA GREEN battery, call :- 1800 419 8888

Following Toll Free numbers can be contacted for Tyre related queries if any.

In the case of TVS Srichakra, call :- 04522443300

In the case of JK tyre, call :- 1800 258 1100

In the case of Maxxis tyre, call :- 1800 532 2888

In the case of Ceat tyre, call :- 1800 22 1213



List of parts not covered under warranty

ITEM	WHAT TO CHECK FOR
Normal Maintenance Operations	Engine tune-up, decarbonizing, fuel system cleaning, oil changes, head light focusing, fastener retightening, ignition timing, clutch and brakes as well as other normal adjustments.
Wear and Tear Items	Chain, sprockets, clutch and brake linings, fasteners, shims, washers, oil seals, gaskets, 'O' rings and spokes etc.
Electrical	Fuse etc.
Service Maintenance Parts	Oil filters, spark plug, air filter, oil and brake fluid
Rubber, Rexine and Plastic Items	All hoses, pipes and plastic aesthetics
Proprietary Items	<p>Battery, tyres and tubes (the warranty terms are subject to our agreement with proprietary OEM)</p> <p>(Battery warranty for "MF type (Maintenance Free)" is applicable for a period of 21 months from the date of charging or 18 months from the date of sale or 20,000 kms, whichever is earlier).</p> <p>(Battery warranty for "Lead Acid type" is applicable for a period of 15 months from date of charging or 12 months from date of sale or 10000 kms whichever is earlier).</p>
Other Factors	Parts of the vehicle getting affected due to atmospheric effect / environmental factors (rusting, paint peel off etc.). However, depending on the vehicle usage condition, warranty would be accepted up to 2 years from the date of purchase.
	Parts of the vehicle which have been tampered with, altered, repaired or replaced by persons not authorised by the Company and which in the sole judgement of the Company affect the performance of the vehicle.

List of parts not covered under warranty

ITEM	WHAT TO CHECK FOR
Other Factors	Parts which are used in conjunction with parts not made or recommended by the Company.
	Parts suffering damage or resultant damage by accident, misuse, negligent treatment, use of bad quality lubricants or impure fuel or by omission to follow the guidance and instructions contained in this User Manual.
	Vehicles on which engine number or chassis number is deleted, defaced or altered.
	Vehicles on which any warranty service including scheduled paid service is not availed when it falls due (at TVS Motor Company Authorised Main Dealer / Authorised Dealer).
	Vehicles used for racing or any competition or used otherwise than for ordinary personal transportation.
	Vehicles attached with side cars etc.
	Vehicles which have been taken out of India.
	Vehicles affected by natural calamities like flood, earthquake, tsunami, storm etc.,
	If the vehicle has been used for commercial purpose like taxi or used for rental or hiring or any other purpose other than regular personal transportation.

Warning

Modifications to this vehicle not approved by the TVS Motor Company may cause loss of performance and render it unsafe for use and disqualifies for warranty coverage also.



SERVICE INFORMATION

There are eleven services for TVS Apache RTR 200 4V during warranty period. Of these, the first three are free services for which labour charges are free. In addition to these three free services, we have a scheme of eight pay services. For keeping the maintenance track of your vehicle, free and pay service record sheets are attached in the Service Handbook given to you during the time of your vehicle purchase. Please have the relevant record sheet filled by the Dealer who is carrying out the maintenance service.

For availing any of the eleven warranty services, please take your vehicle and your Service Handbook to any of our Authorised Main Dealers or any of our Authorised Dealer. After effecting the service, the Authorised Main Dealer or the Authorised Dealer will affix their stamp on the last column of free or pay service record sheet of Service Handbook for your record and reference.

Periodic maintenance always helps good performance of an automobile and our services are planned to keep your TVS Apache RTR 200 4V performing good. **Please note that carrying out the service for your vehicle at scheduled intervals at any of the TVS Motor Company Authorised Main Dealer / Authorised Dealer is necessary for availing of warranty.** And please also remember that, after the services are over, periodic servicing of your vehicle at appropriate intervals, depending upon its extent of use, will keep your vehicle at its best level of performance.

In case you need any clarification or assistance, please feel free to write to us mentioning the frame number, engine number and the date of purchase of your vehicle also the name and place of the Authorised Main Dealer / Authorised Dealer from whom you bought the vehicle and getting it serviced.

Service Department

TVS MOTOR COMPANY LIMITED

P.O.Box No. 4, Harita, Hosur - 635 109,

TAMILNADU, INDIA.

Toll free no. :- 1800-258-7111

PLANNED SERVICE SCHEDULE (kms or month whichever of the two occurs early)

SI. No.	SERVICE	TYPE	Kms	MONTHS
1	1st service	Free	500 ~ 750	1 month
2	2nd service		5000 ~ 6000	6 months
3	3rd service		11500 ~ 12000	12 months
4	4th service	Pay	17500 ~ 18000	18 months
5	5th service		23500 ~ 24000	24 months
6	6th service		29500 ~ 30000	30 months
7	7th service		35500 ~ 36000	36 months
8	8th service		41500 ~ 42000	42 months
9	9th service		47500 ~ 48000	48 months
10	10th service		53500 ~ 54000	54 months
11	11th service		59500 ~ 60000	60 months

Free services enables the customer to avail the service at free of labour charges. Charges for the pay service should be borne by the customer. Cost of engine oil, periodic maintenance parts, filter, brake fluids, all types of greases, petroleum jelly, distilled water, chain cleaner, lubricants, coolants, cleaning cloths for both free and paid services are chargeable to the customer.

Please remember that, after the above schedule, periodic servicing of your vehicle at appropriate intervals, depending upon its extent of use, will keep your vehicle at its best level of performance.



Your Privacy is of paramount importance to us. We are committed to safeguarding your privacy and protecting your Personal Data that is with us. This Privacy Notice outlines the details of the Personal Data we collect and process, how we handle it and the purposes for which we use it. Please read the following carefully to understand our practices regarding your Personal Data.

Throughout this document, the terms "we", "us", "our" & "ours" refer to TVS Motor Company Limited. And the terms "you", "your" & "yours" refer to YOU (the individual whose Personal Data we are referring to).

What Personal Data Do We Collect, Store and Process? Categories of Personal Data that we collect, store and process are as follows:

- I. Demographic, Identity & Contact Data (for e.g., name, last name, date of birth, gender, email address, address proof, contact number, language, occupation, physical address with pin code, preferences and interests.)
- II. Personal Identification Number (for e.g., PAN Card No, Voter ID, GST no, Passport and Aadhaar Number)
- III. Financial Account Details (for e.g., Bank Details, PF Details, Past Salary,)
- IV. Educational & Professional Data (for e.g., Education, Profession, Employment Type, work experience, Income, Tax category, Performance History.)

- V. Online Identifiers and other Technical Data (for e.g., IP address, browser type, device identifiers)
- VI. Personal Data collected via permissions on our mobile applications (for e.g., camera, contacts, location data, storage, photos, fingerprint/biometric and SMS)
- VII. Vehicle Data (for e.g., registration number, Registration type, registration data, VIN Number and Model type.)
- VIII. Ride Data (for e.g., Mileage, travel location, travel date, time, top speed, average speed, driver behaviour data such as speed and braking habits.)
- IX. Subscriptions and Add on Data (for e.g., Subscription Plan, Plan Start Date, Plan End Date, Premium Paid.)
- X. Charging Details (for e.g., Charger Name, Charger Model, Start time, End time, Distance Available, Payable Amount)
- XI. Telematics Data (for e.g., data about speed, bike fall and crash)
- XII. Communications details (for e.g., communication done through emails)Generated Data (for e.g., logs, transaction records)
- XIII. Information relevant to surveys that we undertake.
- XIV. Testimonials and feedback that may contain some Personal Data.

Where Do We Collect Your Personal Data From?

We collect your Personal Data in the following ways:

- I. When you visit our website or social media pages and fill in the registration form and use the Contact Us facility.
- II. When you use our mobile applications.
- III. When you interact with us via our websites or use services on our websites including customer support.
- IV. When you use the connected features on our vehicle
- V. When you interact with our dealers.
- VI. When you apply for a job at TVSM
- VII. When we onboard you as an employee and during your subsequent interactions with us as an employee

How Do We Use Your Personal Data?

We use your Personal Data for the following purposes:

- A. If you express an interest in our services, we collect and share your Personal Data with our dealer, who in turn would contact you to schedule a store visit.
- B. If you are an existing customer, we collect your Personal Data for the following purposes:
 - I. to authenticate your account or information on our applications that you use.
 - II. to provide you with our products and services
 - III. to cross sell vehicles on our App/website

- IV. to communicate with you regarding existing products and services availed by you, including notifications of any alerts or updates.
- V. to evaluate, develop and improve our services.
- VI. to manage sales and refunds
- VII. to manage your subscriptions and add on
- VIII. for market and product analysis and market research.
- IX. to send you information about our other products or services which may be of interest to you.
- X. to obtain feedback and handle enquiries and complaints.
- XI. to comply with legal or regulatory requirements.
- XII. to reach out to you for service reminders.

- C. If you are a dealer, we collect your Personal Data for onboarding and invoicing purposes.
- D. If you are a website visitor, we process your Personal Data to optimize your website experience and customize content.

On What Legal Grounds Do We Process Your Personal Data?

We process your Personal Data by relying on one or more of the following legal grounds:

- I. You have consented to us processing your Personal Data for specified reasons.
- II. You have voluntarily provided your Personal Data to us for specified reasons.
- III. To evaluate, develop and improve our products and services.
- IV. The processing is necessary for compliance with a legal obligation we may have towards other stakeholders like law enforcement agencies, government agencies, regulators, etc.

Where the processing is based on your consent, you have the right to withdraw your consent at any point in time. Upon receipt of your request to withdraw your consent, the consequences of withdrawal will be communicated to you. In many cases, upon such a withdrawal, we may not be able to continue offering our products and services to you. You may withdraw consent by contacting us using the details specified in the 'Contact Us' section.

Who Do We Share Your Personal Data With?

We may disclose your Personal Data to:

- I. Our Parent Company for business and operational purposes;
- II. Our affiliates or group companies;
- III. Our Dealer; and/or
- IV. Third Party Service Providers who work for us or provide services or products to us.

We may also share your Personal Data under the following circumstances:

- I. To respond to court orders, or legal process, or to establish our legal rights or defend against legal claims.
- II. if we are acquired by or merged with another company.

International Data Transfer

The data collected from you is stored in India. We may transfer your Personal Data to other countries outside your country of residence for any of the purposes defined in this Privacy Notice to the entities mentioned above. Any Personal Data that we transfer will be protected in accordance with this Privacy Notice.

How Do We Secure Your Personal Data?

We are committed to protecting your Personal Data in our custody. We take reasonable steps to ensure that appropriate physical, technical and managerial safeguards are in place to protect your Personal Data from unauthorized access, alteration, transmission, and deletion. We train our employees about the importance of maintaining the privacy and security of your Personal Data. We ensure that the third parties with whom we share your Personal Data under appropriate contracts; take appropriate security measures to protect your Personal Data in line with our policies.

How Long Do We Keep Your Personal Data?

We retain your Personal Data for as long as it is required to fulfil the purposes outlined in this Privacy Notice and for legal or regulatory reasons.

How Do We Use Cookies and other Tracking Mechanisms?

We use cookies and other tracking mechanisms on our website to collect data about you. We use the data collected from cookies and trackers to analyze trends and statistics. This will help us optimize and customize your website experience and to provide better website functionalities.

We collect Personal Data about you via Mobile Applications using permissions such as camera contacts/telephone, location, photo, SMS, etc. Your iOS and Android devices will notify you of the permissions that our app seeks and will provide you an option to consent to or refuse the permission. We use the data obtained through permissions to provide the functionalities through the Mobile Applications.

What Are Your Privacy Rights?

You have certain rights regarding your Personal Data that is with us, and we commit to provide you with them.

Right to Confirmation and Access: You have the right to get confirmation and access to your Personal Data that is with us along with other supporting information.

Right to Correction: You have the right to ask us to correct your Personal Data that is with us that you think is inaccurate. You also have the right to ask us to complete your Personal Data that you think is incomplete.

Right to Erasure: You have the right to ask us to erase your Personal Data that is with us under certain circumstances.

Right to Nominate: You have the right to nominate a person who can manage your personal data on behalf of you.

Right to Lodge a Complaint with the Authority: You have the right to lodge a complaint with the Regulator. If you wish to make a request to exercise any of your rights, you can contact us using the details in the '[Contact Us](#)' section of this Privacy Notice.



Links to Other Websites

Our website may contain links to websites of other organisations. This Privacy Notice does not cover how that organisation processes Personal Data. We encourage you to read the Privacy Notices of the other websites you visit.

How Do We Keep This Notice Up to Date?

We regularly review and update our Privacy Notice to ensure it is up-to-date and accurate. Any changes we may make to this Privacy Notice in the future will be posted on this page. When we post changes to this Privacy Notice, we will revise the "last updated" date.

Limitation of Liability

To the extent permissible under the law, we shall not be liable for any indirect, incidental, special, consequential or exemplary damages, including but not limited to, damages for loss of profits, goodwill, data, information, or other intangible losses (even if we have been advised of the possibility of such damages), arising out of this Privacy Policy.

Governing Law, Jurisdiction and Dispute Resolution

This Privacy Policy shall be construed and governed by the laws of India without regard to principles of conflict of laws. All disputes, differences, claims, controversies and the like, which may arise between the parties to this Privacy Policy, including construction, meaning or operation or effect of the same shall be referred to sole arbitration of an arbitrator to be nominated by the MCCI Arbitration, Mediation and Conciliation Centre (MAMC), The Madras Chamber of Commerce and Industry, 'Karumuttu Centre', First Floor, No. 634, Anna Salai, Nandanam, Chennai – 600 035, at the request of the authorised signatory of either TVS Motor or yourself, as the case may be, and such arbitration shall be conducted in accordance with the provisions of the Arbitration and Conciliation (Amendment) Act, 2021, or its statutory amendments, and in accordance with the MAMC's Rules of Arbitration and Conciliation or its amendments, in English language, and the seat of arbitration shall be at Chennai; the venue of arbitration shall be as per the choice of the MAMC-appointed arbitrator. The Award passed by the Arbitrator shall be final and binding on both the Parties.

How Do You Contact Us?

For any further queries and complaints related to privacy or exercising your rights, you could reach our Data Protection Officer at the following address:

Chief Information Security Officer At

dpo@tvsmotor.com

Business Address:

**Prathik Tech Park,
93/4, Veerasandra Village,
Attibele Hobli, Electronic City,
Bengaluru, Karnataka 560100**



DESCRIPTION	TVS APACHE RTR 200 4V USD
MANUFACTURER	TVS MOTOR COMPANY LIMITED P.B. No1, Bythahalli, Kadakola post, Mysore - 571 311, India.
ENGINE	
Type	Single cylinder, 4 stroke, air cooled, SOHC, fuel injection
Cylinder bore	66 mm
Stroke	57.8 mm
Piston displacement	197.75 cc
Compression ratio	10.0 ± 0.5 : 1
Maximum power in kW	15.32 kW @ 9000 rpm (in Sport Mode) 12.74 kW @ 7800 rpm (in Urban and Rain Mode)
Maximum torque in Nm	17.25 Nm @ 7250 rpm (in Sport Mode) 16.51 Nm @ 6000 rpm (in Urban and Rain Mode)
Maximum speed	127 km/h in 5th gear (in Sport Mode) 105 km/h in 5th gear (in Urban and Rain mode)
Engine idling rpm (under warm condition)	1650 ± 200 rpm (in Sport Mode) 1450 ± 200 rpm (in Urban and Rain Mode)
Air filter	Viscous Paper filter
Oil filter	Wire mesh and micronic paper filter
Lubrication system	Forced wet sump
Starting system	Electric starter
Emission norms	BS VI

DESCRIPTION		TVS APACHE RTR 200 4V USD
TRANSMISSION		
Clutch		Wet - multiplate type
Gear shift pattern		1 down and 4 up
Primary transmission		Helical gears
Secondary transmission		Chain and sprockets
GEAR RATIO		
I gear		2.917
II gear		1.857
III gear		1.333
IV gear		1.050
V gear		0.880
Primary reduction		2.818
Secondary reduction		3.461
CHASSIS		
Overall length		2020 mm (without mud flap) / 2050 mm (with mud flap)
Overall width		820 mm
Overall height		1050 mm (without visor)
Seat height		800 mm
Ground clearance (unladen)		180 mm
Wheel base		1353 mm



DESCRIPTION	TVS APACHE RTR 200 4V USD
CHASSIS	
Kerb weight (with toolkit and 90% of fuel)	151 kg (Dual channel ABS)
Pay load	150 kg
Maximum laden weight	301 kg (Dual channel ABS)
Steering angle	35° (both sides)
Caster angle	25.8°
Frame	Double Cradle Split Synchro STIFF (DCSSS)
Front suspension	Upside down forks with 37D
Rear suspension	Gas charged mono shock absorber, 7 step adjustable with rectangular swing arm
Trail length	95.5 mm
BRAKES	
Front	Hand operated, 270 mm petal disc
Rear	Foot operated, 240 mm petal disc

DESCRIPTION		TVS APACHE RTR 200 4V USD
TYRE		
Front tyre size	90/90-17 49P (Tubeless) / 90/90-17 M/C 49P (Tubeless)	
Rear tyre size	130/70 R17 M/C 62P Tubeless (Radial tyre) / 130/70 - 17 M/C 62P Tubeless	
Front tyre pressure*	1.75 kg/cm ² (25 psi) - in cold condition	
Rear tyre pressure - Solo*	2.00 kg/cm ² (28 psi) - in cold condition	
Rear tyre pressure - Dual*	2.25 kg/cm ² (32 psi) - in cold condition	
ELECTRICAL		
Type	AC generator	
Ignition system	ECU - 3D Ignition timing map	
Spark plug	BOSCH - UR4KE / CHAMPION - RG8MC5	
Spark plug gap	0.8 ± 0.1 mm	
Battery type	VRLA or flooded	
Battery capacity	12V, 8 Ah MF	
Generator	Flywheel magneto 235 / 300W	
Head lamp	13.5V, 36W Max projector lamp	
DRL / FPL	13.5V, 11W Max / 2W Max	
Tail / brake lamp	LED lamps (1W max / 2.5W max)	

* The pneumatic tyres fitted in this vehicle meet the requirements specified by BIS and comply with the requirements under the Central Motor Vehicles Rules (CMVR), 1989.



DESCRIPTION	TVS APACHE RTR 200 4V USD	
ELECTRICAL		
Turn signal lamp	13.5V, 4W x 4 LED	
Number plate lamp	12V, 5W x 1	
Instrument panel	TFT / LED indicators	
Horn	12V, DC x 2	
Fuse	Main	12V, 25A x 1
	ABS	12V, 20A x 1
	Load	12V, 15A x 1
	EMS	12V, 10A x 1

 **Caution**

in case of any LED lamp failure part need to be replaced completely

DESCRIPTION		TVS APACHE RTR 200 4V USD
CAPACITIES		
Fuel tank capacity#		12 l
Fuel		BS VI petrol with minimum RON 98 (containing upto 20% of ethanol by volume)
Engine cum transmission oil grade		TVS TRU4 FULLY SYNTHETIC OIL (SAE 10W30 API-SL, JASO MA2)
Engine cum transmission oil qty		1200 ml (during regular service) 1400 ml (incase of disassembly)
Front fork oil grade		IOC / HPCL - Front fork fluid
Front fork oil capacity		Fork leg LH - 340 ± 3 cc Fork leg RH - 390 ± 3 cc
Brake fluid grade		TVS Girling DOT 3 / DOT 4

 **Note**

Specifications and competence are subject to change without notice.

The fuel tank is not a measuring instrument and the capacity of fuel tank may slightly vary from the indicated capacity.



Dear Customer,

It is mandatory under the Motor Vehicles Act to insure all motor vehicles. No motor vehicle can be used in a public place without a valid policy of insurance issued by an authorised insurer. Driving a motor vehicle without any such insurance is an offense under Motor Vehicles Act.

To assist our Customers on their insurance requirements such as the prompt issue and renewal of policies as well as expeditious settlement of claims if any, our preferred insurers are:





ALWAYS USE TVS-M GENUINE PARTS




ONE NAME THAT MEANS PERFORMANCE.

The TVS Apache RTR 200 4V carries forward a legacy of race-tuned precision, sharper control, and advanced tech that redefines street performance.

Its 20.8 PS engine delivers explosive acceleration and a crisp throttle response—made more intelligent with 3 Ride Modes (Urban, Sport, Rain), Dual-channel ABS with RLP Control, and SmartXonnect with Voice Assist.

Every detail is built for the ride:

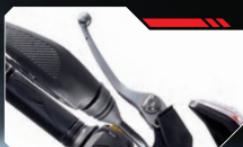

Adjustable Brake and Clutch Levers



LED Headlamp with DRLs



Fully Digital Instrument Cluster



Hydroformed Handlebar



37mm Upside Down Suspension



Striking Red Alloy Wheel



New colour options:
Glossy Black, Matte Black,
Granite Grey

And now, it gets even sharper with