

MAINTENANCE

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Item \ Period Km	PERIODIC SERVICES					
	1 month 500 - 750	3 months 2500 - 3000	6 months 5000 - 6000	9 months 8500 - 9000	12 months 11500 - 12000	15 months 14500 - 15000
Engine cum transmission oil	R	I & T	R	I & T	R	I & T
Oil filter	C	–	C	–	C	–
Oil circulation	I	–	I	–	I	–
Centrifugal filter	C	–	C	–	C	–
Spark plug	C & A	C & A	C & A	C & A	R	C & A
Compression pressure	–	–	I	–	I	–
Air cleaner elements	I & C	I & C	I & C	I & C	I & C	R
SAI / PCV filter elements	I & C	I & C	I & C	I & C	R	I & C
Engine breather pipe	–	C	C	C	C	C
Carburettor assembly ²	I	I	I & C	I	I & C	I
Tappet clearance ²	I & A	I & A	I & A	I & A	I & A	I & A
Head cylinder / piston ²	–	–	–	–	–	–
Fuel cock sediment bowl	C	C	C	C	C	C
Hose fuel ³	I	I	I	I	I	I
Gear shift lever free play ²	I & A	I & A	I & A	I & A	I & A	I & A
Rotary gear function	I	I	I	I	I	I
Throttle cable play ²	I & A	I & A	I & A	I & A	I & A	I & A
Choke operation	–	I	I	I	I	I

MAINTENANCE

Item \ Period Km	PERIODIC SERVICES					
	1 month 500 - 750	3 months 2500 - 3000	6 months 5000 - 6000	9 months 8500 - 9000	12 months 11500 - 12000	15 months 14500 - 15000
Steering play ²	I & A	I & A	I & A	I & A	I & A	I & A
Front fork oil ⁴	I	I	I	I	I	I
All fasteners ²	I & TI	I & TI	I & TI	I & TI	I & TI	I & TI
Rear sprocket fasteners	–	–	–	–	TI	–
Drive chain	I, L & A	I, C, L & A	I, C, L & A	I, C, L & A	I, C, L & A	I, C, L & A
All bulbs, horn and beeper	I	I	I	I	I	I
Head lamp beam	I & A	I & A	I & A	I & A	I & A	I & A
Brake light switch	–	I & A	I & A	I & A	I & A	I & A
Battery electrolyte level	I & T	I & T	I & T	I & T	I & T	I & T
Specific gravity and voltage ⁵	I	I	I	I	I	I
Brakes	I & A	I & A	I & A	I & A	I & A	I & A
Brake pedal shaft	–	–	C	–	C	–
Tyres (air pressure)	I & A	I & A	I & A	I & A	I & A	I & A
Wheel freeness	I	I	I	I	I	I
Muffler drain hole ²	C	C	C	C	C	C
Idling rpm & CO% ⁶	I & S	I & S	I & S	I & S	I & S	I & S

R - Replace; I - Inspect; T - Top up; C - Clean; A - Adjust; TI - Tighten; L - Lubricate; S - Set; D - Decarbonise

² If necessary

³ Replace if necessary

⁴ Inspect for leak

⁵ Recharge if necessary

⁶ Idling CO% should be set with the help of exhaust gas analyser and tachometer only

MAINTENANCE

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Item \ Period Km	PERIODIC SERVICES				
	18 months 17500 - 18000	21 months 20500 - 21000	24 months 23500 - 24000	27 months 26500 - 27000	30 months 29500 - 30000
Engine cum transmission oil	R	I & T	R	I & T	R
Oil filter	C	–	C	–	C
Oil circulation	I	–	I	–	I
Centrifugal filter	C	–	C	–	C
Spark plug	C & A	C & A	R	C & A	C & A
Compression pressure	I	–	I	–	I
Air cleaner elements	I & C	I & C	I & C	I & C	R
SAI / PCV filter elements	I & C	I & C	R	I & C	I & C
Engine breather pipe	C	R	C	C	C
Carburettor assembly ²	I & C	I	I & C	I	I & C
Tappet clearance ²	I & A	I & A	I & A	I & A	I & A
Head cylinder / piston ²	D	–	–	–	–
Fuel cock sediment bowl	C	C	C	C	C
Hose fuel ³	I	I	I	I	I
Gear shift lever free play ²	I & A	I & A	I & A	I & A	I & A
Rotary gear function	I	I	I	I	I
Throttle cable play ²	I & A	I & A	I & A	I & A	I & A
Choke operation	I	I	I	I	I

MAINTENANCE

Item	Period Km	PERIODIC SERVICES				
		18 months 17500 - 18000	21 months 20500 - 21000	24 months 23500 - 24000	27 months 26500 - 27000	30 months 29500 - 30000
Steering play ²		I & A	I & A	I & A	I & A	I & A
Front fork oil ⁴		R	I	I	I	I
All fasteners ²		I & TI	I & TI	I & TI	I & TI	I & TI
Rear sprocket fasteners		–	–	TI	–	–
Drive chain		I, C, L & A	I, C, L & A	I, C, L & A	I, C, L & A	I, C, L & A
All bulbs, horn and beeper		I	I	I	I	I
Head lamp beam		I & A	I & A	I & A	I & A	I & A
Brake light switch		I & A	I & A	I & A	I & A	I & A
Battery electrolyte level		I & T	I & T	I & T	I & T	I & T
Specific gravity and voltage ⁵		I	I	I	I	I
Brakes		I & A	I & A	I & A	I & A	I & A
Brake pedal shaft		C	–	C	–	C
Tyres (air pressure)		I & A	I & A	I & A	I & A	I & A
Wheel freeness		I	I	I	I	I
Muffler drain hole ²		C	C	C	C	C
Idling rpm & CO ⁶		I & S	I & S	I & S	I & S	I & S

R - Replace; I - Inspect; T - Top up; C - Clean; A - Adjust; TI - Tighten; L - Lubricate; S - Set; D - Decarbonise

The above maintenance schedule is given for the warranty period. In the post warranty period, it is recommended that maintenance services are done in similar intervals for good performance of your vehicle.

MAINTENANCE

LUBRICATION SCHEDULE

Item	Interval	Initial 500 - 750 km	Every 2500 - 3000 km	Every 5000 - 6000 km	Every 8500 -9000 km
Throttle grip		–	–	–	Grease
Speedometer gear pinion		–	–	Grease	–
Brake cam		–	–	Grease	–
Drive chain		TRU SPRAY	TRU SPRAY	–	–
Brake pedal shaft		–	–	Grease	–
Kick starter pedal pivot		4T oil	4T oil	–	–
Centre stand and side stand pivot		–	–	Grease	–
Steering stem bearings Clean and lubricate with fresh grease every 12000 km				
Swing arm shaft Grease every 2 years				
Front brake and throttle cables Lubricate at ends using grease in all services				