

**PERIODIC MAINTENANCE SCHEDULE - FREE SERVICES** (months or km whichever occurs earlier)

Period Km	FREE SERVICES				
	1 month 500 - 750	3 months 2500 - 3000	6 months 5500 - 6000	9 months 8500 - 9000	12 months 11500 - 12000
Engine cum transmission oil	R	R	R	R	R
Oil filter	R	R	R	R	R
Oil sump filter	I & C	–	I & C	–	I & C
Spark plug	I	I	I	I	I
Compression pressure	–	–	I	–	I
Air cleaner elements	I & C	I & C	I & C	I & C	I & C
Engine breather pipe	–	C	C	C	C
Carburettor assembly <sup>3</sup>	–	C & A	C & A	C & A	C & A
Tappet clearance <sup>3</sup>	I & A	I & A	I & A	I & A	I & A
Fuel cock sediment bowl	C	C	C	C	C
Clutch cable	I & A	I & A	I & A	I & A	I & A
Throttle cable	–	I & A	I & A	I & A	I & A
Steering play <sup>3</sup>	I & A	I & A	I & A	I & A	I & A
All fasteners <sup>3</sup>	I & A	I & A	I & A	I & A	I & A
Drive chain <sup>3</sup>	C, L & A	C, L & A	C, L & A	C, L & A	C, L & A

## Maintenance

Period Km	FREE SERVICES				
	1 month 500 - 750	3 months 2500 - 3000	6 months 5500 - 6000	9 months 8500 - 9000	12 months 11500 - 12000
Pivot gear shift lever	C	C	C	C	C
All bulbs and horn	I	I	I	I	I
Head lamp beam	I & A	I & A	I & A	I & A	I & A
Battery electrolyte level	I & T	I & T	I & T	I & T	I & T
Specific gravity and voltage <sup>4</sup>	I	I	I	I	I
Brake fluid level	I & T	I & T	I & T	I & T	I & T
Brake pads wear <sup>2</sup>	I	I	I	I	I
Brake hose	Replace every three years				
Tyres (air pressure)	I & A	I & A	I & A	I & A	I & A
Idling CO%	I & S	I & S	I & S	I & S	I & S

R - Replace; I - Inspect; C - Clean; A - Adjust; L - Lubricate; T - Top up; S - Set

<sup>2</sup> Replace parts if necessary

<sup>3</sup> If necessary

<sup>4</sup> Recharge if necessary

**PERIODIC MAINTENANCE SCHEDULE - PAY SERVICES** (months or km whichever occurs earlier)

Period Km	PAY SERVICES					
	15 months 14500-15000	18 months 17500-18000	21 months 20500-21000	24 months 23500-24000	27 months 26500-27000	30 months 29500-30000
Engine cum transmission oil	R	R	R	R	R	R
Oil filter	R	R	R	R	R	R
Oil sump filter	–	I & C	–	I & C	–	I & C
Spark plug	R	I	I	I	I	R
Compression pressure	–	I	I	I	I	I
Air cleaner elements	I & C	I & C	R	I & C	I & C	I & C
Engine breather pipe	C	C	C	C	C	C
Carburettor assembly <sup>3</sup>	C & A	C & A	C & A	C & A	C & A	C & A
Tappet clearance <sup>3</sup>	I & A	I & A	I & A	I & A	I & A	I & A
Head cylinder / piston	–	D	–	–	–	–
Fuel cock sediment bowl	C	C	C	C	C	C
Clutch cable	I & A	I & A	I & A	I & A	I & A	I & A
Throttle cable	I & A	I & A	I & A	I & A	I & A	I & A
Steering play <sup>3</sup>	I & A	I & A	I & A	I & A	I & A	I & A
Front fork oil	–	R	–	–	–	–

## Maintenance

Period Km	PAY SERVICES					
	15 months 14500-15000	18 months 17500-18000	21 months 20500-21000	24 months 23500-24000	27 months 26500-27000	30 months 29500-30000
Pivot gear shift lever	C	C	C	C	C	C
All fasteners <sup>3</sup>	I & A	I & A	I & A	I & A	I & A	I & A
Drive chain <sup>3</sup>	C, L & A	C, L & A	C, L & A	C, L & A	C, L & A	C, L & A
All bulbs and horn	I	I	I	I	I	I
Head lamp beam	I & A	I & A	I & A	I & A	I & A	I & A
Battery electrolyte level	I & T	I & T	I & T	I & T	I & T	I & T
Specific gravity and voltage <sup>4</sup>	I	I	I	I	I	I
Brake fluid level	I & T	I & T	I & T	I & T	I & T	I & T
Brake pads wear <sup>2</sup>	I	I	I	I	I	I
Brake hose	Replace every three years					
Tyres (air pressure)	I & A	I & A	I & A	I & A	I & A	I & A
Idling CO%	I & S	I & S	I & S	I & S	I & S	I & S

R - Replace; I - Inspect; C - Clean; A - Adjust; L - Lubricate; T - Top up; S - Set; D - Decarbonise

<sup>2</sup> Replace parts if necessary    <sup>3</sup> If necessary    <sup>4</sup> Recharge if necessary

The above maintenance schedule is given for the warranty period. In the post warranty period it is recommended that maintenance services are done in similar intervals for good performance of your vehicle.

**LUBRICATION SCHEDULE**

Item	Interval	Initial 500 - 750 km	Every 2500 - 3000 km	Every 5500 - 6000 km	Every 8500 - 9000 km
Throttle grip		–	–	–	Grease
Brake cam		–	–	Grease	Grease
Drive chain		.... Grease and SAE 30/40 oil mixed in 50/50 proportion ....			
Brake pedal shaft		Grease	Grease	Grease	Grease
Centre stand pivot		Grease	Grease	Grease	Grease
Side stand pivot		Grease	Grease	Grease	Grease
Kick starter pedal pivot		4T oil	4T oil	4T oil	4T oil
Ball joint gear shift lever		–	–	Grease	–
Steering stem bearings		..... Grease every year .....			
Swing arm bearings		..... Grease every 2 years .....			
Front brake, clutch and throttle cables		..... Lubricate at ends using grease .....			