

MAINTENANCE

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Period Km	PERIODIC SERVICES						
	1 months 1000	2 months 2000	4 months 4000	6 months 6000	8 months 8000	10 months 10000	12 months 12000
Transmission oil	R	I & T	R	I & T	R	I & T	R
Spark plug	C & A	C & A	C & A	R	C & A	C & A	R
Air cleaner elements ²	I & C	I & C	I & C	I & C	I & C	I & C	I & C
Filter element SAI	–	–	–	–	–	R	–
Carburettor assembly ³	I & C	I & C	I & C	I & C	I & C	I & C	I & C
Ignition timing	–	I	I	I	I	I	I
Head cylinder / piston	–	–	–	D	–	–	D
Exhaust pipe & silencer	–	–	–	D	–	–	D
Clutch shoe & housing clutch	–	–	–	–	–	–	I
Kick starter	–	–	–	–	–	–	I
Fuel hose	Replace every three years						
Fuel filter ²	I	I	I	I	I	I	R
Fuel cock filter ²	–	–	–	I & C	–	I & C	R
Throttle cable	I & A	I & A	I & A	I & A	I & A	I & A	I & A
All control cables	I	I	I	I	I	I	I
Steering play ³	I & A	–	I & A	–	I & A	–	C, L & A
Front fork assembly	I	–	I	–	I	–	I

MAINTENANCE

PERIODIC MAINTENANCE SCHEDULE (months or km whichever occurs earlier)

Period Km	PERIODIC SERVICES						
	1 months 1000	2 months 2000	4 months 4000	6 months 6000	8 months 8000	10 months 10000	12 months 12000
All fasteners ³	I & TI	I & TI	I & TI	I & TI	I & TI	I & TI	I & TI
Drive chain ²	C, L & A	C, L & A	C, L & A	C, L & A	C, L & A	C, L & A	C, L & A
Spokes & nipples	–	I & A	–	I & A	–	–	I & A
Front fork oil (only in HD)	–	–	–	–	–	–	R
All bulbs & horn	I	I	I	I	I	I	I
Head lamp beam	I & A	I & A	I & A	I & A	I & A	I & A	I & A
Brakes	I & A	I & A	I & A	I & A	I & A	I & A	I & A
Tyres (air pressure)	I & S	I & S	I & S	I & S	I & S	I & S	I & S
Idling CO% ⁴	I & S	I & S	I & S	I & S	I & S	I & S	I & S

R - Replace; I - Inspect; T - Top up; C - Clean; A - Adjust; D - Decarbonise; L - Lubricate; TI - Tighten; S - Set

² Replace parts if necessary ³ If necessary

⁴ Idling CO% should be set with the help of exhaust gas analyser and tachometer only

The above maintenance schedule is given for the warranty period. In the post warranty period it is recommended that maintenance services are done in similar intervals for good performance of your vehicle.

MAINTENANCE

LUBRICATION SCHEDULE

Item	Interval	Initial 1000 km	Every 2000 km	Every 6000 km	Every 12000 km
Throttle grip		–	–	Grease	–
Brake cam		–	–	Grease	–
Drive chain	 TRU SPRAY			
Control levers		Grease	Grease	–	–
Centre stand and side stand pivot		Grease	Grease	–	–
Speedo hub drive		–	–	–	Grease
Fork tube inner		–	–	–	Grease
Kick starter lever		4T oil	4T oil	–	–
Steering stem bearings		–	–	–	Grease
Swing arm bearings	 Clean and lubricate with fresh grease every 2 years			
All control cables	 Lubricate at ends using grease			