.No	Sub Activity		1000	5000	10000	15000	20000	25000 3	30000	35000 400	00 45	5000 50	000 550	00 60000	65000	70000	75000	80000	85000	90000	95000	100000
	<u>.</u>		D	O IT YO	URSELF -	- SERVICE	OPERA ^T	rions to I	BE PER	FORMED BY	CUSTO	MER	<u>Ā</u>	<u>ā</u>		.i						<u></u>
1	Clean	Wash and Clean Vehicle										Every	1000 kn	าร		••••••		***************************************				
1		Tyre pressure											0 Days O									
2	Check & Top up	Brake fluid in brake fluid reservoir		•		•		•		•	(•)	•		•		•		•	
3		Lubricate Brake Pedal Fulcrum Joint		•		•		•		•	(•)	•		•		•		•	
4		Clean and Adjust Steering Friction Plate		•		•		•		•	(•)	•		•		•		•	
	.i.	PERI	ODIC N	/AINTEN	IANCE SI	ERVICE -	SERVICE	OPERATION	ONS TO	D BE PERFOR	MED A	T WORK	SHOP		.i			ji				<u></u>
1		Brake fluid in brake fluid reservoir			•		•		•)		•	•		•		•		•		•
2	Check, Inspect & Top up	Battery health			•		•		•)	<u> </u>	•	•		•		•		•		•
3		Auxiliary battery - Volt & Sp Gravity					•)			•				•			***************************************	•
1		Motor foundation bolt	•		•		•		•)		•	•		•		•		•		•
2		Brake Effectiveness	•		•		•		•)		•	•	-	•		•		•		•
3		Fasteners of Door assy (hinge), dash board, rear view mirror, wind shield, Soft top frame and body	•		•		•		•)		•	•		•		•		•		•
4		Body bolts			•		•		•)		•	•	0	•		•		•		•
5		Tyre pressure	•		•		•		•)		•	•		•	••••••	•		•		•
6		Steering Lock Nut	•		•		•		•)		•	•		•	•••••	•		•		•
7		Handle bar bolt Tightness Whenever Customer Complains															Ā					
8		Wheel Rim Nut Tightness			•		•		•	•)	,	•	•		•		•		•		•
1	Replace	Transmission Oil/Gearbox oil											•									•
2		Brake Shoe				0			•					•						•		D.
3		Replace Front shock absorber																7				
4		Replace Rear shock absorber										70,	000 km									
1	Clean	Vehicle	•		•		•		•)		•	•		•		•		•		•
2		Brake Shoe Liner			•		•			•)		•			•		•				•
1	Inspect	Inspect Electrical connection checking	•		•		•		•)		•	•		•		•		•		•
2		Rubber Bellow for Crack or Damage	•		•		•		•	•)		•	•		•		•		•		•
1	Electrical	Check cables junction meeting areas			•		•		•)		•	•		•		•		•		•
2		Check all lights, horn & switches functioning			•		•		•	•)		•	•		•		•		•		•
1	Greasing or Lubrication	Steering races & balls			•		•		•)		•	•		•		•		•		•
2		Brake lever fulcrum point			•		•		•)		•	•		•		•		•		•
3		Muff cup (Flange)			•		•		•)		•	•		•		•		•		•
1	Others	Tyre Rotation			•		•		•)		•	•		•		•		•		•
2		Check battery voltage, SOC% & charge if required			•		•		•)		•	•		•		•		•		•

NOTE:

Before lubricating each part, clean them thoroughly, remove rusty spots if any. Lubricate exposed parts which are subject to rust with either engine oil or grease whenever the vehicle is used / operated under

wet or rainy conditions

Perform the Do it yourself activity by Customers as per the Mentioned Period.