

TVS *Racing*

RR
310
RACING DNA UNLEASHED



Dear Racer,

Thank you for choosing the TVS RR 310. The most powerful and technologically advanced motorcycle yet.

The precision racer has been shaped in the wind tunnel, honed on the dyno and perfected over countless laps on the racetrack. The flagship racer is the culmination of the TVS Racing heritage since its inception in 1982. The racing prowess reflects in every straight line and every corner of the track. The RR 310 has been crafted to be the ultimate racer.

This manual explains the features and operations of your TVS RR 310. Please read it carefully and follow the instructions to enjoy the racing experience.

To prolong your journey on the TVS RR 310, we urge you to get your TVS RR 310 services only at TVS Motor Company Authorized Dealers.

Here's to breaking lap records on your RR 310.

TVS Motor Company Limited

CONTACT(S) FOR SUPPORT



II

In case, you need any clarification or Service Assistance, please contact our Dealer

Dealer code, name

Address

.....

.....

Contact person name and mobile no. (Sales)

.....

Contact person name and mobile no. (Service)

.....

Email id.....

Or

TVS Motor Company's Area Offices (flip over for addresses)

Or

Toll free number : 1800-258-7111

Email : customercare@tvsmotor.com

CONTACT(S) FOR SUPPORT



Contact at Our Area Offices

TAMILNADU-1 & 4

1. TVS Motor Company Limited
V Floor, Gee Gee Universal,
No. 2, MC Nichols Road,
Chetpet, Chennai 600 031.
Phone : 044-28361651/28361654
Email : AO.Chennai@tvs motor.com

TAMILNADU-2

2. TVS Motor Company Limited
No.10, 2nd floor,
Shree Shanmugapriya Towers,
Kannuswamy Street,
Behind Hotel Annapoorana,
R S Puram, Coimbatore - 641 002.
Phone : 0422-4350060/2541035
Email : AO.Coimbatore@tvs motor.com

TAMILNADU-3

3. TVS Motor Company Limited
D-09, Srinidhi Block, Agrini Apartments,
Andalpuram, TPK Road,
Madurai - 625 003.
Phone : 0452-4208690
Email : AO.Madurai@tvs motor.com

KERALA

4. TVS Motor Company Limited
Ambady Towers, Second Floor,
Door No. 27/631, A6,
Edappally-Pookkattupady Road,
Edappally PO., Cochin - 682 024.
Phone : 0484-2544578/2556938
Email : AO.Cochin@tvs motor.com

ANDHRA PRADESH-1

5. TVS Motor Company Limited
No. D-19, 302, 3rd floor, Gayathri Arcade,
Vikrampuri, Secunderabad - 500 003.
Phone : 040-27840590/27844419
Email : AO.Hyderabad@tvs motor.com

ANDHRA PRADESH-2

6. TVS Motor Company Limited
Door No. 58-2-35, NCK Plaza,
Near NTR Circle, Patamata,
Vijayawada - 520 010.
Phone : 0866-6575100
Email : AO.Vijayawada@tvs motor.com



CONTACT(S) FOR SUPPORT



IV

Area Office Address

KARNATAKA-1

7. TVS Motor Company Limited
No. 600, Anand Surya, 2nd Floor, 15th Cross,
6th Phase, JP Nagar,
Opp. BMTC Stop,
Bangalore - 560 078.
Phone : 080-26653433
Email : AO.Bangalore@tvs motor.com

KARNATAKA-2 & GOA

8. TVS Motor Company Limited
No. 122/111 B, PDP Plaza, 3rd floor,
New Cotton Market,
Karnataka Bank Road, Hubli - 580 029.
Phone : 0836-4250617/4250618
Email : AO.Hubli@tvs motor.com

MAHARASHTRA-1 & 2

9. TVS Motor Company Limited
No. 401, 4th floor,
The Chambers, Plot No. 4/12/3,
Near Ganpati Chowk,
Viman Nagar, Pune - 411 014.
Phone : 020-26632111/26632110
Email : Service.pune@tvs motor.com

MAHARASHTRA-3 & CHATTISGARH

10. TVS Motor Company Limited
Plot No. 206, House No. 241,
Ward No. 73, 1st floor,
West High Court Road,
Dharampeth, Nagpur - 400 010.
Phone : 0712-2569932
Email : AO.Raipur@tvs motor.com
Service.Nagpur@tvs motor.com

GUJARAT

11. TVS Motor Company Limited
109, Ayana Complex,
Opp. Suvarna Villa Bungalows,
100 ft Thaltej Hebbatpur road,
Off : S.G. highway, Thaltej,
Ahmedabad - 380 054.
Phone : 079-65443748
Email : AO.Ahmedabad@tvs motor.com

MADHYA PRADESH-1

12. TVS Motor Company Limited
211-212, 2nd floor,
Chinar Incube Business centre,
Chinar Fortune City,
Near Vrindavan Dhaba,
Hoshangabad Road, Bhopal - 462 026.
Phone : 0755-2499406/2499306
Email : AO.Bhopal@tvs motor.com

CONTACT(S) FOR SUPPORT



MADHYA PRADESH-2

13. TVS Motor Company Limited
301, 3rd floor, Shagun Arcade,
Vijay Nagar circle, A B Road,
Indore - 452 010.
Phone : 9893028266
Email : AO.Indore@tvsmotor.com

UTTAR PRADESH-EAST & CENTRAL

14. TVS Motor Company Limited
1st floor, Cyber Tower, TC-34/V-2,
Vibhuti Khand, Gomti Nagar,
Lucknow - 226 010.
Phone : 0522-4918300/4918301
Email : AO.Upe@tvsmotor.com
AO.upc@tvsmotor.com

UTTAR PRADESH-WEST

15. TVS Motor Company Limited
D-3 & D-4, 2nd floor,
Sector - 10, Noida,
Uttar Pradesh - 201 301.
Phone : 011-29834640/29834773
Email : AO.Upw@tvsmotor.com

DELHI & HARYANA

16. TVS Motor Company Limited
D-3 & D-4, 2nd floor,
Sector - 10, Noida,
Uttar Pradesh - 201 301.
Phone : 011-29834640/29834773
Email : AO.Delhi@tvsmotor.com
AO.Haryana@tvsmotor.com

PUNJAB, HIMACHAL PRADESH, JAMMU & KASHMIR

17. TVS Motor Company Limited
SCF- 10-11, Kalghaidhar Enclave,
Baltana Road, Zirakpur,
District Mohali - 140 603.
Phone : 01762-511659/511661
Email : AO.Chandigarh@tvsmotor.com

RAJASTHAN-1

18. TVS Motor Company Limited
Plot No. 17-18,
2nd floor of National Motors building,
Jhotwara Industrial Area,
Jaipur - 302 012.
Phone : 0141-5150901/5150902
Email : AO.Jaipur@tvsmotor.com

CONTACT(S) FOR SUPPORT



VI

Area Office Address

RAJASTHAN-2

19. TVS Motor Company Limited
204, 2nd floor,
Daulet Chambers,
Near Meera Girls Collage, 4-D,
Sardarpura, Udaipur - 313 004.
Phone : 9001897479
Email : AO.Udaipur@tvs motor.com

BIHAR

20. TVS Motor Company Limited
N-Plaza, Jamal Road,
P.S. Kotwali, Patna - 800 001.
Phone : 0612-2200068/2200069
Email : AO.BNJ@tvs motor.com

ODISHA & JHARKHAND

21. TVS Motor Company Limited
#303, 3rd floor,
Creative Plaza, Rasulgarh,
Bhubaneswar - 751 010.
Phone : 0674-2580019
Email : AO.Bhubaneswar@tvs motor.com

WEST BENGAL

22. TVS Motor Company Limited
Ground floor & First floor,
133 A.S.P. Mukherjee Road,
Opp. Tollygunge Police Station,
Kolkata - 700 026.
Phone : 033-24617092/24617096
Email : AO.kolkata@tvs motor.com

NORTH EAST STATES

23. TVS Motor Company Limited
147, Udayan, Ganesh Guri,
Opp. Punjab National Bank,
R G B. Road,
Guwahati - 781 005.
Phone : 0361-2202030/2202031
Email : AO.Guwahati@tvs motor.com

INTRODUCTION

This Owner's Manual forms an integral part of motorcycle and must be handed over to the new owner if you ever sell your motorcycle.

TVS Motor Company Limited advises you to read this manual carefully in order to familiarise yourself with your **motorcycle**. In case of any clarification, please contact any of our Authorised Main Dealer.

This manual contains important information about controls and operation, technical features, maintenance and care to be taken to keep your vehicle reliable and safe. We recommend that you strictly follow the instructions in this manual, especially those regarding the running-in period and periodic maintenance.


TVS Motor Company Limited declines any liability whatsoever for any mistakes incurred during the development of this manual. All the information in this manual is valid at the time of publication.


TVS Motor Company Limited reserves the right to make any modifications required due to the ongoing development of their products. In such events it is possible that the relevant part of this Owner's Manual does not apply to your vehicle.

TVS *Racing*

Prior permission of TVS Motor Company Limited is required for quoting, copying or reproducing any part of this Owner's Manual.

This Owner's manual uses a set of symbols with special meanings. They are:

 **Warning** Failure to comply with these instructions may put you at risk, and could lead to severe injury or deadly accidents.

 **Caution** Follow these instructions to avoid risk of damage to the motorcycle and/or its components.

 **Note** Provides additional information about the current operation.

The terms 'LH' and 'RH' are referred to the motorcycle viewed from the riding position.

Accessories shown in the picture may not be the part of standard equipment.

For your safety, as well as to preserve warranty, reliability and road worthy of your motorcycle, use original TVS Motor Company Limited spare parts only.

In order to ensure the reliability of your product, you are strongly advised to refer our Authorised Main Dealers for any service requiring particular technical expertise.

Skilled personals of our Dealer have the tools required to perform any servicing job to the highest professional standards to ensure smooth running and long life of your motorcycle.

TABLE OF CONTENTS



DESCRIPTION	PAGE No.
RUNNING-IN RECOMMENDATIONS	01
SAFE RIDING TIPS	02
Safe Riding Recommendations	02
Maximum Permissible Load	05
ACCESSORY INSTALLATION TIPS	06
KNOW YOUR MOTORCYCLE	07
Anti-Lock Brake System	07
EMS a Glance	09
Ride by Wire	10
RT Slipper Clutch	11
Emission Control	12
Vehicle Identification Number	14
Control Key	15
Location of Parts	
Vehicle RH Side View	16
Vehicle LH Side View	18
CONTROLS & ITS OPERATIONS	20
Ignition cum Steering Lock	21
Clutch Lever	22
Switch Assembly LH	23
Gear Shift Pedal	27
Rear Brake Pedal	28
Switch Assembly RH	28

Throttle Twist Grip	30
Front Brake Lever	30
CONNECTED TFT INSTRUMENT CLUSTER	31
TFT Instrument Cluster	33
TFT Multifunction Display	36
Menu Indication	37
Ride Mode	38
Urban Mode	40
Rain Mode	48
Sport Mode	49
Track Mode	50
Trip Details	51
Trip A	51
Trip B	51
Trip C	51
My Vehicle	52
Service	52
Performance Record	53
Preferences	55
Connectivity	55
Display Set Up	57
Custom Widgets	63

TABLE OF CONTENTS



X

Table of Contents

DESCRIPTION

PAGE No.

TVS CONNECT APP

69

MAJOR COMPONENTS

79

Cooling System

80

Fuel Tank Cap

81

Side Stand

83

Rear Shock absorber

84

Seat Lock

85

RIDING YOUR MOTORCYCLE

87

Before Riding

87

While Riding

89

Starting the Engine

90

Moving the vehicle

91

Braking

92

Parking

92

Fuel Recommendation

93

Fuel Economy Tips

94

GENERAL ADJUSTMENTS

96

Rear View Mirrors LH & RH

96

Gear Shift Pedal Position

96

Rear Shock absorber Pre-Load

97

Head Lamp Aiming

99

MAJOR MAINTENANCE

101

Maintenance Schedule

101

Planned Maintenance Schedule (Table)

102

Safety Precautions

105

Engine Oil Level

106

Clutch Free Play

108

Brake Fluid Level

110

Brake Pad Wear

111

Rims and Tubeless Tyres

111

Drive Chain

116

Front Wheel

119

Rear Wheel

121

Battery

125

Fuses

126

Mirror Assembly

129

Diagnostic Connector

130

Cleaning your Motorcycle

131

Storage Procedure

132

Restoring Vehicle for Use

133

Taking Long Trips

134

GENERAL INFORMATION

135

Tool Kit

135

Auxiliary Stand (Paddock Stand)

136

TABLE OF CONTENTS

DESCRIPTION	PAGE No.
WARRANTY AND SERVICES	139
Warranty Policy	139
Service information	145
Pre-Delivery Inspection	147
Planned Service Schedule	148
Pickup & Drop	149
Planned Service Record Sheet	151
Additional Service Record Sheet	152
TECHNICAL DATA	153
Recommended Fuel and Lubricants	153
Engine	155
Transmission	156
Dimensions	157
Frame and Suspension	158
Wheel and Brakes	159
Free Plays	160
Electricals	161
Important Torque	162
Basic Trouble Shooting	163

Running-in Recommendations

Running-in is essential to preserve engine life and performance over time. Twisty roads and gradients are ideal to run in the engine, brakes and suspension effectively. The first 1000 km is a running-in period for your motorcycle.

Maximum engine speed during running-in

0 to 1000 km - below 7000 rpm

During the first 1000 km, avoid the full throttle starts and rapid acceleration, which could expose the engine parts to excessive stress. It is advisable to run the engine at varying load and rpm, though still within recommended rpm limit. Avoid riding at constant engine rpm for prolonged periods.

During initial running, use brakes gently. Do not brake hard or keep brake applied for too long to enable a correct break-in of brake pad friction material against the brake discs.

To allow all the mechanical parts of motorcycle to adapt each another, and to avoid reduction of engine components life, it is advisable to avoid sudden acceleration and running the engine at high rpm for too long, especially uphill.

Check the drive chain frequently and if required adjust it. Also ensure that the chain is lubricated as required to increase its service life.



Caution

On completion of running-in period, scheduled maintenance service should be observed carefully without fail. Failure to comply with this will result in damage to the engine parts and other key parts of the vehicle or shorter engine life.

Keeping to the running-in recommendations will ensure longer engine life and reduce the need for overhauls and re-tuning.

Safe Riding Recommendations

The following points are applicable for every day usage of your motorcycle and should be observed carefully for safe riding of your motorcycle.

Riding skills and your mechanical knowledge forms the foundation of safe riding practices. We suggest you to practice riding your TVS RR 310 in a low-traffic condition until you are thoroughly familiar with your **motorcycle** and its controls.

Most of the accidents are the result of inexperience of rider. Always make sure you are carrying your driving license with you; you must have a valid license that enables you to ride a motorcycle of this kind. Avoid lending your motorcycle to the persons who are inexperienced and not holding a valid driving license.

A motorcycle is not designed to provide impact protection, so defensive riding in addition to wearing of protective apparel is very important. **Please do not let the protective apparels give you a false sense of security.**

Both the rider and the pillion should always wear an ISI approved, comfortable and **good quality safety helmet** before riding the vehicle. Because, one of the most serious injury that can happen is an head injury.

You should also have a good quality goggles to protect your eyes and help your vision.

Avoid wearing loose clothes or accessories that could become tangled in the controls or limit your field of vision.

Riding at proper speed and avoiding sudden acceleration are not only important for safety and low fuel consumption. It is also important for longer life of vehicle and smoother operation.

Avoid use of mobile phones while riding as it could lead to fatal accident.

To prevent or minimise accident, **never consume alcohol or drugs** before or during the operation of your vehicle. Even minimal consumption of these will affect the rider's ability to control the vehicle.

Ride within the law and observe national and local rules. Always respect speed limits. However, adjust your speed according to the visibility, road and traffic conditions.

SAFE RIDING TIPS

TVS *Racing*

Be sure about your visibility and do not ride with the blind spot of vehicles or obstruction ahead you.

Take additional care at road junctions, exits of private land, car parks and on the service roads to highways.

Before changing the lanes or take a turn, look over your shoulder and make sure that your way is clear. Do not completely rely on the rear view mirrors; you may misjudge a vehicle's distance and speed, or you may not see is at all.

Always use turn signal lamps when you intend to change lanes or take a turn. Be sure to switch it off after changing the lane or negotiating the corner.

The rider should keep his/her foot on the footrests while riding the motorcycle.

Always hold the handlebars firmly with both hands in order to be ready for sudden changes of direction or in the road surface.

Under no circumstances should both the hands be removed from the handle bar, as it is very dangerous.

While riding in wet conditions, on loose gravels, the ability to maneuver the vehicle will be reduced. Ride smoothly on this conditions. Sudden acceleration, braking or turning may cause loss of control.

On the wet roads, rely more on the throttle to control vehicle speed and less on the front and rear brakes.

Use the throttle judiciously to avoid skidding the rear wheel from too rapid acceleration or deceleration.

On the rough roads, exercise caution, slow down and grip the fuel tank with your knees for better stability.

To get quick acceleration during overtakes, shift to a lower gear to obtain the necessary power.

Do not downshift the gear abruptly at high rpm to avoid damage to the engine due to overrevving.

Avoid unnecessary weaving for the safety of both the rider and other motorists.

While riding on uphill, shift to a lower gear so that there is plenty of power to spare rather than overloading the engine.

Do not downshift the gears in the midst of cornering. Slow down to a safe speed before negotiating a corner.

Hold the vehicle upright as you apply the brake. Progressive application of brake is safer. Never depress the clutch lever while braking at higher speeds.

Riding down hills, while cornering, close throttle and down shift the gear to take advantage of gear box and engine which acts as additional brake. This will avoid loss of control over the vehicle due to over speed.

As the vehicle speed increases, the stopping distance also increases. Progressive application of brake is safer.

Fuel (petrol) is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with engine stopped and ignition key turned off.

Do not smoke or use cell phones or allow open flame or sparks when re-fueling or servicing the fuel system.

While re-fueling, there may be a chance of fuel drops getting spilled on your skin or cloths. Wash your skin with soap or change your cloths immediately if you come in contact with the fuel.

Always take out the key when you leave your motorcycle unattended.

Do not park the vehicle on a uneven surface or a slope or a soft ground or else the vehicle may fall.

The exhaust system becomes hot after a run even if the engine is turned 'OFF'. Care should be taken not to touch the exhaust system with any part of your body. Park the vehicle in a place where pedestrians or children are not likely to touch the vehicle. Do not park the motorcycle near inflammable material like wood, dry leaves etc.



Warning

This vehicle is designed for use only on streets and other smooth, paved surfaces. Do not use this motorcycle on unpaved surfaces. Such use could lead to skid or other accident.

Do not ride the motorcycle with helmets attached to the hook; the helmets could cause an accident by distracting the rider or interfering with normal vehicle operation.

Riding the Vehicle with Maximum Permissible Load

Your motorcycle is designed to travel safely over long distances with maximum permissible load. Even weight distribution of loads is critical for preserving the safety features of the vehicle and to avoid trouble when performing sudden maneuvers.

Information on Maximum Load

The total weight of the motorcycle during running including rider, pillion, luggage and additional accessories should not exceed:

299.5 kg.

Arrange your luggage and other accessories in the lowest possible portion (should not affect the ground clearance) and close to the centre of the motorcycle.

Secure your luggage firmly with the motorcycle. Improperly secured luggage may affect the stability. Never attach bulky or heavy objects to the steering head or front mudguard, as this can cause dangerous instability.

Do not insert any material into the gaps of the frame, where they could interfere with the moving parts.

Ensure that the tyres are inflated to the specified pressure (ref. page 112) and they are in good condition.

ACCESSORY INSTALLATION TIPS



Use only TVS Motor Company Limited approved accessories.

Take extreme caution while selecting and installing the accessories for your motorcycle.

The addition of unsuitable accessories can lead to unsafe operating conditions. Your friendly dealer will assist you in selecting quality accessories and installing them correctly.

While selecting the accessories, make sure the accessories should not obstruct lighting, steering, suspension and ground clearance.



Caution

This motorcycle was not intended to be equipped with a sidecar or to be used to tow any trailer or other vehicle.

TVS Motor Company Limited does not produce any of those things and not sure about the effects of those accessories on handling or stability. But we can warn that the effects will be adverse and any damage caused to motorcycle and its components by the use of such accessories will not be covered under warranty.

Additional electrical equipments and controls should not exceed the specified electrical system load of the vehicle (capacity of battery and magneto).

Do not change / add any lighting loads. Use only accessories listed by TVS Motor Company Limited.



Caution

Care should be taken not to damage the wiring harness of the vehicle to fit additional electrical accessories; which in-turn affects the 'CAN bus' system of the vehicle.

Anti-Lock Brake System (ABS)

Your motorcycle is fitted with an Anti-lock braking system (ABS) which is designed to prevent skidding and help riders to maintain steering control during emergency-stopping situation in dry or wet roads, loose gravels etc.

How does ABS work?

When a rider applies the brakes continuously as he detects a dangerous obstacle in dry or wet roads, loose gravels etc. thus transmitting excessive brake force to the wheel. This excessive force may cause the wheel to stop spinning and leads to loss of grip. With no firm contact between the tire's contact patch and the road surface, the bike becomes unstable and a crash is imminent.

The slipping wheels on a riding surface results in losing control of whole motorcycle which usually occurs in fraction of a second. Restoring traction while keeping the bike balanced is only a result of luck, or extreme training, as is the case of professional stunt riders who drift. Preventing the wheels from slipping due to excessive braking force compensates losing control and help the rider to maneuver the vehicle and to avoid accidents.

So what the ABS does is actually limiting the braking force exerted by the rider by regulating the brake pressure and keep the wheel spinning. Once the imminence of the locking (and therefore skidding) is avoided, the system re-applies the maximum braking force until the next skid is anticipated. By limiting the max force of the braking maneuver, the ABS systems practically allow riders to use the greatest stopping force possible without locking the wheels.

How does the ABS understands the wheel locking?

The ABS uses continuous wheel speed monitoring system; wheel speed sensors and toner rings (pulsar rings) and a Hydraulic Electronic Control Unit (HECU).

During normal operation the ABS works similar to a normal brake, but functions only when the wheel tends to lock up. The speed sensors fitted on both the wheels measures the rotational speed of the wheel, when the wheel speed reduces rapidly i.e. wheel tends to lock, the HECU modulates the pressure in the brake circuit and thereby prevents the wheel from locking.

How the irregular road surface affects the braking?

Humps and irregular surfaces of the road can cause the wheels to lose contact temporarily with the road surface; if this happens the braking force that can be transmitted to road surface is zero.

If the brakes are applied under these condition, the ABS has to reduce the braking force to ensure and maintain the directional stability when the wheels regains its contact with the road surface. At this instant the ABS must reduce the traction, so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as the actual circumstances arises, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

Why does brake pedal / lever pulsate during brake application?

Vehicles fitted with ABS uses the conventional brake system during normal operation. But during hard stop the brake pedal / lever feels different, i.e., a rapid pulsation in the brake pedal / lever; This is absolutely normal.

It is not necessary to have this pulsation feel every time the brake is applied. Pulsations are felt only during wheel locking tendency, occurs due to the modulation of pressure in the brake circuit by HECU. Pulsation means that the vehicle is in limit. This pulsation feel also depends on the road condition.

Rear wheel lift

Under very severe and sudden deceleration, however, under certain circumstances it is possible that the ABS unit fitted in your vehicle will be unable to prevent the rear wheel from lifting clear of the ground and flip over.

Severe braking can cause the rear wheel to lift off the ground. When you brake, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.



Warning

The ABS can apply and release the pressure in the brake circuit much faster than that rider can do with brake pedal / lever to avoid wheel locking, so there is no need to pump the brake, it requires only continuous application.

EMS a Glance

Engine Management System (EMS) of your motorcycle is a self manipulative system that checks and regulates the proper functioning of all the operations carried out by the engine.

The EMS checks all the factors related to engine operations, i.e. speed of the engine, load, temperature, fuel consumption, etc. There are two major function performed by the EMS, they are:-

1. Provide a spark at the right time
2. To meter fuel to the engine in the right quantity.

The EMS is comprised of several sensors and signals required for injection and ignition spark occurrence, and a sensor for information about the oxygen content in the exhaust. Furthermore, there is an idle speed motor for adjusting and stabilising the idle speed.

The Engine Control Unit or Electronic Control Unit (ECU) is a central part of the EMS, which is virtually the 'Brain' of an engine. It plays an important role of collecting, processing, analyzing and executing the data it receives from various sub-systems (sensors).

Furthermore, an ECU comprises of a computer which uses a microprocessor to process the inputs from various engine sensors in real-time. Based on the data input, the ECU precisely calculates and delivers the ideal air-fuel mixture. It also regulates the idle speed of the engine and controls the correct delivery of both fuel and spark to the vehicle under various driving conditions.

Optimum functioning of the EMS assures maximum engine power, with lowest amount of exhaust emissions and the lowest fuel consumption. The EMS is also responsible for the smooth and efficient running of the motorcycle.

Ride by Wire

Rider twists the accelerator, actuators in the electronic throttle body sense this movement and change the throttle opening accordingly. The movement of throttle alters air supply to the engine.

Throttle position sensor recognizes this change and sends a signal to ECU. Based on this signal, ECU calculates the exact amount of fuel required and fuel injection system injects fuel accordingly. Hence, engine receives correct amount of air-fuel mixture in every situation.

RT Slipper Clutch

The 'RT (Race tuned) Slipper Clutch' technology, accentuates the motorcycle's performance and with reduction in clutch force for quicker upshifts, enabling the rider to achieve better lap times. The technology also aims at ensuring rider safety in highspeed downshifts, avoids wheel-hopping while cornering, and improves vehicle stability with the back-balance torque limiter effect.

Advantages of RT Slipper clutch

Safe ride

- Avoids wheel hopping and provides increase in safety in high-speed downshifts and cornering, improved vehicle stability and balance - back torque limiter effect. Downshifts on muddy, dusty, snowy and wet surfaces is safe.

Effortless performance

- Lower clutch operating force.
- Smooth downshifts operation and reduced gear shift force.
- Less bumpy ride in cornering- Slipper clutch absorbs engine braking force.

- No judder noise during sudden clutch launch.
- Less maintenance**
- Reduced gearbox wear and less maintenance.

Emission Control

Source of Emissions

The combustion process of an engine produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because under certain conditions, they react to form photochemical smog when subjected to sunlight.

Carbon monoxide does not react in the same way, but is toxic. TVS Motor Company Limited used various components to reduce carbon monoxide and hydrocarbons.

Exhaust emission control system

All the TVS motorcycles are tested in the factory for optimum fuel efficiency and lowest possible CO levels.

While adequate care is exercised at the factory to ensure that the emissions are within the limits, it is essential for the owner to always maintain the motorcycle in good condition by getting it periodically checked and serviced by TVS Motor Company Authorised Main Dealer so that the emission and fuel consumption levels are maintained as per norms.

Factors that may affect motorcycle emission

If the following symptoms are noticed in your motorcycle, have the vehicle inspected by TVS Motor Company Authorised Main Dealers.

1. Abnormal jerk
2. Difficult to start or engine gets off after starting. Improper idling
3. Misfiring or backfiring during acceleration
4. After-burning (back firing)
5. Poor driveability and poor fuel economy.
6. Noise due to sudden escape of gas during opening of fuel tank cap.

Crankcase emission control system

The engine of TVS RR 310 is equipped with a closed crankcase ventilation system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and the throttle body.

Evaporative Emission Control System

The TVS RR 310 is equipped with an evaporative emission control system which consists of a canister and associated piping. This system prevents the escape of fuel vapors from the throttle body and fuel tank.



Note

Your vehicle is tested and certified for emission which meets BS VI emission norms and is valid for initial 12 months from the date of purchase. Get your vehicle certified by the Government authorised emission testing station every year (after initial 12 months of usage).

Vehicle Identification Number

All TVS motorcycles are provided with identification numbers for frame and engine. They are the only means of identifying your vehicle from others of the same model and type.

The frame identification number is engraved on the right of the steering head tube as shown (ref. Fig. 01).

The engine identification number is engraved on the right side of engine as shown (ref. Fig. 02).

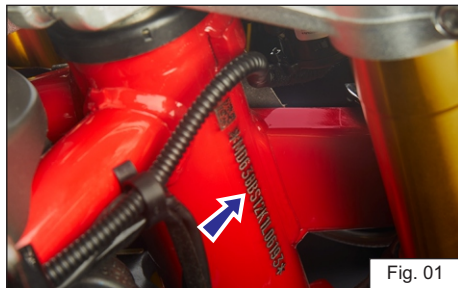


Fig. 01



Fig. 02

KNOW YOUR MOTORCYCLE

Control Key

A pair of identical control keys are supplied with your motorcycle. These keys are to operate ignition cum steering lock, fuel tank cap and seat lock.

A sticker ID (1) attached with keys has the identification number of keys. Please note down the identification number below for future reference. (ref. Fig. 03)

TVS *Racing*

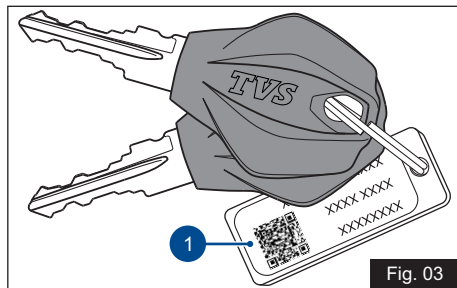


Fig. 03

Location of Parts - Vehicle RH Side View

Vehicle RH Side View

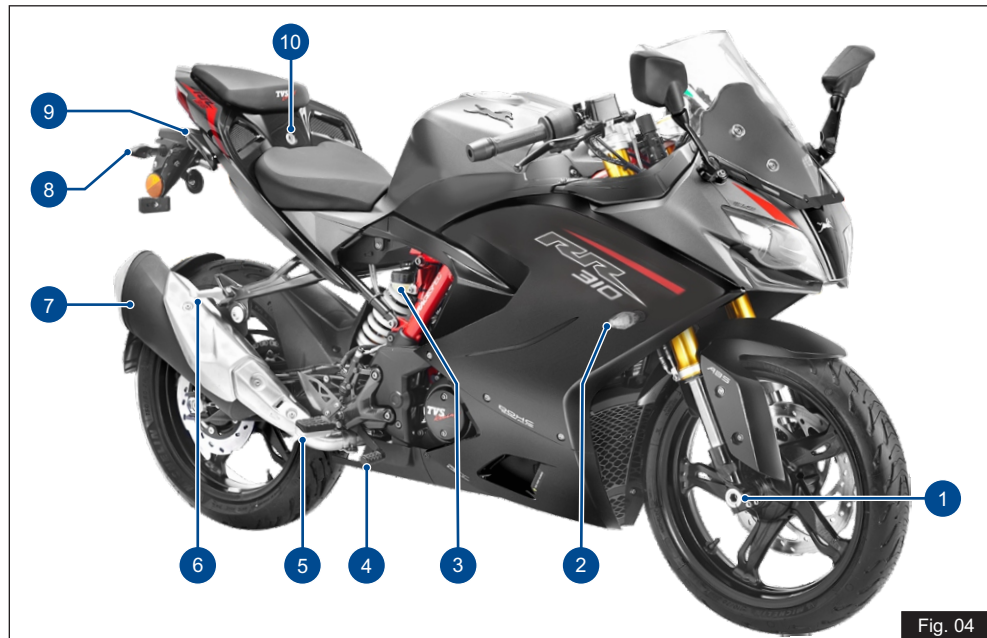


Fig. 04

Location of Parts - Vehicle RH Side View (Ref. Fig. 04)

- 1) Front wheel axle
- 2) Turn signal lamp RH front
- 3) Reservoir, rear brake fluid (ref. page 110)
- 4) Rear brake pedal (ref. page 28)
- 5) Rider foot rest RH
- 6) Pillion foot rest assembly RH
- 7) Muffler assembly
- 8) Turn signal lamp RH rear
- 9) Pillion handle
- 10) Seat lock (ref. page 85)

Location of Parts - Vehicle LH Side View

Vehicle LH Side View

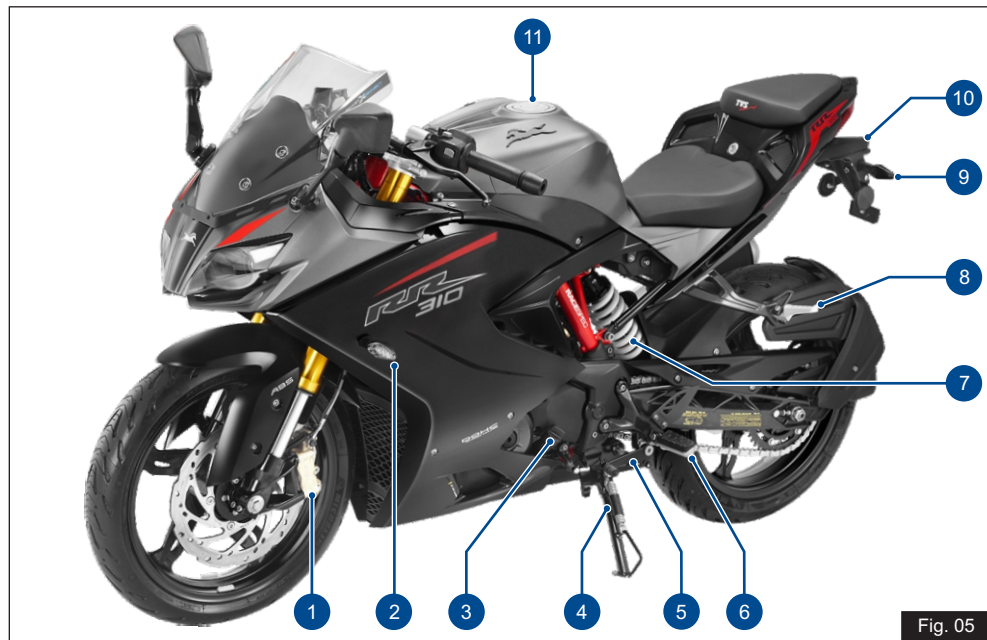


Fig. 05

Location of Parts - Vehicle LH Side View (Ref. Fig. 05)

- 1) Caliper assembly front
- 2) Turn signal lamp LH front
- 3) Gauge oil level (dipstick) (ref. page 106)
- 4) Side stand
- 5) Gear shift pedal (ref. page 27)
- 6) Rider foot rest LH
- 7) Rear shock absorber (ref. page 84)
- 8) Pillion foot rest assembly LH
- 9) Turn signal lamp LH rear
- 10) License plate lamp
- 11) Fuel tank cap assembly (ref. page 81)



Warning

This section shows the position and function of the controls used to ride your motorcycle. Read this section carefully before riding the motorcycle.

Controls (ref. Fig. 06)

- 1) Instrument cluster (ref. page 33)
- 2) Ignition cum steering lock (ref. page 21)
- 3) Clutch lever (ref. page 22)
- 4) Switch assembly LH (ref. page 23)
- 5) Gear shift pedal (ref. page 27)
- 6) Rear brake pedal (ref. page 28)
- 7) Switch assembly RH (ref. page 28)
- 8) Throttle twist grip (ref. page 30)
- 9) Front brake lever (ref. page 30)

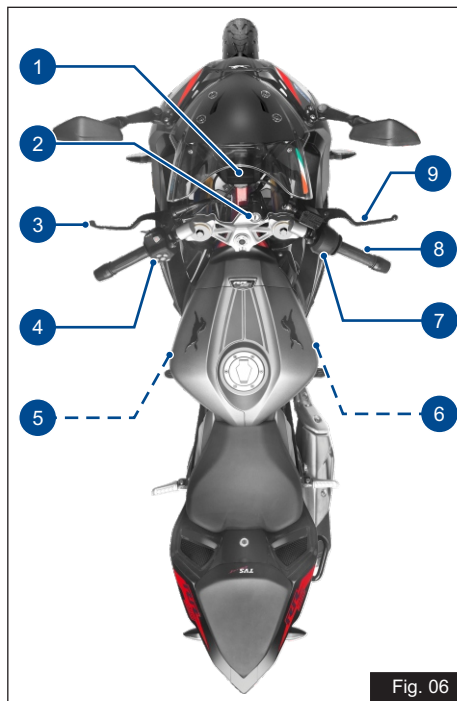



Fig. 06

Ignition cum Steering Lock


Ignition cum steering lock is located in front of fuel tank and has three positions (ref. Fig. 07):


- ♦ OFF (A): Disables lights and engine operation.
- ♦ ON (B): Enables lights and engine operation (with engine cut off switch is in run mode 'R').
- ♦ LOCK (C): Steering is locked
 - To lock the steering, turn the handle bar all the way towards 'left' or 'right', push the key in and turn it to LOCK position.
 - Push and turn the key to OFF or ON position to unlock.

 **Note** Control key can't be taken out from the lock at position (B).

The head lamp, tail lamp and license plate lamp will glow automatically when the ignition is turned ON without operating any other switches.

The instrument cluster performs pre-check once the 'ignition lock' is turned ON. Wait till the completion of pre-check.

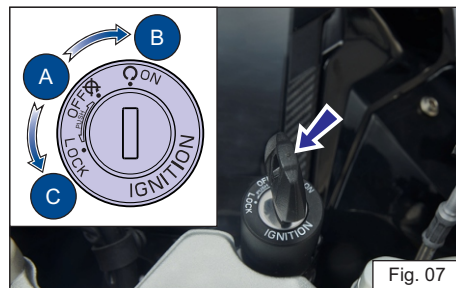

 **Caution** On level ground, always turn the handle bar towards left while locking the steering when the vehicle is propped with side stand. Else the vehicle may fall and may get damaged. Otherwise the angle of the ground determines the steering position ('left' or 'right').

Always lock the steering while parking for safety.


Ensure that, you do not keep the ignition 'ON' without starting the engine for a long time as battery might get drained because of AHO.

KNOW YOUR MOTORCYCLE

TVS *Racing***Clutch Lever (ref. Fig. 08)**

Clutch lever (A) is located in the handle bar at LH side.

- ◆ Clutch lever is used to disengage clutch.

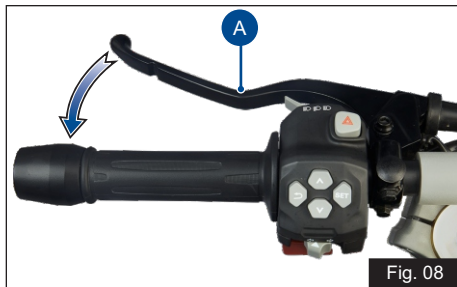

- When the clutch is pressed, drive from the engine to the gearbox and the rear wheel is disengaged.



Caution Proper usage of clutch increases the life of engine component and prevent any damage to the transmission components of engine.

- Proper use of clutch lever is essential in all riding situations, especially while moving the vehicle from rest.



Note Apply the clutch when starting the vehicle with gear engaged.

Increase in engine rpm during acceleration, without increase in road speed indicates the clutch slip. A slipping clutch causes high fuel consumption and engine overheating. Refer page 108 for clutch adjustment procedure.

Switch Assembly LH

Switch assembly LH is located in the handle bar at LH side and has the following switches in it.

A) Switch beam control (ref. Fig. 09)

Head lamp glows automatically when the ignition turned ON. Depending on the selection of High/Low beam switch position, head lamp will operate in corresponding beam.




- ♦ Press the switch towards you '  ' to illuminate low beam
- ♦ Press the switch away from you '  ' to illuminate high beam.
 - When the head lamp is illuminated in high beam, the high beam indicator '  ' glows along with it.



Fig. 09

Warning Use appropriate head lamp beam 'high / low' as per the traffic and road conditions for your safety and avoid inconvenience to other riders.

B) Pass-by switch (ref. Fig. 10)



- ♦ Press the switch intermittently to flash the head lamp.
 - Flashing the head lamp high beam provides signal to the vehicles coming from opposite direction during overtakes.
 - If the high beam is flashed, the high beam indicator '  ' also flashes along with it in the instrument cluster..



Fig. 10

KNOW YOUR MOTORCYCLE

24


 **Note** Pass by works only when the beam control switch is in low beam position.

C) Hazard switch (ref. Fig. 11)

- ◆ Press the button '△' (C) to turn ON / OFF the hazard lamps.
 - If the hazard indication is turned ON while the turn signal indicators are active, the turn signal indicators will be suspended temporarily.
 - Turn signal indication will resume automatically once the hazard lamps are turned OFF (if they were active before hazard lamp ON).
 - On activation of hazard lamps, both 'left' and 'right' turn signal indicators '←' '→', flashes.

 **Note** Hazard lamps can be switched ON/OFF only by means of hazard switch.

Hazard switch works only when the ignition is turned ON and the lamps continue to work even if the ignition is turned OFF during its working.

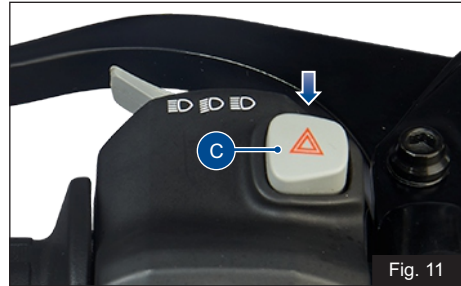

Avoid using hazard lamps while the engine is turned OFF for prolonging time to avoid battery drain.

D) Control switches (ref. Fig. 12)

(d1) SET button (ref. Fig. 12)

- ◆ Press the button (d1) for selecting the menu display (Ride Mode, Trip Details, MyVehicle, Preferences).
- ◆ Press the SET button to enter/select.
- ◆ Press the SET button to accept an incoming call.

(d2) DOWN button (ref. Fig. 12)

- ◆ Press the button (d2) changing the current selection.

(d3) RETURN button (ref. Fig. 12)

- ◆ Press the button (d3) to exit the current menu and go back to the previous menu.
- ◆ Press the RETURN button to reject an incoming call.

(d4) UP button (ref. Fig. 12)

- ◆ Press the button (d4) directly from the home screen to toggle the ride modes.
- ◆ Press the UP button for changing the current selection.

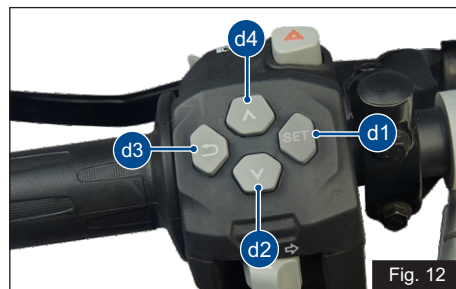


Fig. 12



Warning

Display setting to be done only when the motorcycle is stationary. Never operate the control switches while riding the motorcycle for safety.

Usage of the control switches while riding, should be avoided for a safe ride.

KNOW YOUR MOTORCYCLE

TVS *Racing***E) Switch turn signal (ref. Fig. 13)**

- ◆ Push the switch towards '←' to flash LH side turn signal lamps and towards '→' to flash RH side turn signal lamps.
- ◆ Push the switch 'IN' to cancel.


- When the 'left' or 'right' side turn signal lamps are activated, respective turn signal indicator '←' '→' flashes along with it in



the instrument cluster.

F) Switch horn (ref. Fig. 13)

- ◆ Press the switch '🔊' to blow horn.

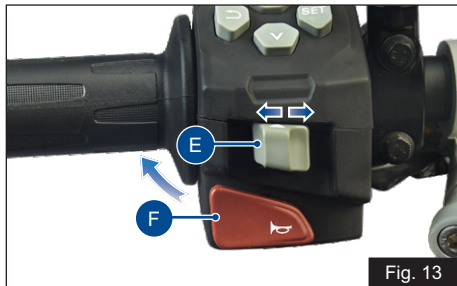


Gear Shift Pedal (ref. Fig. 14)

This motorcycle is equipped with a 6 speed constant mesh transmission.

- ♦ To select the required gear or to bring the vehicle to neutral, a gear shift lever (A) is provided and it is located on the LH side of the vehicle.
- ♦ To engage the 1st gear and to down shift the gear press the pedal down.
- ♦ To engage 2nd, 3rd, 4th, 5th and 6th gear, lift the pedal upwards.
 - Each time you move the pedal you will be engaging the next gear.

- Gear shift pedal returns to its position (centre position) automatically when released after shifting.

- Once the transmission is brought to neutral position, the neutral indicator 'N' illuminates.

 **Note** Apply the clutch when starting the vehicle with gear engaged.

Gear shift pedal position can be adjusted as per the convenience of the rider. Refer page 96 for adjusting procedure.

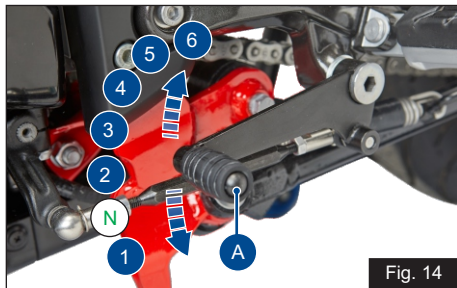


Fig. 14

KNOW YOUR MOTORCYCLE

Rear Brake Pedal (ref. Fig. 15)

Rear brake lever (A) is located on the RH side of the vehicle.

- ♦ Push down the rear brake pedal with your right foot to operate the rear brake.
 - The system is operated by hydraulic and just need to push the lever gently.

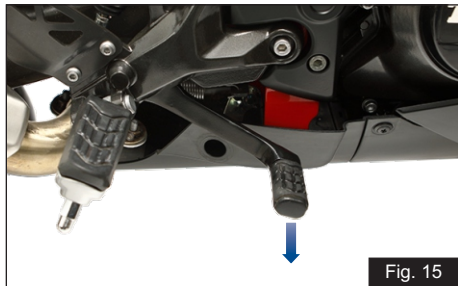



Fig. 15

 **Note** Front brake lever and rear brake pedal pulsates during the hard application of brake which is normal. This pulsation occurs because of ABS working.

Switch Assembly RH

Switch assembly RH is located in the handle bar at RH side and has the following switches in it.

Switch electric starter with Engine Kill switch (ref. Fig. 16)

This motorcycle is provided with integrated switch electric starter with engine kill switch.

- ♦ The engine kill switch is used to switch off '⊗' the engine but to keep other DC system active.
- ♦ The ignition circuit is disabled, preventing the engine from being started. To restart the engine, return the switch to the '⌚' position.
- ♦ To start the engine keep the switch in '⚡' position, Ensure the transmission is in neutral or else press the clutch lever before engaging the starter switch.

KNOW YOUR MOTORCYCLE

TVS *Racing*



Warning

Do not operate the kill switch when riding else you may fall due to rear wheel locking.

This switch is mainly intended for use in emergencies when you need to stop the engine quickly.



Note

If the electric starter switch is pressed more than 3 seconds continuously, the starter motor gets disabled automatically and will not crank the engine. The motor cranks the engine only after 1 second or if the switch is released and repressed again.

Please remember that the electric starter function will work only when the throttle opening is less than 30%.

Release the electric starter switch immediately after engine starts.

Starter switch will not work if it is pressed when the engine is running.


It is possible to start the vehicle with the side stand ON and gear box in neutral. When starting the bike with the gear engaged, apply the clutch (the side stand must be up in this case. If the side stand is in ON position, after vehicle start engine stops while changing the gear from neutral).

KNOW YOUR MOTORCYCLE

Throttle Twist Grip (ref. Fig. 17)


Throttle twist grip (A) is located in the handle bar at RH side.

- ♦ Twisting the grip opens the throttle.
 - Throttle grip spring back to the initial position (idling speed) when released.

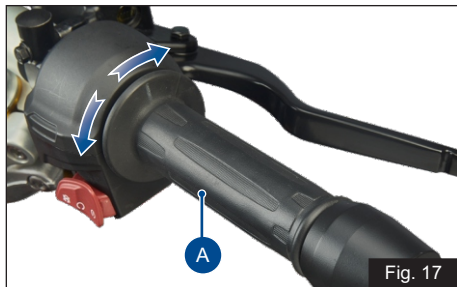**Front Brake Lever (ref. Fig. 18)**

Front brake lever (A) is located in the handle bar at RH side.

- ♦ Pull the lever towards the throttle twist grip to operate the front brake.
 - The system is operated by hydraulic and just need to press the lever gently.

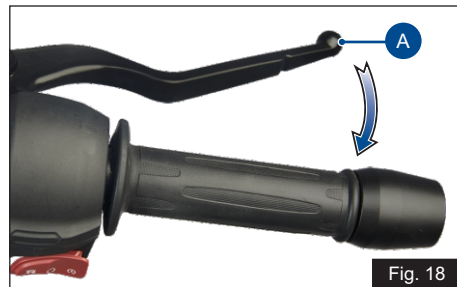

CONNECTED TFT INSTRUMENT CLUSTER KEY FEATURES (ref. Fig. 19)

- ◆ Your motorcycle is fitted with a 5" TFT instrument cluster.
- ◆ It has an advanced UI /UX design for TFT screen with cognitive ergonomics.
- ◆ The cluster has 4 different themes for 4 different rides in Day & Night modes which give you a rich user experience.
- ◆ The TFT cluster in combination with infotainment switch enables you on-the-go mode selection.
- ◆ Gear shift assist display helps you to drive your motorcycle for the best performance or fuel economy depending on the ride mode you have selected.
- ◆ In-built photo-sensor helps to automatically adjust the brightness and change the day and night mode of the screen if it is in AUTO.
- ◆ User alerts are made easy and effective with warnings and messages on the screen.
- ◆ Layout, font size, colors and themes enable quick and easy data access.





Warning

Risk of accident through the use of integrated information systems and communication devices during the journey.

Operate these systems or devices only if the traffic situation allows. If necessary, stop and operate the system or devices at a standstill.

TFT Instrument Cluster

Instrument cluster will be activated once the 'ignition lock' is turned ON.

All segments and tell-tale indicators glow for 2 seconds on activation of instrument cluster for checking and ensuring the proper working of segments and indicators.






Following are the features of instrument cluster:

- 1) Warning and indicator lights (ref. Fig. 20)
 - A) Gear shift / Rev indicator / Photo sensor
 - B) Turn signal indicator LH
 - C) High beam indicator
 - D) Neutral indicator
 - E) Low fuel warning indicator
 - F) Turn signal indicator RH
 - G) Low battery indicator
 - H) ABS indicator
 - I) EMS malfunction indicator



Fig. 20

Warning and indicator lights (ref. Fig. 20)

Symbol	Lights	Meaning
	A. Gear shift indicator	Up shift indication of gear shifting indicator varies based on the mode selection. In Urban & Rain mode, the shifting indicator blinks at lower speed of the vehicle when the throttle is below 25% and when the throttle is at 26% to 55%, it blinks at little higher speed of the vehicle to get the better fuel efficiency.
	Rev indicator	In Sport & Track mode, the indicator glows when the engine reaches maximum revolutions per minute (RPM).
	Photo sensor	Adjusts the TFT brightness and tell tale indicators brightness automatically as per day and night conditions.
	B. Turn signal indicator LH	Flashes when the left side turn signal indication is activated
	C. High beam indicator	Glows when the head lamp high beam is activated
	D. Neutral indicator	Glows when the vehicle is in neutral condition
	E. Low fuel warning indicator	Glows when the fuel level in the tank reaches to minimum safe level or any malfunction in the fuel level sensor*

* Contact TVS Motor Company Limited Authorised Main Dealer

Warning and indicator lights (ref. Fig. 20)

Symbol	Lights	Meaning
	F. Turn signal indicator RH	Flashes when the right side turn signal indication is activated
	G. Low battery indicator	Glow when the battery voltage is low*
	H. ABS indicator	<p>Flashes when the ABS self-diagnostic not completed / not yet initiated - Ride the vehicle few kms.</p> <p>Glow continuously when the ABS has an error or malfunction*</p> <p>Goes OFF after few kms run - ABS is active and ready to use</p>
	I. EMS Malfunction indicator	Glow when any problem is detected in engine management system causing vehicle to exceed on-board diagnostic emission threshold.*

Note The vehicle automatically goes to reduced performance mode if the engine temperature is very high.

* Contact TVS Motor Company Limited Authorised Main Dealer

KNOW YOUR MOTORCYCLE

2) TFT Multifunction display (ref. Fig. 21)

- A) Menu indication
- B) Clock
- C) Cooling fan status
- D) Bluetooth connectivity indication
- E) Mobile signal strength
- F) Mobile battery status

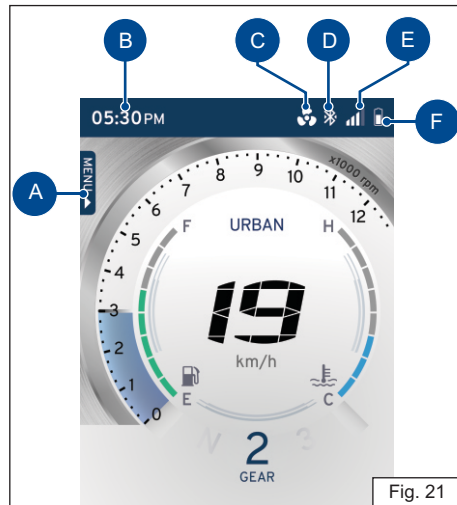


Fig. 21


A) Menu indication

TVS RR310's connected instrument TFT cluster offers you different function of display to choose. The sequence of the functions, their selection and their working are explained in the following pages.


- a). Ride Mode
- b). Trip Details
- c). MyVehicle
- d). Preference
- ◆ Displays the menu selected by the user.

To set the menu:

- Keep the vehicle stationary and switch ON the ignition. After the self-check press the 'SET' button, (ref. Fig. 08 for possible menu display)

 **Note** For your safety, it is not allowed to navigate through the menu which is not of high importance while riding the bike.

Once your vehicle goes above a speed of 5 kmph, the sub-functions (MYVEHICLE and PREFERENCES) get locked.

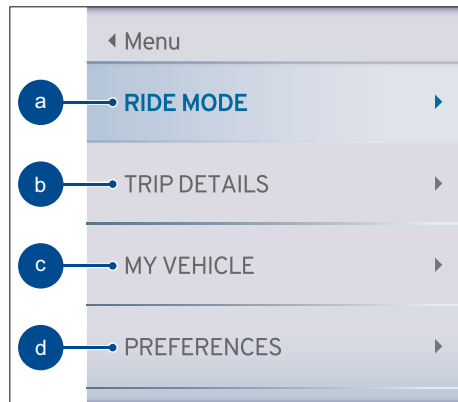


a) Ride Mode

In 'RIDE MODE' you have four different types of modes in display to choose the desired ride mode using UP and DOWN button. Press the 'SET' button to select the chosen ride mode.

The modes are explained in the following pages in the below sequence .


- a1. Urban Mode
- a2. Rain Mode
- a3. Sport Mode
- a4. Track Mode

Note The above mode changes are possible only when the throttle is fully closed.

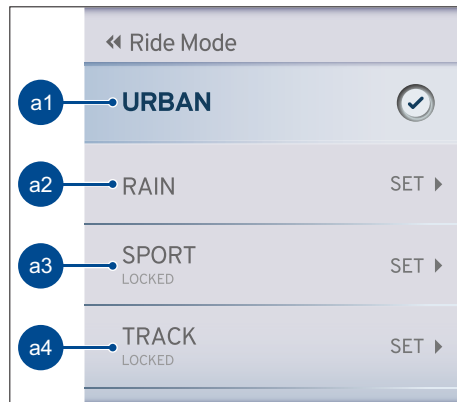

KNOW YOUR MOTORCYCLE

TVS *Racing*

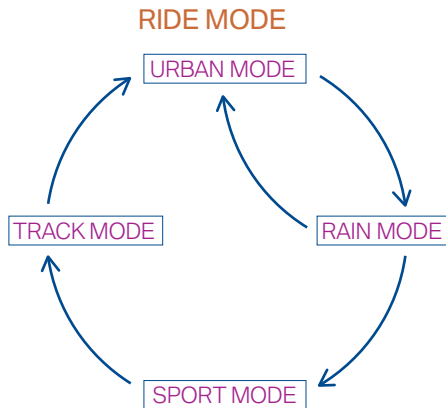


Note

On ignition ' OFF ' and ' ON ' the previously displayed mode will be retained in display of the connected TFT instrument cluster.

In order to improve performance, consistency and durability of your motorcycle, the maximum vehicle speed will be reduced during the initial running-in period (1000 km).

You can access **SPORT & TRACK** mode only after completing the running-in period, i.e., first 1000 km.

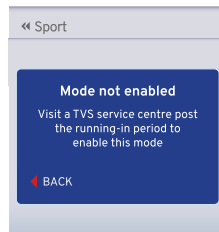

Once you cover the running-in period, Contact TVS Motor Company Authorised Main Dealer for enabling the locked modes.



Caution

In case any fault is detected with respect to the ride mode change in the EMS or ABS system, then your motorcycle will operate only in the URBAN mode.

a1. Urban Mode

Urban mode has been associated with 2 different themes for day and night modes.

Day Mode



Night Mode




Note Please note that the top speed for Urban mode is limited to 125 kmph and also ABS performance is tuned for Urban mode and will be different for other modes. If you desire to ride your motorcycle at a speed higher than the above-mentioned value, ensure to change the ride mode to Sport or Track mode. For further details, visit TVS Motor Company Authorised Main Dealer.


a1. Urban Mode

In Urban mode, the following features will be displayed on the instrument TFT cluster:

- e1. Speedometer
- e2. Engine rpm indicator
- e3. Fuel level indicator
- e4. Low fuel warning indicator
- e5. Low battery warning indicator
- e6. Widgets indicator
- e7. Kill switch indicator
- e8. Side Stand warning indicator
- e9. Gear position indicator
- e10. Coolant temperature indicator

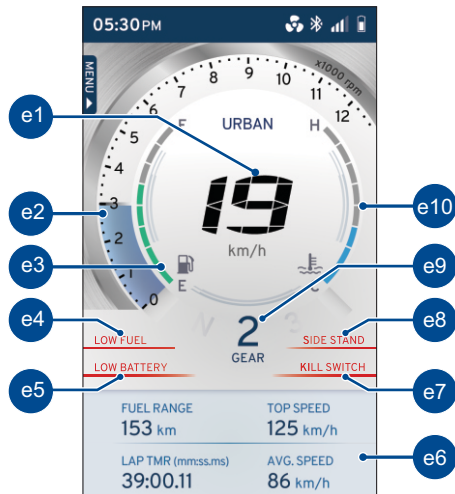


e1. Speedometer

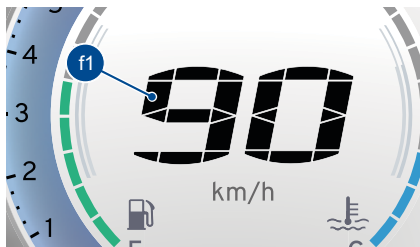

- Displays the road speed in km/h (f1) (in India).


e2. Engine rpm indicator

- Digital bars (f2) indicates the engine rpm in multiples of 250 rpm.

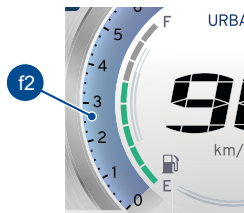

e3. Fuel level indicator

- Digital bars (f3) indicates the approximate quantity of fuel available in the tank.

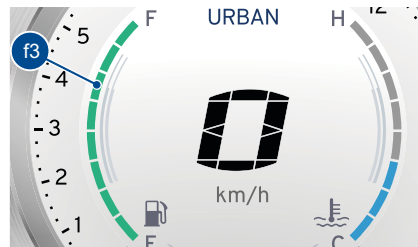

- There are eight bars to indicate the quantity fuel.
- All the eight bars will be displayed when the fuel level in the tank reaches approximately 9 liters.




KNOW YOUR MOTORCYCLE

TVS *Racing*

- When the fuel level reduces to 5 liters (approx.) the indicator displays only five bars.



- If the fuel level is less than 2.2 liters, the low fuel indicator '  ' starts glowing.

- If the fuel level reaches to minimum safe level ie. lesser than 2 liter approximately, fuel level indicator displays a single bar.



- Fill fuel (ref. page 41) immediately.



Note

Please ensure that the fuel bar indication in cluster is greater than 1 bar always. It is unsafe to ride with 1 bar or less.

Incase of any error in input system, all the bars of fuel level indicator flashes and low fuel warning indicator turns ON. Contact nearest TVS Motor Company Authorised Main Dealer incase any of these problems are noticed.



Warning

If the vehicle runs with very less fuel it will result in improper engine operation or shutdown due to lack of fuel which may result in accident.




Caution

Do not run the fuel tank dry to avoid failure of fuel pump and other consequential damages if any.

e4. Low fuel warning indicator

- Low fuel warning indicator (f4) is a safety indicator to caution you to fill the petrol as soon as possible. Minimum 2.2 liters of petrol will be available in the tank when this indicator comes glows.

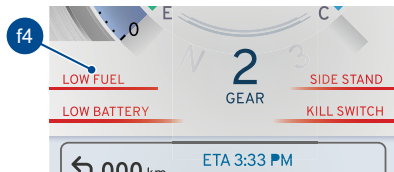


Caution

When the low fuel warning indicator glows fill fuel immediately to avoid engine OFF / Damage to fuel pump which leads to replacement of pump without warranty.

e5. Low battery warning indicator


- Low battery warning indicator (f5) appear when the battery charge is too low. Get the battery checked at TVS Motor Company Authorised Main Dealer.

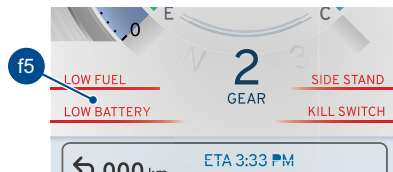

- While riding if there is any fault in the charging system, then a warning message will be displayed on the TFT screen as “VISIT TVS SERVICE CENTER” and along with this the low battery indicator ‘’ also blinks (ref. page 33).



KNOW YOUR MOTORCYCLE

If still the fault in the charging system continues then the Gear shift indicator '  ' (ref. page 33) also blinks along with

the low battery indicator .

- ♦ When this warning message occurs take the vehicle immediately to TVS Motor Company Authorised Main Dealer.



Caution If this warning message occurs the vehicle can be ridden for approx. 25 kms or 40 minutes only (which depends on the state or health of the battery).

TVS *Racing*

e6. Widgets indicator

- ♦ Widgets (f6) indicates the (viz. ODO, IMI, Avg. Speed, Avg. Mileage etc.) can be used to display live feeds in the home screen of your TFT instrument cluster.


f6	FUEL RANGE	TOP SPEED
	150 km	125 km/h
	ODO	AVG. SPEED
	99999.9 km	95 km/h



Note To change the widgets in the home screen of your TFT instrument cluster (ref. page 41).

e7. Kill switch indicator

- When the ignition is ON but engine is OFF condition the kill switch indicator (f7) will display in connected TFT instrument cluster.
- It is a safety feature that can be used to cut power to the engine in the event of an emergency.

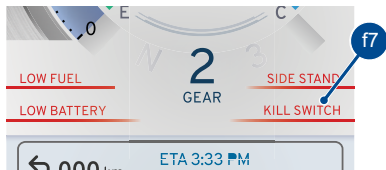

e8. Side stand warning indicator



- If the side stand is ON, the text message (f8) will be displayed in connected TFT instrument cluster.

Note The vehicle will start in side stand in neutral gear but not in other gears. The vehicle will also 'switch off' if the side stand is ON and gear is changed from neutral to gear.

Incase of any errors in side stand switch - side stand indication will be always ON in the instrument cluster immaterial of side stand status.

In the event of any unfortunate accident, if the side stand / side stand switch has been damaged, the signal can be bypassed by disconnecting the side stand switch coupler.

KNOW YOUR MOTORCYCLE


e9. Gear position indicator




- ♦ Gear position indicator (f9) indicates vehicle's present gear position and neutral condition. Gear position indication displays "--" if there is any problem in the system. Take the vehicle to TVS Motor Company Authorised Main Dealer.

e10. Coolant temperature indicator

- ♦ Digital bars (f10) indicates the engine coolant temperature.

 **Note** The vehicle automatically goes to reduced performance mode if the engine temperature is very high.

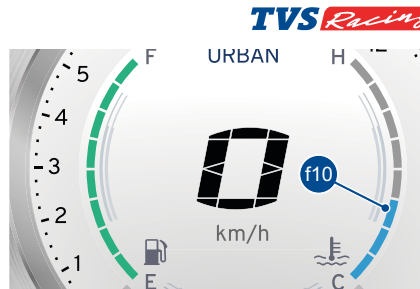

- The coolant temperature indicator displays more than six bars if there is any problem in the cooling system.




- In case of any error in input system, all the bars coolant temp indicator flashes.
- Take the vehicle to TVS Motor Company Authorised Main Dealer for further diagnosis.

a2. Rain Mode

Rain mode has been associated with 2 different themes for day and night modes.

Day Mode

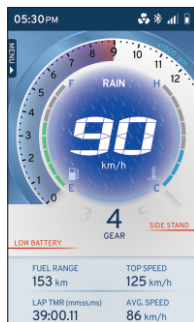

Night Mode



Note All the features are similar like Urban mode. Refer urban mode for the detailed explanation.


Although, vehicle performance will be changed due to the change in ride mode. In rain mode top speed of the vehicle is limited to 125 kmph.

If you desire to ride your motorcycle at a speed higher than the above-mentioned value, ensure to change the ride mode to Sport or Track mode. further details visit TVS Motor Company Authorised Main Dealer.

a3. Sport Mode

Sport mode has been associated with 2 different themes for day and night modes.

Day Mode

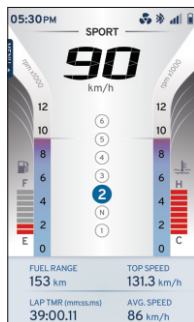

Night Mode



Note

All the features are similar like Urban mode with some notable changes in the UI (graphics). Refer urban mode for the detailed explanation. Although, vehicle performance will be changed due to the change in ride mode.


In sport mode top speed of the vehicle is limited to 160 kmph.

You can access SPORT & TRACK mode only after completing the running-in period, i.e., first 1000 km. Once you cover the running-in period, Contact TVS Motor Company Authorised Main Dealer to enable the locked modes.

a4. Track Mode

Track mode has been associated with 2 different themes for day and night modes.

Day Mode

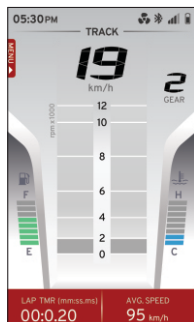

Night Mode



Note

All the features are similar like Urban mode with some notable changes in the UI (graphics). Refer urban mode for the detailed explanation. Although, vehicle performance will be changed due to the change in ride mode.

In track mode top speed of the vehicle is limited to 160 kmph.

There is a reduction in the number of widgets (2 Nos.) when compared to the other ride modes.

You can access SPORT & TRACK mode only after completing the running-in period, i.e., first 1000 km. Once you cover the running-in period, Contact TVS Motor Company Authorised Main Dealer for enable the locked modes.

KNOW YOUR MOTORCYCLE

b) Trip Details

- ◆ Displays the menu selected by the user.

To set the menu:

- Keep the vehicle stationary and switch ON the ignition. After the self-check navigate to 'TRIP DETAILS' in menu and press the 'SET' button to select the following function.

← Menu
RIDE MODE ▶
TRIP DETAILS ▶
MY VEHICLE ▶
PREFERENCES ▶

- ◆ Totally 3 trip meters namely Trip A, Trip B & Trip C are available.

« Trip Details
TRIP A SET ▶
TRIP B SET ▶
TRIP C SET ▶

- ◆ Trip details such as distance covered, time traveled, average speed, top speed, fuel consumed and average mileage are recorded by the trip meter for individual journeys.

« Trip A	
TOTAL DISTANCE COVERED 9999.9 km UNIT REACHED	TOTAL TIME TRAVELLED 12:18:42 hh:mm:ss
AVG. SPEED 95 km/h	TOP SPEED 122 km/h
FUEL CONSUMED 999.9 litres	AVG. MILEAGE 33.2 km/l
RESET ▶	

- ◆ You can reset it whenever you wish to record the data for new journey.
- ◆ Press the DOWN button; RESET option gets selected. Then press the 'SET' button to reset the trip details.
- ◆ Press the 'Return' button to menu display (ref. page 25).



Note

Add trip meter as a widget to see the trip ODO value (ref. page 41).

KNOW YOUR MOTORCYCLE




c) My Vehicle

- Displays the menu selected by the user.

To set the menu:

- Keep the vehicle stationary and switch ON the ignition. After the self-check get into menu and select the 'MY VEHICLE' and press the 'SET' button to select the following function.

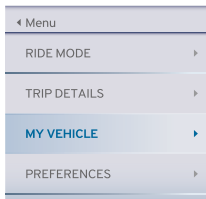

- There are 2 option available in the 'MY VEHICLE'.


SERVICE

PERFORMANCE RECORD



SERVICE


- By press the 'SET' button on select the SERVICE option.

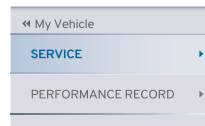

- Upcoming service date for your vehicle will be disclosed in the service menu.
- In addition to that, days and kilometers from last service will be also displayed.
- Press the 'Return' button to menu display (ref. page 25).




KNOW YOUR MOTORCYCLE

 **Note** 'SERVICE DUE' notification will pop-up on your cluster if your motorcycle is either 300 km ahead of the recorded service kilometers or 7 days prior to the service date.

In case you fail to service your motorcycle within the prescribed date and kilometers, 'SERVICE OVERDUE' message will be displayed on the cluster.

PERFORMANCE RECORD

- press the down button to select the PERFORMANCE RECORD and press the 'SET' button to select the following function.

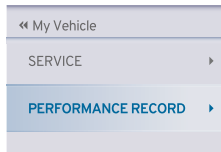


- There are 3 option available in the 'PERFORMANCE RECORD'.

MILEAGE
SPEED
LAPS

MILEAGE

- By press the 'SET' button on select the MILEAGE option.

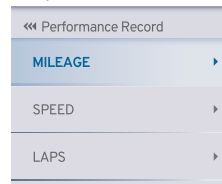

- Average mileage of your vehicle will be calculated and displayed for your knowledge.




- Since this data is resettable, you can reset it if you wish to. Press the DOWN button; RESET option gets selected. Then press the 'SET' button to reset the mileage details.

KNOW YOUR MOTORCYCLE


TVS *Racing*

54

- ◆ **SPEED**
press the down button to select the SPEED and press the 'SET' button to select the following function.

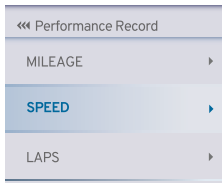


- ◆ In this menu, average speed, time taken for 0-60 km/h and top speed of your motorcycle are disclosed.

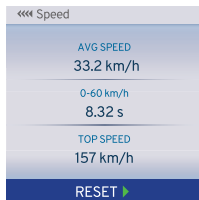


- ◆ Since this data is resettable, you can reset it if you wish to. Press the DOWN button; RESET option gets selected. Then press the 'SET' button to reset the speed details.

LAPS

- ◆ press the down button to select the LAPS and press the 'SET' button to select the following function.

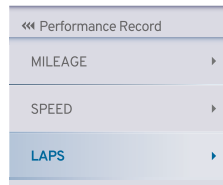

- ◆ The cluster of your motorcycle can store a maximum of 10 laps along with the date and time when the lap was triggered.
- ◆ 'Best lap' duration is shown based on the 10 lap durations displayed.



KNOW YOUR MOTORCYCLE

<<< Laps (mm:ss.ms)	
BEST LAP 29:12.32	
LAPS	Showing 1-4 of 10
1) 30:34.22	22/06/2018 - 06:33PM
2) 31:34.22	22/06/2018 - 06:33PM
3) 29:34.22	22/06/2018 - 06:33PM
4) 29:12.32	22/06/2018 - 06:33PM
RESET ▶	

- ◆ Since this data is resettable, you can reset it if you wish to. Press the DOWN button; RESET option gets selected. Then press the 'SET' button to reset the Laps details.

d) PREFERENCES

- ◆ Displays the menu selected by the user.

To set the menu:

- Keep the vehicle stationary and switch ON the ignition. After the self-check press the down button to select the 'PREFERENCES' and press the 'SET' button to select the following function.

< Menu	
RIDE MODE	▶
TRIP DETAILS	▶
MY VEHICLE	▶
PREFERENCES	▶

- ◆ There are 3 option available in the 'PREFERENCES'.

CONNECTIVITY
DISPLAY SET UP
CUSTOM WIDGETS

<< Preferences	
CONNECTIVITY	▶
DISPLAY SET UP	▶
CUSTOM WIDGETS	▶

CONNECTIVITY

- ◆ By press the 'SET' button on select the CONNECTIVITY option.


KNOW YOUR MOTORCYCLE

TVS *Racing*

56


- ◆ There are 2 option available in the CONNECTIVITY.

PAIRED DEVICES
DISPLAY CALLS

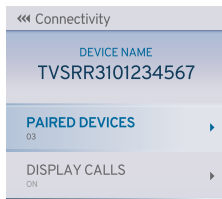

Paired Devices

- ◆ By press the 'SET' button on select the PAIRED DEVICES option.

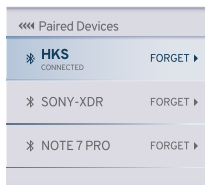


- ◆ It shows number of devices paired in the TFT instrument cluster.

- ◆ To remove the paired device from the TFT instrument cluster press the 'SET' button on the selected device name.


- ◆ Adding new device to vehicle (ref.page no 69)

DISPLAY CALLS

- ◆ press the down button to select the DISPLAY CALLS and press the 'SET' button to select the following function.

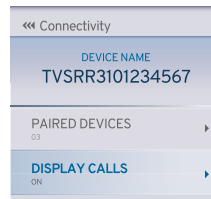

- ◆ press the 'SET' button to ON or OFF to avoid the display calls visible in connected TFT instrument cluster.





KNOW YOUR MOTORCYCLE

- ◆ If display calls setting is ON condition.
- ◆ The connected TFT instrument cluster will display the incoming calls alerts from the smart phone via Bluetooth. Ex. CALL FROM 'Arun Ramakrishnan', will be displayed if the contact is stored in the smart phone's otherwise number will be displayed.




- ◆ Press the 'SET' button to accept the incoming call. Press the 'RETURN' button to reject the incoming call (ref. page 25).

 **Note** Telephony features are disabled in TRACK mode for a safe ride.

 **Caution** To avoid risk of accident, and breach of Motor Vehicle Act & Rules, it is highly recommended not to respond to mobile call by operating the handle bar switches for accepting or rejecting the calls when the vehicle is in motion.


DISPLAY SETUP

- ◆ press the down button to select the DISPLAY SETUP and press the 'SET' button to select the following function.

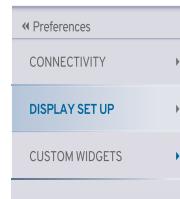


- ◆ There are 4 option available in the 'DISPLAY SETUP'.

BRIGHTNESS
CLOCK
DATE
DAY AND NIGHT MODE

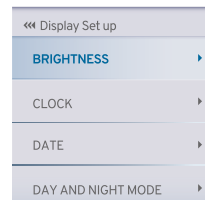


BRIGHTNESS

- By press the 'SET' button on select the BRIGHTNESS option.

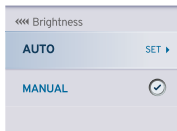


- By press the 'SET' button on select the AUTO option.
- Adjusts the TFT brightness and tell tale indicators brightness automatically as per day and night conditions (**ref. page 34**).

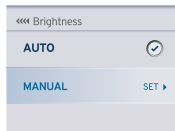

- press the down button to select the MANUAL and press the 'SET' button to select the following function.

- Press the UP button to increase the brightness and the DOWN button to reduce the brightness of the cluster.

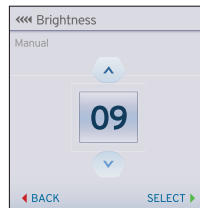

- Press the SET button after choosing the desired brightness level.


 **Note** The brightness ranges between 1 to 10 and can be set as per your preference.

KNOW YOUR MOTORCYCLE


TVS *Racing*

CLOCK

- press the down button to select the CLOCK and press the 'SET' button to select the following function.

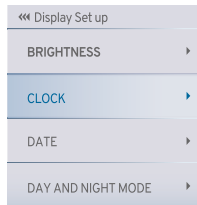


- The time displayed on the cluster will get auto-synced once the mobile is connected (ref. page 36).




Note

The clock time gets sync automatically on pairing your Android and iOS smart phone with the connected TFT instrument cluster provided if auto sync clock setting is enabled in app.

- press the down button to select the MANUAL and press the 'SET' button to select the following function.




- In manual select the desired time format (12-hour or 24-hour) and press the 'SET' button.




KNOW YOUR MOTORCYCLE

- For 12-hour press the UP button to increase the hour value and press the DOWN button to decrease the hour value.

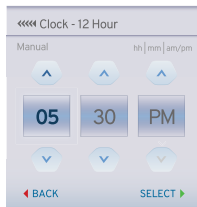

- Press the 'SET' button after setting the hour value and for proceeding to set the minute value.
- Similarly, for the minute setting, press the UP button to increase the minute value and the DOWN button to decrease the minute value.
- Press the 'SET' button after having set the correct minute value.
- Toggle between AM and PM using the UP and DOWN buttons and then press the 'SET' button.

- For 24 hours press the down button to select the 24 HOUR and press the 'SET' button to select the following function.




- Press the UP button to increase the hour value and press the DOWN button to decrease the hour value.
- Press the 'SET' button after setting the hour value and for proceeding to set the minute value.
- Similarly, for the minute setting, press the UP button to increase the minute value and the DOWN button to decrease the minute value.
- Then press the 'SET' button to save the set time in the chosen format.

KNOW YOUR MOTORCYCLE

TVS *Racing*

DATE

- press the down button to select the DATE and press the 'SET' button to select the following function.

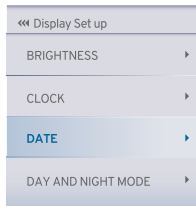


- The date displayed on the cluster will get auto-synced once the mobile is connected (ref. page 36).




Note The date gets sync automatically on pairing your Android and iOS smart phone with the connected TFT instrument cluster provided if auto sync date setting is enabled in app.

- press the down button to select the MANUAL and press the 'SET' button to select the following function.



- Press the UP button to increase the date and the DOWN button to decrease the date.
- Similarly, using the UP and DOWN buttons, select the current month and year.
- Then press the 'SET' button to save the date.

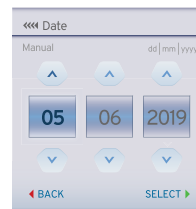


KNOW YOUR MOTORCYCLE




DAY AND NIGHT MODE


- press the down button to select the DAY AND NIGHT MODE and press the 'SET' button to select the following function.

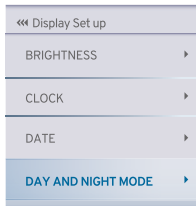


- In the connected TFT instrument cluster, with the help of photo sensor, the Day & Night mode themes will be changed automatically.



- press the down button to select the MANUAL and press the 'SET' button to select the following function.




- In case you need to set the theme to Night mode, press the down button to select Night and then press 'SET' button to save the setting.

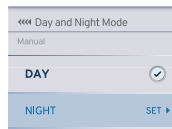

KNOW YOUR MOTORCYCLE

CUSTOM WIDGETS

- press the down button to select the CUSTOM WIDGETS and press the 'SET' button to select the following function.

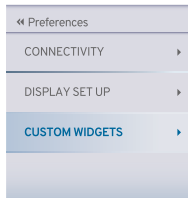


- Widgets (viz. ODO, IMI, Avg. Speed, Avg. Mileage etc.) can be used to display live feeds in the home screen of your connected TFT instrument cluster.
- From a list of below-mentioned 12 specified widgets, you can select any 4 for displaying on the widget screen:

○ Odometer
○ Top Speed
○ Avg. Mileage
○ Coolant Temp
○ 0-60 km/h

IMI

○ Lap TMR (lap timer)
○ Range
○ Avg. Speed
○ Trip A Meter
○ Trip B Meter
○ Trip C Meter

- press the up and down button to select the CUSTOM WIDGETS and press the 'SET' button to select.

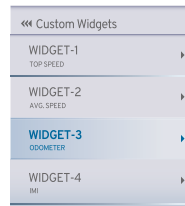

Note


For URBAN, RAIN and SPORT modes, you can select any 4 of the 12 widgets for being disclosed on the home screen.

On TRACK mode, you can select any 2 of the 12 widgets for being disclosed on the home screen.

KNOW YOUR MOTORCYCLE

TVS *Racing*

Odometer


 A rectangular digital display with a light blue background. The text 'ODO' is in small blue capital letters at the top left. Below it, the number '99999.9 km' is displayed in large blue digits.

ODO
99999.9 km

- ◆ (Odo meter) displays the total distance covered by the vehicle.
 - The reading is saved permanently and cannot be reset under any circumstances.
 - If the travelled distance exceeds 999999 km, the value '99999.9' will be displayed permanently.

Top Speed



 A rectangular digital display with a light blue background. The text 'TOP SPEED' is in small blue capital letters at the top left. Below it, the number '131.3 km/h' is displayed in large blue digits.

TOP SPEED
131.3 km/h

- ◆ Displays the top speed achieved by any user so far.
 - If the vehicle's current speed is greater than the recorded speed, the new value will get updated automatically.

- User can reset and record a new speed data if required.
- To reset the value (ref. page 54).

Avg. Mileage


 A rectangular digital display with a light blue background. The text 'AVG. MILEAGE' is in small blue capital letters at the top left. Below it, the number '31.3 km/l' is displayed in large blue digits.

AVG. MILEAGE
31.3 km/l

- ◆ Indicates the average mileage (fuel economy) of the vehicle.
 - User can reset the value.
 - This value gets updated only after the vehicle speed increases more 10 km/h for the first time after ignition ON and continue to update till the engine switch OFF.
 - To reset the value (ref. page 53).

KNOW YOUR MOTORCYCLE

Coolant Temp



- ◆ Coolant temperature indicator indicates the engine temperature in degree Celsius.

- Take the vehicle to the TVS Motor Company Authorised Main Dealer for further diagnosis if this indicator starts flashing.

- Similarly, if the coolant temperature indicator 'H' shows more than six bars



take the vehicle to the TVS Motor Company Authorised Main Dealer for further diagnosis.

TVS *Racing*



Caution

In case of coolant temperature sensor fault or cooling fan fault or throttle position sensor fault, the vehicle will go to reduced performance mode (limp-home) in order to safe guard the bike from any damage and also to protect the rider.

KNOW YOUR MOTORCYCLE

TVS *Racing*

0-60 km/h

0 - 60 km/h
3.82 s

- ◆ This function lets you to measure the time to reach 0 to 60 km/h speed from rest and to view the best time taken so far.

- If the current time is lesser than the stored value, the new value will get updated automatically.

- Toggle the display navigate to 'performance record' in menu to reset the value (ref. page 54).

IMI

IMI
31.3 km/l

- ◆ Indicates the instantaneous mileage (fuel economy) of the vehicle at that particular driving condition.
- The value will not be shown if the vehicle speed is less than 10 km/h.

Lap Timer

LAP TMR (mm:ss.ms)
39:00.11

- ◆ Press the pass-by switch for about 2 seconds to trigger lap counter. The lap timer widget will show the current lap time
- ◆ To end the current lap and start new lap, press the pass-by switch again.
- ◆ To stop the lap counter, long press the pass-by switch for more than 2.5 seconds. The lap timer widget then shows the last lap time.
- ◆ This widget displays the current lap time and once the current lap is stopped then the last recorded time will be displayed.

KNOW YOUR MOTORCYCLE

- ◆ Each lap must have a minimum duration of 10 seconds.
- ◆ The connected TFT instrument cluster can store a maximum of 10 laps along with the date and time when the lap was triggered.
- ◆ 'Best lap' duration is shown based on the 10 lap durations stored and displayed in the menu under PERFORMANCE RECORD.



«« Laps (mm:ss.ms)	
BEST LAP 29:12.32	
LAPS Showing 1-4 of 10	
1) 30:34.22	22/06/2018 - 06:33PM
2) 31:34.22	22/06/2018 - 06:33PM
3) 29:34.22	22/06/2018 - 06:33PM
4) 29:12.32	22/06/2018 - 06:33PM
RESET ▶	

- To reset the value (ref. page 55).



Note

After 10th Lap if the 11th lap is triggered then the values will be updated inside the LAP Menu on first in first out basis. This means 10th value in the LAP menu will show the latest data always.

If a particular lap time reaches 99 minutes, the current lap gets reset to 0.

The 'lap' function is disabled automatically if the 'ignition lock' or 'switch engine cut off' is turned OFF while it is active and the current lap time will not get stored even though the lap timer had been active before the turning OFF the 'lock / switch'.

If the lap timer function is switched ON when only fewer laps have been completed earlier (eg. 4 laps completed), it starts from the next lap only (5th lap) and not from the first.

In the lap timer, complete stored laps can be reset.


KNOW YOUR MOTORCYCLE

TVS *Racing*

Range

FUEL RANGE
150 km

- Indicates the approximate distance that can be covered by the vehicle with the available fuel in the tank.

 **Note** The 'Range' reading may not be accurate when the vehicle is propped on side stand and should be calculated only when the side stand is folded.

Avg. Speed

AVG. SPEED
86 km/h

- Displays the average speed of the vehicle based on total distance covered since last reset / by the total time when the engine rpm is greater than 500 rpm.
 - To reset the value (ref. page 54).


Trip A, Trip B & Trip C

TRIP A METER
45.5 km

TRIP B METER
55.6 km

TRIP C METER
31.3 km

- Trip meter displays the trip distance travelled in kilometer since last reset.
 - Three trip meters (Trip A, B & C) with the range upto 9999.9 km is provided to measure different trips.
 - The trip distance will be initialized to '0 km' automatically once reached 9999.9 km.
 - To reset the value (ref. page 51).

 **Note** Trip details such as distance covered, time travelled, average speed, top speed, fuel consumed and average mileage are recorded by the trip details for individual journeys.

KNOW YOUR MOTORCYCLE

TVS *Racing*

TVS CONNECT APP



Dedicated smart phone app is available in the Google Play and the Apple store for your 'TVS RR310' and it can be installed in your Android and Apple smart phones. To access the features of your TVS RR310's connected TFT instrument cluster like:

Incoming call alerts in connected instrument cluster.

Battery status of your smart phone in connected instrument cluster.

"Do Not Disturb" mode during the ride (applicable only for Android smart phones).

To send navigational assist instructions inputs to the connected instrument cluster from your smart phone.

To save the last traveled route.

To locate the last parked location of your TVS RR310.

To know the signal strength of your mobile network in connected instrument cluster.

To generate and store Ride reports.

To sync the connected instrument cluster clock with smart phone clock.

To avoid use the navigation feature while riding as a safety measure.

This dedicated mobile app of your TVS RR310's can be downloaded from the Google Play and the AppStore® by searching the key word '**TVS CONNECT**' else by scanning the below QR code.



Android



IOS



Caution

While using the navigation feature, ensure you do not look at the speedometer for long as it might lead to an accident.

KNOW YOUR MOTORCYCLE


**Note**

This smart phone app is compatible only for the smart phones with Android OS version 8 and above, iOS version 11 and above and the BLUETOOTH version 4.0 and above. Android and Google Play are trademarks of Google LLC. App Store® and iOS are trademark of Apple.

If any issues with connectivity features please approach TVS Motor Company Authorised Main Dealer

TVS *Racing*
How to login

On opening the **TVS CONNECT** app the following introductory screens will be displayed.

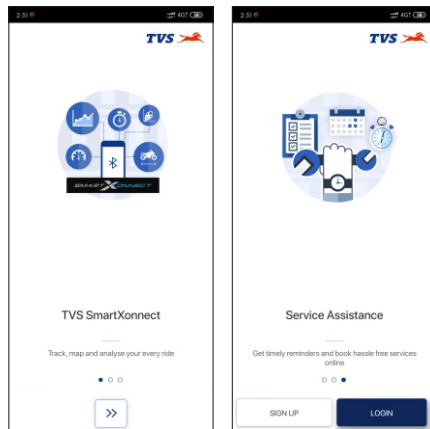

Move to the last screen where you will find the 'SIGN UP' and 'LOGIN' tab. If you are having login already then press login tab. A screen with various login options opens-up as shown.

KNOW YOUR MOTORCYCLE

TVS *Racing*

71

TVS Connect APP

The image shows two side-by-side screenshots of the TVS Connect App interface. The left screenshot is the login screen, titled 'Continue using your social media account' at the top. It features buttons for Facebook and Google, followed by an 'OR' separator. Below this is a 'Login' section with a text input field for '*Mobile Number' and a blue 'LOGIN' button. At the bottom, there is a 'New user?' link and a 'SIGN UP' button. The right screenshot is the sign-up screen, titled '< Sign Up'. It also has Facebook and Google login options. Below the 'OR' separator is a blue 'CREATE AN ACCOUNT' button. At the bottom, there is an 'Already a User?' link and a 'LOG IN' button.

You can login using your social media logins like FACEBOOK and GOOGLE+ or using your mobile number which has been registered already.



If you are a new user then press the sign up tab where you will find various options for registering using your social media logins like FACEBOOK and GOOGLE+ or a tab for creating new account.

Using your social media logins you can create new login else press the 'CREATE AN ACCOUNT' tab.

On pressing the 'CREATE AN ACCOUNT' tab, a screen opens with various input details. Feed in your details and submit. On submitting the details a screen opens with one time password (OTP) entry.

The image shows two side-by-side screenshots of the TVS Connect App interface. The left screenshot is the sign-up screen, titled '< Sign Up'. It has a 'Fill in your details' section with input fields for '*Full Name', '*Mobile Number', '*Email ID', and '*City'. Below these fields is a small note '*Mandatory Fields' and a checkbox for 'I accept Terms of use and Privacy Policy'. At the bottom is a blue 'SUBMIT' button. The right screenshot is the OTP verification screen, titled '< Verify OTP'. It displays the message 'An OTP has been sent to your mobile number' and 'Enter OTP' with four input boxes. Below the boxes is a blue 'SUBMIT' button. At the bottom, there is a 'RESEND OTP' link and the text 'Waiting for OTP: 22'.

Enter the OTP which is received from TVS Motor Company Limited and submit. On submitting the OTP, another screen opens where you have to enter your vehicle's chassis number for verification.

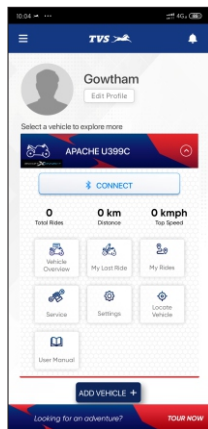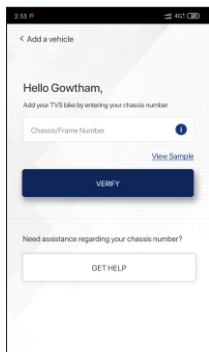

After successful verification of your chassis number, the Home screen of the app opens.

Note Please remember that the Navigation License has to be renewed after 5 years of vehicle purchase and renewal can be done by contacting near by TVS Motor Company Authorised Main Dealer.


KNOW YOUR MOTORCYCLE

TVS *Racing*

First time Bluetooth pairing:


To pair your Android smart phone or iPhone with your TVS RR310's connected instrument cluster, via Bluetooth, for the first time.

- ◆ In order to pair device, select “preferences” in ‘menu’ by navigating to connectivity → paired device.

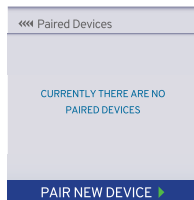

- ◆ Press down button and press the set button to pair a new device.
- ◆ Once a device is selected the new paired device icon will blink.
- ◆ Ensure that switch ON bluetooth in your mobile device

- ◆ During the pairing, the bluetooth symbol ‘*’ flashes in the connected TFT instrument cluster.
- ◆ Open the **TVS Connect** app and press “CONNECT”, ensure the smart phone is near to the vehicle.

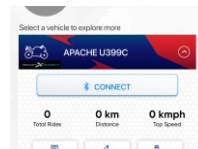

- ◆ Press and hold “CONNECT” for 2 sec to erase previous vehicle details and connect with a new vehicle in the TVS connect app.

Do you want to erase previous vehicle and connect with a new vehicle?



KNOW YOUR MOTORCYCLE

74


TVS Connect APP

- ◆ In connected TFT instrument cluster Bluetooth name is prefixed by TVSRR310 and followed by alphanumeric digits. Ex : 'TVSRR3100000000'.
- ◆ Now, select the 'TVSRR3100000000' in app to initiate the pairing process.



- ◆ Passkey will be display in the Connected TFT instrument cluster as shown.

TVS *Racing*

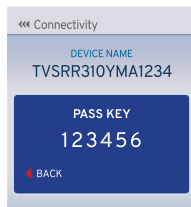

- ◆ Now, enter pass key '123456' in app to initiate the pairing process.

Pair with TVSRR3100000000?

Usually 0000 or 1234



PIN contains letters or symbols


You may also need to type this PIN on the other device.



Allow access to your contacts and call history


KNOW YOUR MOTORCYCLE

- On pairing, connected TFT instrument cluster displays 'CONNECTION SUCCESSFUL' message is display.

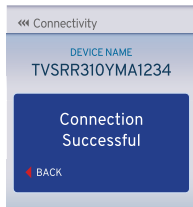

- Once device paired the Bluetooth '📶' icon phone's battery '🔋' icon and signal strength '📶' icons will be displayed on connected TFT instrument cluster.



 **Note** During the course of pairing process, if there is any occurrence of error, the connected instrument cluster should be turned 'OFF' and 'ON', and the application also need to be restarted.

Please remember that, all the smart phones are not compatible for pairing with the TVS RR310's connected TFT instrument cluster.

During the search of Bluetooth devices in app, if the vehicle connected instrument cluster's Bluetooth device ID is not visible, try for one or two more iterations.

In your motorcycle only five devices can be added. To add a 6th device, delete any one paired device and try pairing a new device.




Note

Only one iPhone can be auto-paired with a single instrument cluster at a time. If the user need to connect multiple iPhones with the single instrument cluster, the previous connected iPhone has to be forgotten by clicking, “Forget This Device” from Bluetooth settings in the iPhone.

If the vehicle battery is reset or fuse is blown, then too “Forget This Device” from Bluetooth settings in the iPhone has to be done.


Steps to “Forget This Device” in iPhone:

If the user needs to connect multiple iPhones with the single instrument cluster, the previous iPhone has to be forgotten using “Forget This Device” from Bluetooth settings in the following manner:

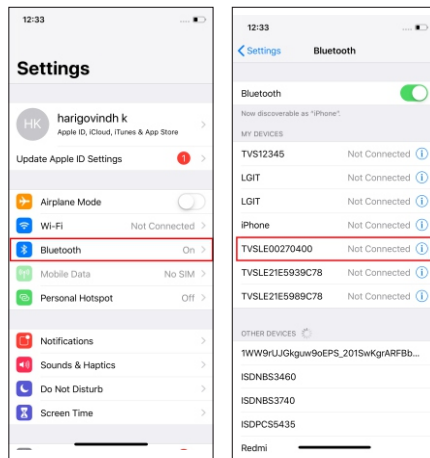

KNOW YOUR MOTORCYCLE

1. In the previous connected iPhone, open the SETTINGS -> BLUETOOTH.
2. Select the instrument cluster, which was connected previously.
3. Click on the "Forget this device".

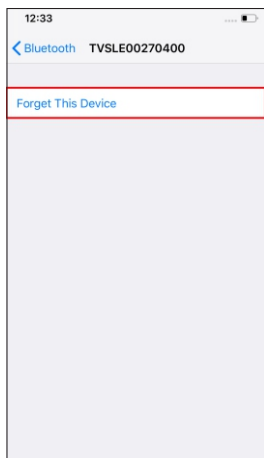

Auto pairing

Once the first time pairing is done between vehicle's connected TFT instrument cluster and your smart phone, the phone will automatically pair with the vehicle when the following conditions are met:

1. Auto connect will happen after pairing only if app is opened in the mobile and connect button is pressed on the App.
2. If the ride is on going and the rider does ignition lock OFF and then ignition lock ON, then app gets auto connected and ride will continue on App until user ends the ride.
3. Once the rider ends the ride, to start a new ride he has to press connect button in the app.



Caution

In certain Android phones auto pair functionality does not work after first time pairing due to compatibility with various OS versions.

KNOW YOUR MOTORCYCLE

**Note**

If the phone enters battery saver mode, auto-pairing might not happen. It takes maximum of five minutes for auto-pairing and it can happen in vehicle running or engine at idling or engine off condition.

Auto-pairing happens only if the application is locked in the RAM in multitasking screen of the phone with manufacture's customized OS (Ex : MI, Vivo etc.)

In case of Android phones with Android OS version above 8.0, for App to work seamlessly, any battery optimization setting to be removed in the TVS Connect App and GPS shall be allowed to run in background in high accuracy mode.

Even if your phone's Bluetooth is already paired to other gadgets like smart watch, health band or helmet, the auto-pairing works with your TVS RR310 's connected instrument cluster.


If the application unfortunately stops due to unforeseen circumstances, close and reopen the application and do the manual pairing for the first time, then auto pairing will happen subsequently.

**Note**

Once the connected instrument cluster of your TVS RR310 is connected with your smart phone, the connected instrument cluster displays Bluetooth '❄' icon, your mobiles battery level '🔋' icon and network providers signal strength '📶' icon.

Incase multiple SIM cards are used in smart phone, by default, SIM 1's network provider's signal strength is shown in the display of connected instrument cluster.

Signal strength displayed in connected instrument cluster might vary from the display in smart phone as the former is referred from telephonic standards.

 **Note** This section shows the position and operation of the major components of your motorcycle.

Major Components (ref. Fig. 22)

- 1) Rearview mirrors (ref. page 96)
- 2) Cooling system (radiator) (ref. page 80)
- 3) Fuel tank cap (ref. page 81)
- 4) Seat lock (ref. page 85)
- 5) Adjustable rear shock absorber (ref. page 84)
- 6) Coolant reservoir (ref. page 80)

* Hidden items are marked with dotted lines

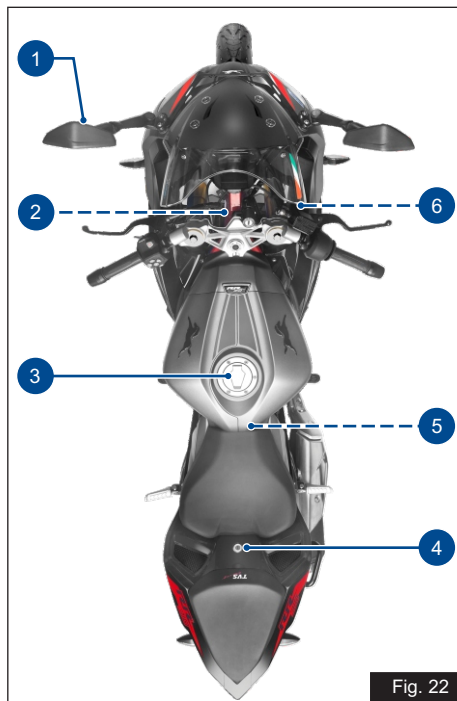


Fig. 22

Cooling System (Radiator) (ref. Fig. 23)

A coolant is used in the motorcycle cools the hot engine and ensures that operating the vehicle at specified temperature which in-turn avoids the risk of malfunctions.

- ♦ A radiator and cooling fan fitted in the cooling system does job of cooling the coolant used in the motorcycle by air stream.
- ♦ Dirty cooling foils of radiator reduces the cooling effect. Do the visual check and ensure the cooling foils of the radiator are not clogged with any dirt or mud. If so contact TVS Motor Company Authorised Main Dealer.



Fig. 23

A coolant reservoir tank (A) is fitted on the right side of the motorcycle below the side panels (ref. Fig. 24).

- ♦ Visually inspect the coolant level in the tank (use a torch if required).
- ♦ The coolant level should be between minimum and maximum level (1 & 2) on the tank (ref. Fig. 25).

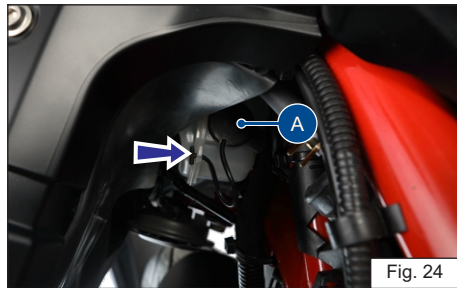


Fig. 24

Note The cooling fan may switch ON approx 22 secs. after the ignition is turned OFF to reduce the heat and to protect the engine which is normal. Need not panic.

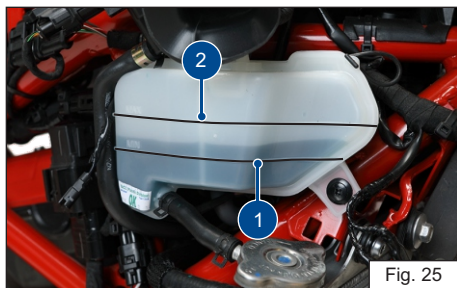


Fig. 25

- Contact TVS Motor Company Authorised Main Dealer for topping-up if the level in the tank is lower than the minimum level.



Caution

Use only recommended coolant (Glycentine G48, Coolant + Water; @ 50:50 ratio; total filling 1 litre). Use of improper coolant may cause damage, such as corrosion in the engine parts, blockage of the cooling passage or radiator and premature wear of the water pump seal.

Do not use tap water, or mineral water while topping-up the coolant.



Warning

Coolant is poisonous and health hazard. Avoid contact between coolant and body or clothing incase if you are handling it.

Fuel Tank Cap (ref. Fig. 26)

This motorcycle is equipped with a lockable fuel tank cap (A).

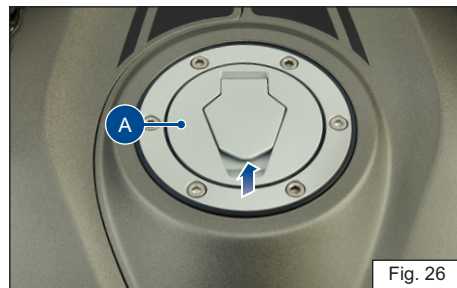


Fig. 26

To open:

- ◆ Lift the protection lid (B).
- ◆ Insert the control key into the lock. Rotate the key a 1/4 turn clockwise and lift the cap.


KNOW YOUR MOTORCYCLE

To close:

- ◆ Push the cap down into its seat until hearing a click sound.
- ◆ Turn the key anticlockwise to the initial position and remove it.
- ◆ Close the protection lid.

Refueling (ref. Fig. 27)

- ◆ Never overfill the tank when refueling. The fuel level always be below the brim of the fuel tank neck (A).

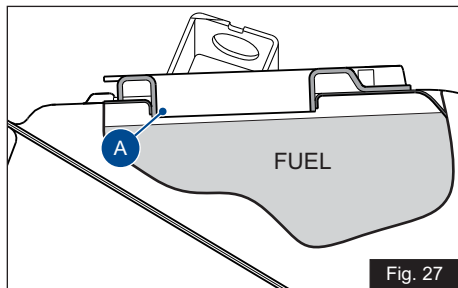

* The fuel tank is not a measuring instrument and the capacity of the fuel tank may slightly vary from the indicated capacity.



Warning

Do not smoke while refueling. Do not use cell phones while refueling. Avoid spilling of fuel on hot engine. Refill petrol in well ventilated area. Switch OFF the engine and ignition key while refueling as petrol is highly inflammable. Be sure there is no fuel trapped in the filler recess. To avoid evaporation of petrol and deterioration of paint gloss due to ultra violet rays and heat of sunlight, always park your motorcycle in a covered parking.



Caution

Check for abnormal jerk / noise while opening the cap / leak. If found any, contact TVS Motor Company Authorised Main Dealer.



Note

After ignition ON, the instrument cluster checks for multiple parameters. Side stand status is one of such parameters. If the side stand is engaged, then the fuel level indication indicates the previously stored value. Once the side stand is dis-engaged, the fuel level display gets updated if there is any change in the volume.

KNOW YOUR MOTORCYCLE

TVS *Racing*



Note

Always make sure to close the cap properly after every refilling to avoid leak/evaporation.

Side Stand (ref. Fig. 28)

Side stand (A) can be operated with your foot. To support your motorcycle on side stand:

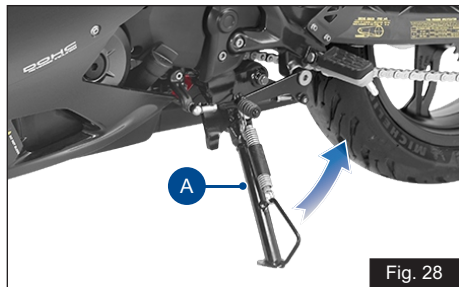


Fig. 28

- ♦ Hold the motorcycle handle bars with both the hands and push down the stand with your foot until the stand is fully extended.
- ♦ Lean the motorcycle to the left until the stand contact the ground.

- ♦ To move back the side stand to its original position (horizontal position), tilt the motorcycle to the right and, at the same time, lift the stand with your foot.



Caution

Before supporting the motorcycle on side stand, make sure that the supporting surface is hard and flat. Do not park the motorcycle on soft ground, gravel etc., else the bike may fall down.

While parking the motorcycle in downhill tracks, always park the bike in such a way that the rear wheel of the bike facing downhill.

Ensure not to disturb the side stand switch setting.



Warning

Do not sit on the motorcycle when it is supported on side stand.

KNOW YOUR MOTORCYCLE

84


**Note**

It is possible to start the vehicle with the side stand ON and gear box in neutral. When starting the bike with the gear engaged, apply the clutch (the side stand must be up in this case. If the side stand is in ON position, after vehicle start engine stops while changing the gear from neutral).

Rear shock absorber (ref. Fig. 29)

Your motor cycle is fitted with 10 step adjustable gas filled rear shock absorber (A) to meet different load and driving conditions.

- ♦ The pre-load of the shock absorber can be adjusted to suit your requirements. **Refer page 97** for pre-load adjustment procedure.
- ♦ Inspect the shock absorber for any dirt or mud accumulation on it or any fluid leak.
 - If found any, clean them properly using a soft cloth and brush.
 - If any leak is found contact TVS Motor Company Authorised Main Dealer.

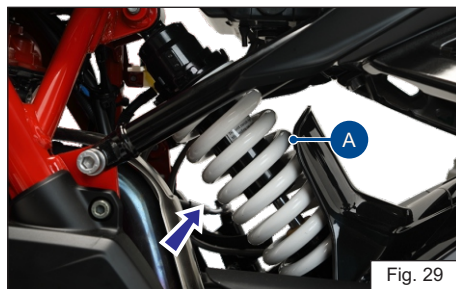**Note**

During time of delivery of the motorcycle, the rear shock absorber is adjusted to the standard configuration.

Seat Lock (Rider and Pillion Seat)

This motorcycle is equipped with a lockable rider and pillion seats. The seat lock (A) is located between the rider and pillion seat as shown (ref. Fig. 30)



Fig. 30

To open pillion seat:

- ♦ Insert the control key into the seat lock. Rotate the key in clockwise until the lock is released.
- ♦ first, slide the seat towards vehicle front direction.
- ♦ Ensure the hook underneath got released from frame and take out the seat.

To close pillion seat:

- ♦ Slide the rear end of the seat bottom underneath the frame hook.
- ♦ Locate the seat lock pin into seat lock latch and gently press (at the front end).
 - Finally ensure that the seat is fastened securely to the frame.

To open the rider seat:

- ♦ Remove the pillion seat as explained earlier and take out the control key from the seat lock without fail.
- ♦ Take off the tool kit from the storage (ref. Fig.31)



Fig. 31

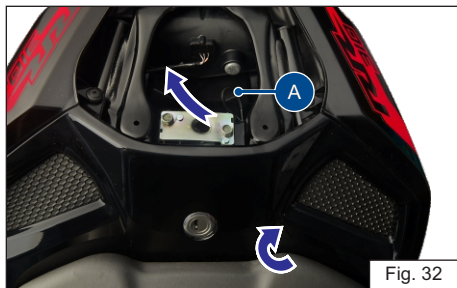


Fig. 32

- ◆ Pull the seat release cable (A) to release the seat lock (ref. Fig. 32).
- ◆ Keeping seat release cable pulled, lift the seat from rear and slide it backward.

To close the rider seat:

- ◆ Slide the front end of the seat bottom underneath the frame hook.
- ◆ Locate the lock pin of the seat into seat lock latch and gently press at the rear end.
 - Finally ensure that the seat is fastened securely to the frame.



Caution

Take the control key out from the seatlock without fail during the removal of rider seat, to avoid damage to the seat / lock.

Make sure that the seats are locked securely in position after reassembly.



Caution

Running-in is essential to preserve engine life and performance over time. Keeping to the running-in recommendations will ensure longer engine life and reduce the need for overhauls and re-tuning. Refer page 01 for running-in information.

Before Riding

- ◆ Ensure that tyre pressure is as per specification. Lower or higher tyre pressures are likely to cause instabilities in motorcycle behaviour.



- ◆ Check operation of throttle, clutch, and brakes as well as free play on front and rear brakes. Pump in the brake lever and pedal a few times to ensure proper bleeding.



- ◆ Check both tyres for any wear or abnormalities. Ensure that wear is not below 'Tread wear indicator' mark.



- ◆ Check steering freeness, front and rear wheel freeness and alignment.



RIDING YOUR MOTORCYCLE

TVS *Racing*

- ♦ Check tightening of wheel axle nuts, swing arm nut and steering nut.



- ♦ Also check tightening of front fork and shock absorber mounts.




- ♦ Check for chain slackness as per specification.



- ♦ Adjust mirror position to have optimum rear visibility. If you prefer track riding sans rear view mirrors, please remove and preserve them carefully.



 **Warning** Failure to carry out these checks before riding may result in damage to the motorcycle and injury to the rider.

RIDING YOUR MOTORCYCLE

- ♦ Check engine oil, brake oil and coolant oil levels.



While Riding

- ♦ Wear all necessary safety gears (Helmet, Jacket, Knee guards, Shoes and Gloves) before riding.



- ♦ Riding Posture - While riding, sit slightly behind the fuel tank. Body position should be relaxed such that back is very comfortable. Shoulders and arms should also be relaxed with slight bend in the arm as shown. Hold the handle bar with a good grip. Fuel tank should be firmly held by the thighs while riding. This will help maintain stability of the bike at all speeds.



- ♦ While riding, have a relaxed posture with wide vision.
- ♦ Ensure smooth operation of throttle, do not abruptly open the throttle especially in the corners
- ♦ Don't throttle while entering a turn. You may accelerate progressively while exiting a turn.
- ♦ Do not shift gears in a turn.


RIDING YOUR MOTORCYCLE

TVS *Racing*

- ♦ Avoid abrupt hard braking, If hard braking is inevitable, release throttle and apply front and rear brakes in a progressive manner.
- ♦ Don't brake too hard while the vehicle is leaning, as vehicle may skid easily.
- ♦ Tyre grip reduces in cold conditions. It will take about 5 kms of riding for tyres to reach optimal temperatures.
- ♦ New tyres require running in for 20 kms before you can get the maximum grip.

Starting the Engine**Warning**

Before starting the engine, familiarise your self with the controls which you need to use while riding (ref. page 20).

- ♦ Turn-on the ignition key (ref. page 21). Ensure that the neutral indicator 'N' (C4, ref. page 34) is ON.
- ♦ Check that the engine cut-off switch is positioned at run mode ' 

Note

It is possible to start the vehicle with the side stand ON and gear box in neutral. When starting the bike with the gear engaged, apply the clutch (the side stand must be up in this case).

If the battery voltage is too low, the system automatically disables the self-start function.

**Caution**

Do not rev the engine when it is cold. Allow some time for the oil to warm up and to reach all points that needs lubrication.

Moving the Vehicle

- ♦ Disengage the clutch by pressing the control lever.
- ♦ Press the gear shift pedal downwards with the tip of your foot to engage the first gear.
- ♦ Increase the engine speed by turning the throttle twist grip while gradually releasing the clutch lever; the motor cycle start moving forward.
- ♦ Release the clutch lever and increase the engine speed (increase the throttle).
- ♦ To up shift the gear, close the throttle to slow down the engine speed, disengage the clutch, lift the gear shift pedal up and release the clutch lever.
 - To down shift the gear, proceed as follows: release the throttle twist grip, pull the clutch lever, increase the engine speed for a moment to allow the gears to synchronise, down shift the gear and release the clutch lever.
 - Use controls wisely and promptly: when riding uphill do not hesitate to down shift the gears as soon as the vehicle tends to slow down. This will avoid stressing the vehicle and the engine abnormally.



Caution

Avoid sudden acceleration, as this may lead to misfiring, improper engagement of transmission (snatching).

Do not pull the clutch lever longer than necessary after engaging the gear. Otherwise the friction plates in clutch may get overheat and wears out quickly.

RIDING YOUR MOTORCYCLE

Braking

- ◆ Slow down the speed in right time, shift down the gear to use the engine brake, then apply both the brakes.
- ◆ Pull the clutch lever before stopping the motorcycle to avoid sudden stoppage of engine.

**Warning**

Use both front and rear brake for effective braking.

When riding in the rain or on slippery surfaces, braking capacity is significantly reduced. Always use the brakes very gently and carefully when riding under these conditions.

When riding downhill, shift down to the lower gears to use engine as a brake.

**Caution**

Keeping the brake applied continuously causes the brake pads (friction materials) to overheat and reduces the braking effectiveness which is dangerous.

Stopping the motorcycle

- ◆ Reduce speed, close the throttle and down shift the gears. Bring the transmission to neutral position just before the vehicle stops.
- ◆ Apply the brakes and bring down the motorcycle to complete stop.
- ◆ Turn OFF the ignition.

Parking

- ◆ Stop the motorcycle. Place it on the side stand on a flat firm surface (ref. page 83).
- ◆ Turn the steering all the way to 'left' or 'right' and lock as explained in page 26. Take out the control key from the ignition lock.
- ◆ If the vehicle is parked in a garage or other indoor area, make sure that there is a proper ventilation and the motorcycle is not nearer to a source of heat.

**Note**

You may switch ON the hazard lamps if the vehicle is parked in hazardous location. Refer page 24 for hazard lamps function.

**Warning**

The engine and the exhaust system might be very hot even after switching OFF the engine. Care should be taken not to touch the exhaust system with any part of your body.

Park the vehicle in a place where the pedestrians or children are not likely to touch the hot surface.

Do not park the vehicle near dry grass or any other flammable resources which might catch fire.

Using padlocks or other locks like brake disc locks, rear sprocket locks etc. to prevent the movement of the motorcycle is very dangerous and may affect the motorcycle operation and safety of the users.

Fuel Recommendation

- ♦ Use only Unleaded petrol with minimum RON 91 only.
 - Petrol mixed with ethanol (regular unleaded, maximum 14% ethanol) will have impact on engine components. Contact TVS Motor Company Authorised Main Dealer for usage.
 - **Refer page 81** for fuel filling procedure.

**Caution**

Never mix oil in the petrol. Always fill fuel from reputed and reliable fuel stations.

**Note**

Use fuel additives in petrol (as recommended by additive manufacturer) for low carbon deposition.

Checks and Tips for Better Fuel Economy

- ♦ Carry out the periodic maintenance checks as specified in this manual (**ref. page 101**).
 - Regular maintenance checks will save fuel while ensuring trouble-free, enjoyable and safe riding besides keeping the environment clean.
- ♦ A dirty defective spark plug leads to wastage of fuel due to incomplete combustion.
 - Replace the spark plug every 20000 km. Use recommended plug only.
- ♦ A dirty air cleaner element restricts airflow and reduces fuel economy.
 - Replace the air cleaner element every 10000 km.
- ♦ Increase in engine rpm during acceleration, without increase in road speed indicates the clutch slip. A slipping clutch causes high fuel consumption and engine overheating.
 - Adjust the clutch play as explained in **page 107** if the above malfunction is observed.
 - If the condition persists even after adjusting the clutch play contact TVS Motor Company Authorised Main Dealer.
- ♦ Dirty or less engine cum transmission oil increases the friction between various parts of the engine and reduces engine life, and increases the fuel economy.
 - Inspect the engine cum transmission oil level as explained in **page 106** and top-up if necessary.
 - Engine cum transmission oil should be replaced as per the maintenance schedule without fail.
 - Always use recommended engine oil only (**ref. page 153**).
- ♦ Low tyre pressure has adverse effects on the vehicle. The drag on the vehicle increases resulting in decreased fuel economy. Further more handling may be affected adversely.
 - Check tyre pressure regularly and inflate them to recommended pressure. (**ref. page 112**).
 - Never use tyre which are worn-out beyond the permissible limit.
- ♦ Check and ensure the drive chain slackness. Excess slackness lead to higher fuel consumption (**ref. page 116**).

- ♦ Check and ensure the free movement of wheels by rotating them to avoid wastage of fuel.
- ♦ A racing start from rest at full throttle will waste fuel and damage the engine. It is also creates potentially hazard traffic situation.
- ♦ Fuel is wasted whenever the rider suddenly accelerate or apply brake.
- ♦ While waiting for someone or stopping in signals for long time, if the engine is kept running at idle speed, leads to unnecessary wastage of fuel.
- ♦ Anticipate corners and slopes as well as the traffic conditions. Unnecessary and frequent braking reduces the fuel economy.

GENERAL ADJUSTMENTS

Rear View Mirrors LH & RH (ref. Fig. 33)

Adjustable rear view mirrors (LH & RH) are provided with your bike. These mirrors can be adjusted to your convenience by following the procedure given below:

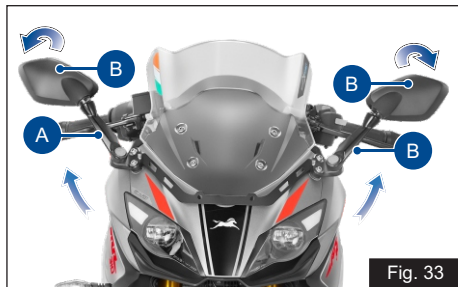


Fig. 33

- ♦ Move the rear view mirror stem (A) to the desired position (forward or backward).
- ♦ Tilt the mirror portion (B) till the clear vision is obtained (up or down).



Caution Never try to adjust the mirror position by mirror portion (B) this could break the mirror.

Gear Shift Pedal Position Adjustment (ref. Fig. 34)

The position of the gear shift pedal (A) in relation to the foot rest can be adjusted to suit the rider's requirement.

To adjust the gear shift pedal position:

- ♦ Using an open end spanner hold the gear shift pedal link rod (1) on the flat surface of the rod.
- ♦ Using another open end spanner completely loosen the lock nuts (2 & 3).
- ♦ Now, turn the gear shift pedal link rod (1) 'in' or 'out' until the desired pedal position is set.

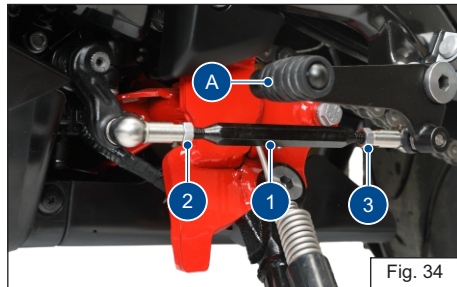




Fig. 34

GENERAL ADJUSTMENTS

- ♦ After obtaining the desired position, re-tighten the lock nuts (2 & 3) holding the link rod (1) in position.
- ♦ Ride the vehicle and ensure the gear shift is easy and convenient.

 **Note** Lock nut (2) has a left-hand thread and should be loosened or tightened in opposite direction.

 **Caution** Do not loosen the link rod to the maximum position (till the last thread). Else, it may come out from the shifting mechanism during ride.

Rear shock absorber's Pre-Load Adjustment (ref. Fig. 35)

The pre-load of rear shock absorber can be adjusted as per rider's convenience and the load (weight of rider, passenger and luggage) on the vehicle.

There are 10 notches (1) for adjusting the pre-load of the shock absorber. Normally, the shock absorber's pre-load adjuster (2) will be positioned at 3rd notch (standard setting).

Increase the spring pre-load (shift to higher notches) for heavier rides.

Decrease the spring pre-load (shift to lower notches) for lighter rides.

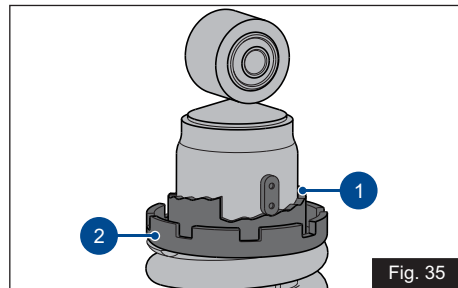
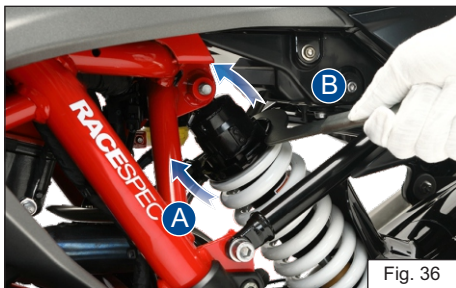


Fig. 35

GENERAL ADJUSTMENTS

TVS *Racing***To adjust the shock absorber's pre-load:**

- ◆ Place the motorcycle on its stand on a firm and flat surface.
- ◆ Locate the adjuster shock absorber rear and handle ring spanner of tool kit (ref. page 135) properly into the notches of pre-load adjuster (ref. Fig. 36).
- ◆ Carefully rotate the adjuster clockwise (A) to increase the pre-load (hard suspension).
- ◆ Else, rotate the adjuster in anti-clockwise (B) to decrease the pre-load (soft suspension).

Warning The rear shock absorber contains highly compressed gas. Do not try to open or disassemble it in any way.

Take a special care while turning the pre-load adjuster because, your hand may be striking against the other parts of the motorcycle if the adjuster spanner slips out of the pre-load adjuster notch.

Caution Rear shock absorber to be adjusted only on the left side of the vehicle.

Adjust step by step (3rd to 4th notch and so on). Do not go at a stretch as it will damage the adjuster.

Head Lamp Aiming

To check and adjust the head lamp focus:

- ◆ Place the motorcycle upright in a uniform flat surface while ensuring the head lamp center (A) is 5 meter away from a vertical wall or screen (B). (ref. Fig. 37)
- ◆ Inflate the tyres to the correct pressure.
- ◆ Keeping the motorcycle at right angles to its longitudinal axis switch on the 'Low beam' of head lamp.

Two projector lamps need to be adjusted independently as mentioned below:

a. RH side projector adjustment:

- ◆ Mask the LH side projector lamp using a black color cloth.
- ◆ Adjust the RH side projector lamp adjuster (C) clockwise (Downward) or in anti-clockwise (Upward) and match the low beam cut-off line to the marking line (D) (500 mm) on a vertical wall or screen. (ref. Fig. 37 & 38)

b. LH side projector adjustment:

- ◆ Remove the cloth from LH side projector and mask RH projector lamp.

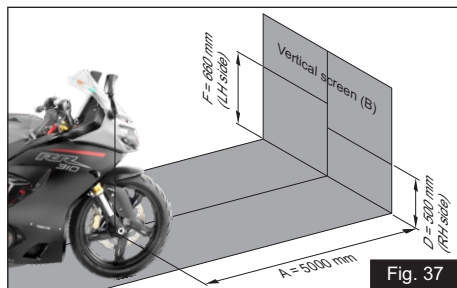


Fig. 37

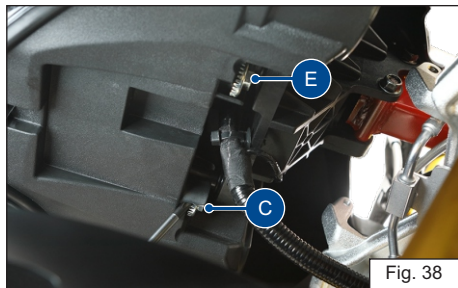


Fig. 38

* The specification for head lamp beam adjustment is applicable only for India. Owner's of other countries are advised to adopt the local rules and regulations.

GENERAL ADJUSTMENTS

100

- ♦ Adjust the LH side projector lamp adjuster (E) clockwise (Downward) or in anti-clockwise (Upward) and match the low beam cut-off line to the marking line (F) (660 mm) on a vertical wall or screen. (ref.Fig.37 &38)
- ♦ Both the projectors low beam cut-off line should match with the marked line on the screen or wall.



Note Head lamp aiming to be done with the unloaded vehicle only.

Both the projector lamps should be adjusted independently.

The adjustment levels mentioned is for solo riding condition. For dual riding condition, the head lamp beam may be adjusted as per need for better visibility.



Warning Do not stare at LED head lamp beam to avoid damage to the eyes.

Maintenance Schedule

Maintenance schedule indicates the intervals between periodic services. At the end of each interval, be sure to inspect, check, replace, adjust, lubricate and service as instructed.

If the maintenance service is not done periodically, it will result in rapid wear and severe damage to the vehicle.

If the vehicle is used under high stress conditions such as continuous full throttle operation or rain, is operated in wet or dusty areas, certain jobs should be performed more often to ensure reliability of the vehicle.

Cylinder head, steering components, suspension, chain and wheel components etc. are key items and require very special and careful servicing.

We recommend that the jobs as per the maintenance schedule be performed by your TVS Motor Company Authorised Main Dealer.

Periodic inspections may reveal one or more parts that may need replacement. Whenever replacing any such parts we recommend to use only TVS Motor Company Genuine parts.

Perform pre-ride inspection (ref. page 87) before every scheduled maintenance.

I - Inspect	R - Replace	T - Top-up
C - Clean	A - Adjust	L - Lubricate
TI - Tighten		



Caution

Proper running-in (ref. page 01) and maintenance is mandatory for making certain that your vehicle is reliable and gives optimum performance at all times. make sure that the periodic maintenance is performed thoroughly in accordance with the instruction given in this owner's manual.

Use of non-genuine spares will affect the performance of the vehicle and failure to comply the warranty claims.

Check for any abnormal jerk during ride / any abnormal noise while opening the fuel tank cap / any leak in the fuel system. If found any, contact TVS Motor Company Authorised Main Dealer.

Planned Maintenance Schedule - To be performed by the Dealer

List of operations and type of intervals (km or month whichever of the two occurs early)	Service Km x 1000 Months	1st	2nd	3rd	4th	5th
		1	5	10	15	20
		2	6	12	18	24
Engine oil filter along with drain bolt washer		R	-	R	-	R
Engine oil		R	T	R	T	R
Air cleaner element		-	-	R	-	R
Spark plug		-	-	-	-	R
Tappet clearance (valve clearance)*		-	-	I & A	-	I & A
Clutch operations (adjust if required)		I & A	I & A	I & A	I & A	I & A
Steering play		I & A	-	I & A	-	I & A
Front and rear suspension		-	-	I	-	I
Wheel bearing freeness (replace if required)		-	-	I	-	I
Air suction system / engine breather		-	-	I	-	I
Front fork oil replacement		-	-	-	-	R
All fasteners		I & TI	-	I & TI	-	I & TI
Drive chain slackness / lubrication		Inspect, adjust and lubricate every 500 km				

* Adjust if necessary

Planned Maintenance Schedule - To be performed by the Dealer

List of operations and type of intervals (km or month whichever of the two occurs early)	Service Km x 1000 Months	1st	2nd	3rd	4th	5th
		1	5	10	15	20
		2	6	12	18	24
Drive chain wear (replace if required)		-	-		-	
All lamps and horn		-				
Head lamp beam (focus)		I & A	I & A	I & A	I & A	I & A
Battery voltage (recharge if required)						
Brake light switch operation						
Front and rear brake fluid level*				R		R
Front and rear brake pad wear (replace if required)		-				
Disc plates (replace if required)		-	-		-	
Brake hose / rubber parts of master cylinder and Caliper front and rear (replace if required)		-	-		-	
Master cylinder cups		-	-	-	-	I & R
Tyre air pressure (at cold condition)		I & A	I & A	I & A	I & A	I & A
Steering stem bearing (Inspect & lubricate with Grease if required)		I & L	-	I & L	-	I & L
Speed sensor (free from any mud / clogging with dirt)						

* Replace brake fluid first at 10000 kms and every 20000 kms or 2 years thereafter.

Planned Maintenance Schedule - To be performed by the Dealer

List of operations and type of intervals (km or month whichever of the two occurs early)	Service Km x 1000 Months	1st	2nd	3rd	4th	5th
		1	5	10	15	20
		2	6	12	18	24
Coolant level, water hoses and O-rings (replace if required)*						
Fuel hose / system			-		-	
Fuel filter		-	-	-	-	R
Swing arm bearing (replace if required)						
Side stand		C, I & L	C, I & L	C, I & L	C, I & L	C, I & L
Side stand switch function and physical damage						
Drive chain guide wear (replace if required)		-	-		-	
Instrument cluster MIL lamp function						
Radiator fan / fins and deflector (clean if required)						
Reading fault codes using diagnostic tool						
Availability of fuse puller and fuse condition						
Brake pedal / gear shift lever mounting pin (lubricate using grease)						
Ignition cum steering lock (lubricate using oil)						

* Coolant, hoses and O-rings must be replaced every 30000 kms or every 3 years.


At higher odometer readings, the above service intervals to be followed.

Safety Precautions

Before you are starting any maintenance repairs,

- ♦ Make sure that engine is in OFF condition. This will help in eliminating several potential hazards like:
 - Poisoning from engine exhaust Carbon Monoxide (be sure there is proper ventilation whenever engine is operated in indoor).
 - Let the engine and exhaust to cool before working on the motorcycle to avoid burns from hot parts.
 - Do not run the engine without instruction for doing the same to avoid injury from moving parts.
- ♦ Carefully read the instruction before starting, and ensure that you have tools and skill required for doing the maintenance service.
- ♦ Park the vehicle on a flat firm surface with the side stand, centre stand (if available) or the auxiliary stand (**paddock stand refer page 137**) to prevent the motorcycle from falling while doing the maintenance service.

- ♦ While working on batteries or fuel related items care must be taken to avoid fire or explosion. Use non-flammable solvent only. Keep away the fire (like cigarettes, sparks and flames etc.) from the battery and fuel related items.
- ♦ Ensure to remove the head lamp fuse, to avoid battery discharge during working.

 **Note** We recommend that the maintenance jobs as per the planned maintenance schedule be performed by your TVS Motor Company Authorised Main Dealer. Trained service personals of the Dealer can provide quality, reliable and economical service to your vehicle.

Use only TVS Motor Company Limited Genuine parts for long and reliable life of your motorcycle.

Engine Oil Level

Ensure the safety precautions listed in the **page 104** are followed properly.

Check the engine oil level before riding the motorcycle. Insufficient engine oil or too much engine oil affects the engine adversely.

To check the engine oil level, a gauge oil level (dip stick) (A) given on the left side of the crankcase (ref. Fig. 39).

- ♦ Wipe off the surroundings of the gauge oil level. Start the engine and let it idle for 3 to 5 minutes.
- ♦ Switch OFF of the ignition. Hold the vehicle in upright condition with both the wheels on ground, on a flat and firm surface.
- ♦ After 2 to 3 minutes, remove the gauge oil level (A) and wipe it cleanly.
- ♦ Re-fix the gauge again. Slowly and steadily remove the gauge and inspect the oil level.
- ♦ The level should be between minimum (1) and maximum level (2) mark on the gauge (ref. Fig. 40).
- ♦ If the level is below the minimum level (1), slowly add recommended engine oil till the level reaches to maximum level (2).

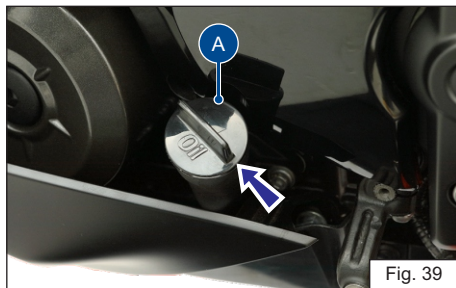


Fig. 39

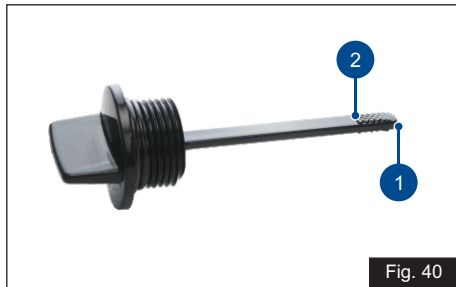


Fig. 40

MAJOR MAINTENANCE

TVS *Racing*

- ♦ Re-fix gauge after ensuring correct oil level.
- ♦ Wipe out the oil traces with a clean cloth to prevent dust accumulation.
- ♦ Re-fix gauge after ensuring correct oil level.
- ♦ Wipe out the oil traces with a clean cloth to prevent dust accumulation.



Caution

Running the engine with insufficient or excess engine oil may cause serious damage to the engine.

For topping-up, always use TVS Motor Company recommended engine oil only.

Hold the vehicle in upright condition with both wheels on ground, on a flat and firm surface while checking the oil level to avoid wrong indication.

Engine oil and oil filter must be replaced by a TVS Motor Company Authorised Main Dealer at the intervals specified in the planned maintenance schedule without fail. Failing which disqualifies for warranty.



Warning

Correctly recycle or dispose the used engine oil in order to avoid environment pollution.

Clutch Free Play

Ensure the safety precautions listed in the **page 104** are followed properly.

Clutch free play adjustment may be required if the motorcycle gets OFF while shifting from neutral to gear or tends to creep; or if the clutch slips (vehicle acceleration lags behind the engine rpm).

Minor clutch free play adjustment can be done by means of clutch cable adjuster at the clutch lever end.

- ◆ Measure the clutch free play (A) at the lever end as shown (ref. Fig 41).
 - If the measured free play is 'more' or 'less' than the standard limit given below:

Clutch lever free play	8 to 12 mm
------------------------	------------

- ◆ Remove the cable clamp (1). Pull back the dust cover (2) of clutch lever (ref. Fig. 42).
- ◆ Loosen the lock nut (3) and turn the adjuster (4) 'in' or 'out' till the specified play is obtained (ref. Fig. 42).
 - After the adjustment, once again check the free play and confirm.

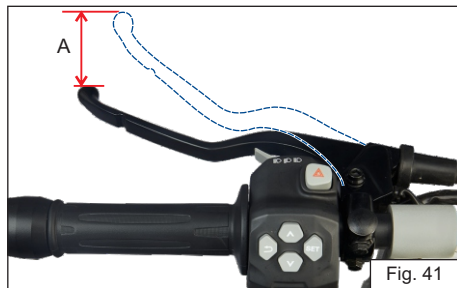


Fig. 41


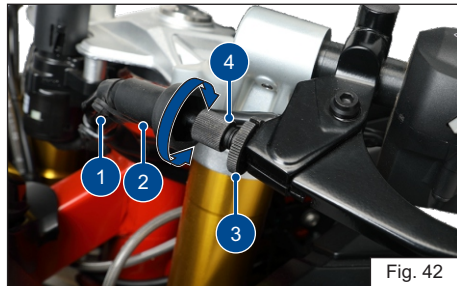


Fig. 42

MAJOR MAINTENANCE

- ♦ Lock the lock nut (3) again.
 - If the adjuster is threaded out to its maximum limit or if the correct free play cannot be obtained using the cable adjuster, loosen the lock nut and completely turn-in the clutch cable adjuster.
- ♦ Re-fix the dust cover (2) and cable clamp (1).
- ♦ Loosen the lock nut (5) at the bottom end of the clutch cable (ref. Fig. 43).
- ♦ Turn the adjuster in (6) 'in' or 'out' until the specified play is obtained and then tighten the lock nut and check the adjustment once again (ref. Fig. 43).
 - After adjusting the clutch play, start the engine and engage the gear. Ensure that the engine is not stalling and not creeping.
 - Gradually release the clutch lever while slowly applying the throttle. The vehicle should begin to move slowly and accelerate smoothly. Else contact TVS Motor Company Authorised Main Dealer.

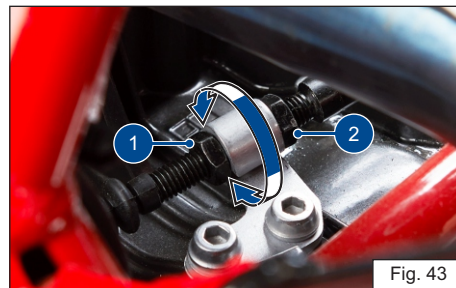

Caution

Clutch play free play should be checked and adjusted only when the engine is cold.

During clutch play checking and adjustment, check the clutch cable for kinks or sign of wear that could cause stickiness or failure.

Lubricate the clutch cable using a cable lubricant available in the market to prevent premature failure and corrosion.

Brake Fluid Level

Brake fluid level should not fall below the MIN level mark on both front and rear brake fluid reservoir. If the level drops below the limit, air can get into the circuit and make the system ineffective.

Brake fluid must be topped up and changed at the intervals specified in planned maintenance schedule without fail for the proper working and to ensure the safety of the rider.

- ♦ Switch OFF and place the vehicle upright on a flat and firm surface using centre stand (if available) or on a auxiliary stand (**paddock stand ref. page 137**).



Fig. 44

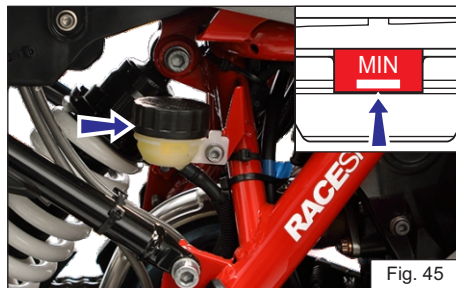




Fig. 45

- ♦ Keep the handle bar straight.
- ♦ Inspect the oil level of both front and rear brake fluid reservoirs (ref. Fig. 44 & Fig. 45).
- ♦ If the level is lower than the MIN level mark in any of the reservoir, contact TVS Motor Company Authorised Main Dealer for topping up.
- ♦ If you find excessive play (sponginess) in the front brake lever or in the rear brake pedal, but both the brake pads are still in good condition, contact TVS Motor Company Authorised Main Dealer for the inspection of system and to do the air bleeding.

MAJOR MAINTENANCE

 **Note** Check the brake fluid level only when the handle bar and vehicle is in straight condition.

 **Warning** Lack of maintenance of the brake system increases the risk of accident. If you notice any malfunction in the brake system contact nearest TVS Motor Company Authorised Main Dealer for further diagnosis.



 **Caution** Inspect for any leakage of fluid in the brake circuit.

Cover the body parts with a protective cover before topping up the brake fluid to prevent the painted parts from getting damaged. In case of any fluid dripping on body panels, it is recommended to be cleaned immediately.

Use only BASF (DOT 4) brake fluid from a sealed container or drain the existing brake fluid completely from the circuit and use another brand (DOT 4) brake fluid to avoid mix up with existing old and different brand fluid.

Brake Pad Wear

- ♦ Visually inspect both front brake pads wear and rear brake pads wear.

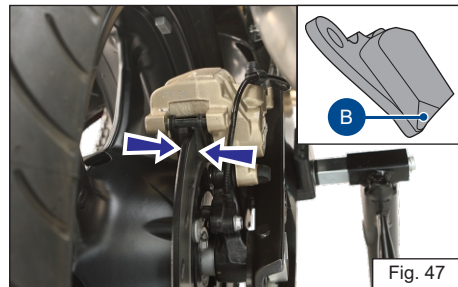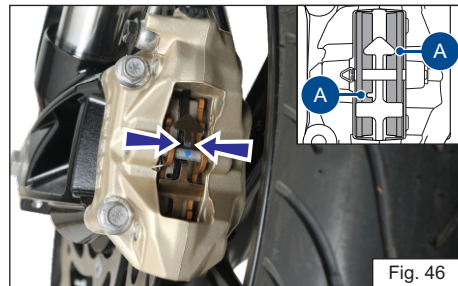

MAJOR MAINTENANCE

- If the wear is found beyond the wear indicator (A & B) groove as shown in the figure in any one of the pad, replace brake pads as a set with a new one. (ref. Fig. 46 & 47)

**Warning**

If the brake pads are used beyond this groove, leads to metal support contact with the brake disc and affects the braking efficiency, disc integrity and leads to unsafe riding conditions to the rider.

**Caution**

Replace the brake pads as a set, if the wear indicator shows beyond the wear limit.

Rims and Tubeless Tyres

Ensure the safety precautions listed in the **page 104** are followed properly.

Rims

- ♦ Visually inspect the front and rear wheel rims for any defects. If found any, have the rims inspected at TVS Motor Company Authorised Main Dealer and get it replaced if necessary.

Tyre pressure

Check the tyre pressures atleast once in a week if not more frequently. Insufficient tyre pressure not only fasten tyre wear, but also seriously affects the stability of the vehicle and may lead to rim bend or damage.

- ♦ Under-inflated tyres make smooth cornering difficult and over-inflated tyres decreases the contact with the ground which can lead to skidding and loss of control.
- ♦ As the tyre pressure is affected by changes in the temperature and altitude, check and adjust the pressure more frequently whenever your vehicle is used on such conditions.
- ♦ Be sure that the tyre pressures are within the specified limit at all times.

	Solo / Pillion
Front	2.25 kg/cm ² (32 PSI)
Rear	

Warning The tyre inflation pressure in cold condition is extremely important for the performance and the safety of the rider. Improper tyre pressure may result in: stability and handling issues, wobbling, hard steering, bumpy ride, uneven tyre wear etc.

When minor puncture occurs, tubeless tyres take a long time to deflate, as they tend to hold the air inside. If the tyre is found with low pressure, check the tyres for puncture.

Check and adjust the tyre pressure only when the tyres are cold.

Be sure to tighten the valve dust caps securely to prevent leaks while riding.

Ensure correct tyre pressure to avoid rim bend or damage.

Tyre tread condition

Whenever the tyre pressure is checked, ensure to check the tyre treads and side walls for wear, damage and foreign objects.

The tyres also to be checked for:

- Bumps or bulges in the sides of the tyre or in the tread.
- Cuts, splits or cracks in the tyre (replace the tyre without fail if found any of the above issues to ensure the safety of the rider).
- Replace the tyre when the tyre wears off to the tyre wear indicator level (1) which is indicated by the tyre wear indicator (TWI) mark (2) on the side surface of the tyre (ref. Fig. 48).



Fig. 48

MAJOR MAINTENANCE

114

- ♦ Tread depth of the tyre should be minimum 2 mm if the vehicle speed is higher than 100 kmph, and it shall be minimum 1 mm if the vehicle speed is lesser than 100 kmph.

Tread depth (min):	2 mm (> 100 kmph)
	1 mm (< 100 kmph)

**Warning**

Visually inspect the tyres at regular intervals for cracks and cuts, especially on the side walls, and bulges or large stains that indicate internal damage. Replace them if damaged.

Remove any stones or other foreign bodies stuck in the tread.

**Note**

Tread wear marks are integrated into the main grooves on every tyre. If the tyre tread has worn down to the level of the marks, the tyre is completely worn. The location of the tread wear marks are indicated by an aero mark on the edge of the tyre (ref. Fig. 48). Replace the tyre when the minimum tread depth is reached.

Tyre replacement

- ♦ The tyres fitted on your motorcycle were designed to match the performance capabilities of your motorcycle and provide the best combination of handling, braking durability and comfort. The recommended tyres for your motorcycle are:

Front	110/70 - R17-MICHELIN M/C 54 H - PILOT STREET RADIAL
Rear	150/60 - R17-MICHELIN M/C 66H - PILOT STREET RADIAL A

- ♦ While re-assembling the tyre, ensure that the arrow mark (1) provided on the side walls of the tyre faces the direction of wheel rotation (ref. Fig. 49).



Fig. 49

**Warning**

Have the tyres replaced at only TVS Motor Company Authorised Main Dealer or Michelin Authorised Dealer. Proper removal and reassembly of wheels and the tyres are essential.

Use only the recommended tyre. Use of a tyre other than the standard will cause instability. Be sure the wheel is balanced after the new tyre is installed.

**Caution**

Side walls of the tubeless tyres which are in contact with the wheel rim are only seals the air inside the wheel assembly. Hence, care should be taken not to damage the side walls of the wheel rim during removal and reassembly of the tyres.

**Note**

Wheel balancing to be done every 1 year or every 10000 km. In addition, after every tyre puncture repair or replacement, wheel balancing to be done without fail. Do not remove or alter the position of wheel balancing weights after the completion of wheel balancing.

Tyre repair

- ◆ Do not repair the punctured tyre and it should be only replaced. If it is necessary to ride on a repaired tyre, never exceed the vehicle speed above 100 kmph until the tyre is replaced.

**Warning**

Do not repair the punctured tyre. It should not be replaced. If it is necessary to run the vehicle on a repaired tyre, never exceed 100 kmph speed until the tyre is replaced.

Never install a tube inside a tubeless tyre on this motorcycle. The tube may get burst during ride due to excessive heat buildup which will result in serious consequences.

Since the rims of this motorcycle is designed for tubeless tyres, use tubeless tyres only. During hard acceleration or braking, a tube tyre could slip on the rim and deflate rapidly.

Drive Chain

Ensure the safety precautions listed in the **page 104** are followed properly.

The drive chain's service life is purely depended upon the proper lubrication and adjustment. Poor maintenance of drive chain can cause premature wear or damage to the drive chain and sprockets.

The drive chain must be inspected, cleaned, adjusted and lubricated as per the planned maintenance schedule. Under severe usage, or when the motorcycle is used more dusty or muddy areas, more frequent maintenance is necessary.

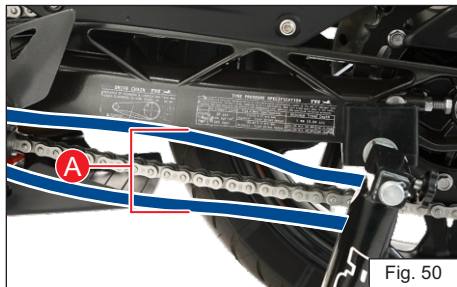


Fig. 50

Slackness inspection

- ◆ Ensure the engine is turned OFF and the vehicle is in neutral.
- ◆ Place the motorcycle on its centre stand (if available) or side stand or in auxiliary stand (**paddock stand ref. page 137**).
- ◆ Using the fingers, check the slackness of the chain at the lower portion, midway (A) between the sprockets (ref. Fig. 50).
- ◆ The slackness (A) should be between 30 to 40 mm at the various points of the chain.

Drive chain slackness 30 to 40 mm

- ◆ The chain should be adjusted at the point of least deflection.

Adjustment

- ◆ Place the vehicle on centre stand (if applicable) or side stand or auxiliary stand (paddock stand) on a flat firm surface.
- ◆ Loosen the rear axle nut (1) using a proper spanner from the tool kit (ref. Fig. 51).
- ◆ Release the lock nuts (2 & 3) (ref. Fig. 51 & 52) using proper spanner from the tool kit (ref. **page 135**).

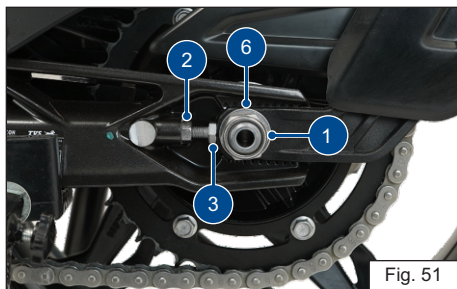


Fig. 51

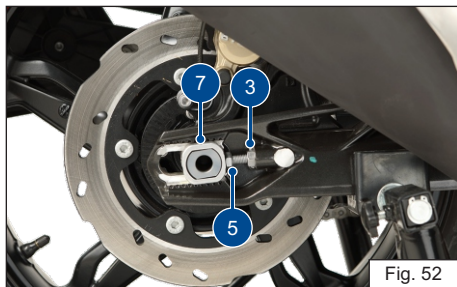


Fig. 52

- ♦ Turn the adjuster screws (4 & 5) 'in' or 'out' to obtain the specified slackness in the chain (ref. Fig. 51 & 52).
- ♦ While ensuring that the notch in the chain adjuster (6 & 7) is adjusted to the same scale value on both left and right sides, tighten the locknuts to the specified torque.
- ♦ Similarly, tighten the rear axle nut and lock nut to the specified torque, and check and ensure the chain slackness (ref. Fig. 51 & 52).

Axle nut tightening torque	$100 \pm 15 \text{ Nm}$
Lock nut tightening torque	$19 \pm 3 \text{ Nm}$



Caution

Chain can be adjusted when vehicle is supported by centre stand (if applicable) or side stand or auxiliary stand (paddock stand) in no load condition.

Always have these tightening torques to be checked at TVS Motor Company Authorised Main Dealer after assembly for safety.

Cleaning

- ◆ Slowly rotate the rear wheel in driving direction or wheel rotation direction and spray the recommended cleaning spray.
- ◆ Leave the cleaning solvent to soak for few minutes. Wipe off the solvent on the chain with a dry, clean cloth thoroughly. Use a soft brush if the chain is dirty.

Lubrication

- ◆ Ensure the chain is cleaned thoroughly and the solvent is wiped off completely.
- ◆ Slowly rotate the rear wheel in driving direction or wheel rotation direction. Apply recommended spray liberally as shown to the drive chain inner lower runs (ref. Fig. 53).



Fig. 53

- ◆ Ensure both the row links are lubricated.



Warning

Avoid getting lubricant on the brakes or tyres. Avoid applying excess chain lubricant to prevent spray onto your clothes and the motorcycle.



Caution

The chain fitted on your motorcycle has X-Rings to protect the moving parts of chain from dirt, and to hold the lubricant inside. If the chain is cleaned using any solvent other than those specific for X-ring chains or washed using steam or water cleaners or a wire brush or an abrasive cleaner, the X-ring seals might be damaged irreparably.

Use only MOTUL C2 spray to lubricate the chain. Using non-specific lubricants may cause severe damage to the chain and the front and rear sprocket.

MAJOR MAINTENANCE

Front Wheel


Ensure the safety precautions listed in the **page 104** are followed properly.

Removal

- ♦ Carefully place the motorcycle in auxiliary stand (**paddock stand ref. page 136**).
- ♦ Loosen the left side clamping screws (1) and (2) (ref. Fig. 54).



- ♦ Remove the locking screw (3) (ref. Fig. 55).
- ♦ Loosen the right side clamping screws (4) and (5).
- ♦ Slightly press the quick-release axle (6) inward for a better grip on the right side.

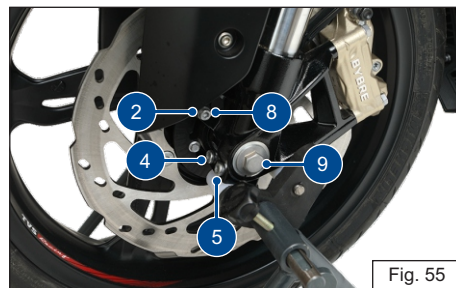

- ♦ Support the front wheel and slowly pull out the quick-release axle (6) from the left side (ref. Fig. 56).



MAJOR MAINTENANCE

- ◆ Place the front wheel down and roll it forward out of front suspension. Ensure not to damage the wheel speed sensor during the removal process.
- ◆ Take out the spacer bush (7) from the left side of the wheel hub (ref. Fig. 57).

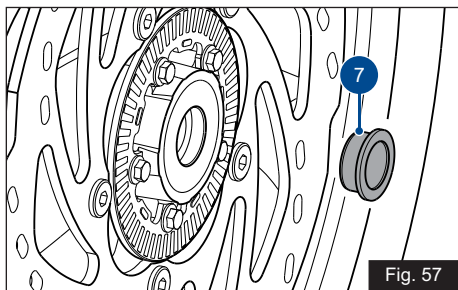


Fig. 57

Caution Ensure not to damage the brake caliper during wheel removal.

Do not actuate the brake lever after the wheel is removed. Unintentional press of brake lever leads to brake pads binding.

Note During the wheel removal, take additional care to prevent the wheel rims from scratches.

Reassembly

- ◆ Push the brake pads of front caliper away from together to ease the front wheel entry in to front suspension.
- ◆ Loosen the mounting screw (8) and take out the speed sensor (9) from front suspension.
- ◆ Fix the spacer bush (7) on the left side of wheel hub (ref. Fig. 57).
- ◆ With the care, roll the front wheel into the front suspension so that there is no damage to the wheel speed sensor.
- ◆ Lift the front wheel. While ensuring the proper seating of brake disc into the caliper assembly, insert the quick release axle.
- ◆ Remove the front wheel stand and stroke the front fork several times without applying the brake.
- ◆ Mount the front wheel stand again and install the locking screw (3) with specified torque (ref. Fig. 55).

MAJOR MAINTENANCE

Tightening torque	50 ± 7 Nm
-------------------	---------------

- ♦ Install the clamping screws (1,2,4 & 5) and tighten to the specified torque (ref. Fig. 54 & 55).

Tightening torque	19 Nm
-------------------	-------

- ♦ Assemble the speed sensor (9) and mounting screw (8) in front suspension.



Caution

Always have these tightening torques to be checked at TVS Motor Company Authorised Main Dealer after assembly for safety.

TVS *Racing*

Rear Wheel

Ensure the safety precautions listed in the **page 104** are followed properly.

Removal

- ♦ Carefully place the motorcycle in auxiliary stand (**paddock stand ref. page 137**) or centre stand (if available).
- ♦ Place a support below the rear wheel to avoid falling of wheel after removing the quick release axle.
- ♦ Remove the mounting screw (1) from the speed sensor mounting and carefully take out the speed sensor (2). (ref. Fig.58)



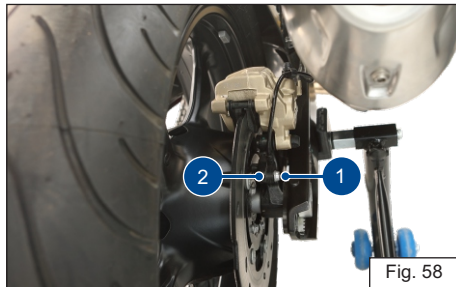


Fig. 58

- ♦ Remove the axle mounting nut (3, ref. Fig 59) using the proper tool from the tool kit (ref. page 134).

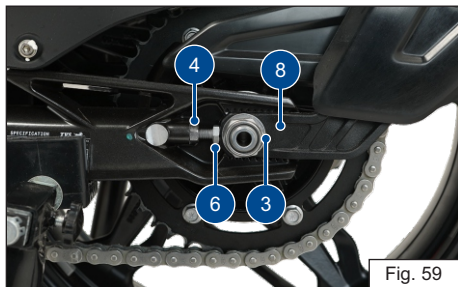

- ♦ Release the lock nuts (4 & 5) and screw-in the adjuster bolts (6 & 7) (ref. Fig. 59 & 60).
- ♦ Remove the chain tensioner with hanger (8) and push the quick-release axle to the right as much as possible (ref. Fig 59).
- ♦ Carefully pull out the quick release axle (9) from the left side and take out the chain tensioner (10) (ref. Fig. 60).
- ♦ Roll the rear wheel forward as far as possible and disengage the chain (11) from the sprocket (ref. Fig. 61).
- ♦ Care should be taken not to damage the wheel speed sensor during this process.

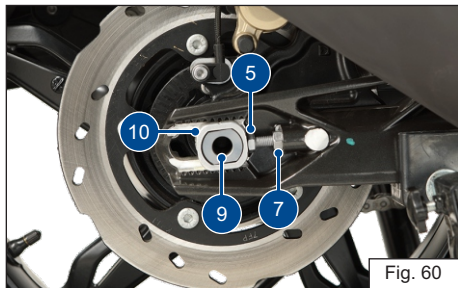

MAJOR MAINTENANCE

- ♦ Carefully roll the rear wheel out from the swing arm while pulling the brake-caliper assembly back far enough to allow the rear wheel to come out.



Caution

Care should be taken not to damage speed sensor during its removal and reassembly. Ensure that the speed sensor is free from any mud / clogging with dirt.

Ensure not to damage the brake caliper during wheel removal.

Do not actuate the brake pedal after the wheel is removed. Unintentional press of brake pedal leads to brake pads binding.



Note

Sprocket assembly, spacer axle rear LH & RH are loose fits in the wheel. Make sure that no parts are damaged or mislaid during removal and reassembly of the wheel.

During wheel removal, take additional care to prevent the wheel rims from scratches.

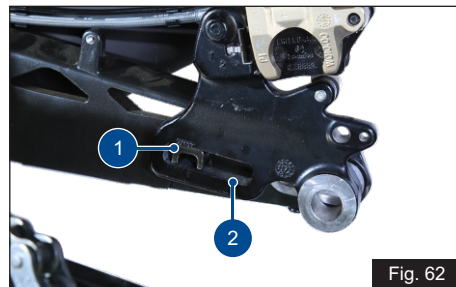


Fig. 62

Reassembly

- ♦ Carefully roll the rear wheel on the support into the swing arm, along with LH & RH spacers and sprocket, as far as necessary to allow the brake-caliper to be inserted while taking care of wheel speed sensor.
- ♦ Push the brake pads away from together to ease the rear wheel entry into swing arm.
- ♦ Place the brake-caliper (1) on the guide (2) of the swing arm as shown (ref. Fig. 62)
- ♦ Roll the rear wheel further into the swing arm, while pushing the brake-caliper assembly forward at the same time.

MAJOR MAINTENANCE



- ♦ Roll the rear wheel as far forward as possible and loop the chain over the sprocket.
- ♦ Insert the quick-release axle along with the chain tensioner from left side of the swing arm while ensuring that the axle is seated properly into all the components.
- ♦ Assemble the left side chain tensioner.
- ♦ Assemble the axle nut along with the washer and hand tighten it.
- ♦ Adjust the chain slackness and tighten the lock nuts, and the axle nut to the specified torque (**ref. page 162**).
- ♦ After tightening the axle nut, once again check and confirm the chain slackness.

Assemble the speed sensor (2) and mounting screw (1) in rear caliper (ref. Fig. 58).



Caution

Chain can be adjusted when vehicle is supported by centre stand (if applicable) or side stand or auxiliary stand (paddock stand) in no load condition.

Always have these tightening torques to be checked at TVS Motor Company Authorised Main Dealer after assembly for safety.

Battery

Ensure the safety precautions listed in the **page 104** are followed properly.

Since the maintenance free battery is used in your motorcycle, it is not necessary to check the battery electrolyte level or add distilled water.

If your battery seems weak ie. if you are facing starting issues or other electrical issues, contact TVS Motor Company Authorised Main Dealer.

Removal

- ♦ Turn OFF the ignition.
- ♦ Remove the pillion and rider seats as explained in **page no. 84** to access battery.
- ♦ Remove the mounting bolt and take the battery holder (A) (ref. Fig. 63)
- ♦ Disconnect the negative terminal (1) first followed by the positive terminal (2) (ref. Fig. 64). Carefully take out the battery.

Re-fitment

- ♦ Reinstall the battery in the reverse order of removal.
- ♦ Connect the positive terminal first and then the negative firmly to avoid any damages to electrical system / battery. Make sure the rubber boot is intact with positive terminal.

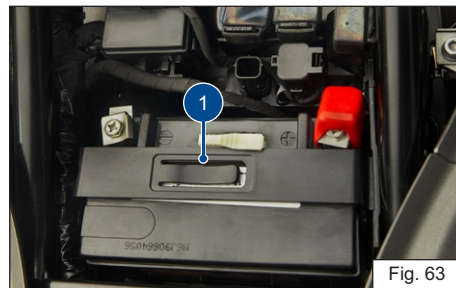


Fig. 63

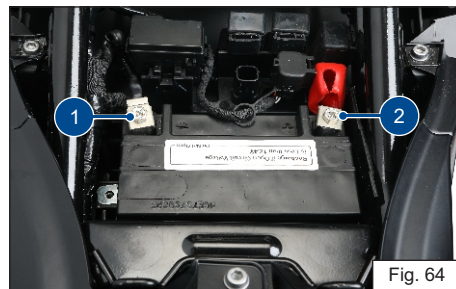


Fig. 64

Warning Battery develop explosive gases. Keep it away from heat sources. If charging is required, the battery must be charged in well ventilated area.

Unusable battery must be disposed in environment friendly manner. Do not discard it with household trash. Handover the battery to the battery Dealers or to a recycling centre that accepts used batteries.

Caution Never operate the motorcycle with discharged battery as it may damage electrical components.

Do not push start the vehicle, use a good battery or jump cable to start the vehicle incase of battery drain.

Note If the motorcycle is to remain unused for a long time (a month or longer), it is advisable to disconnect the battery terminals or have the battery removed by a skilled personnel.

Fuses

The electrical components of your motorcycle are protected by six fuses housed inside a fuse box and located below the rider seat.

To access the fuses, park the motorcycle on a flat and firm surface and remove the pillion and rider seats as explained in **page no. 84**.

A 'fuse puller' (A) is placed on the battery holder can be used to pull out the fuse from the fuse box during replacement.

Removal and replacement

- ◆ Turn OFF the ignition.
- ◆ Press the lock and open the fuse box cover (1) (ref. Fig. 65).


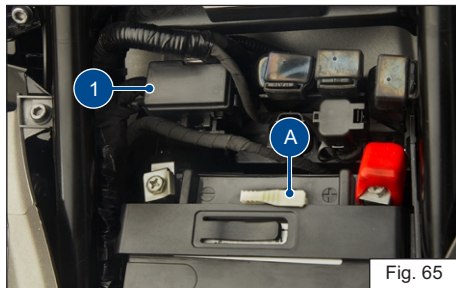


Fig. 65

MAJOR MAINTENANCE

- ♦ Pull out the defective fuse and re-fix the new one with same rating.
- ♦ Close the fuse box cover and ensure the proper locking.


You can identify a blown fuse by the interrupted centre link (1) (ref. Fig. 66).

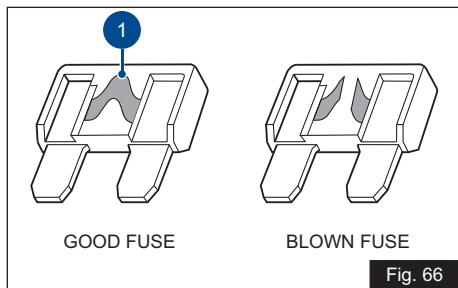

Fuse assignments

- ♦ Each fuse inside the fuse box are assigned for different electrical load and it is listed the table given below. Never change the fuse rating to protect your electrical system and to avoid severe damages.

Fuse	Colour	Electrical load
F1 - 7.5A	Brown	Lambda / starter relay / purge / SAS / relay fuel pump module / injector / relay EFI / ignition coil
F2 - 7.5A	Brown	Speedometer / diagnostic / HECU / ECU / cooling fan
F3 - 30A	Green	Main fuse
F4 - 25A	Cream	HECU
F5 - 10A	Red	All lights / horn LH & RH
F6 - 10A	Red	EFI / speedometer
10A	Red	HECU

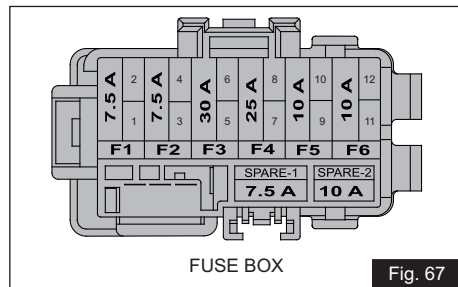

Fuse arrangement

- ♦ Fuses are arranged inside fuse box as given in the figure (Fig. 67). Ensure to fix the right rating fuse at right location.



Caution Do not use the motorcycle by shorting the wires without a fuse. Never use a fuse with a rating other than that specified. Failure to observe above rules may damage the electric system or even cause fire.



Note A sticker with fuse colour codes and rating is pasted inside the fuse box cover which can be referred during fuse replacement.

Ensure to replace the 'fuse puller' in the same place for future usage.

Care should be taken not to spray water on electrical components.

Fuse location

- ♦ Spare fuse for the each of the fuse is located inside the fuse box (A) and as well as in the wiring harness (B) below the seat latch of pillion seat (ref. Fig. 68).



Fig. 68


MAJOR MAINTENANCE

Mirror Assembly

Ensure the safety precautions listed in the **page 104** are followed properly.

Assembly


- ♦ Remove the allen screw (2 nos) from the bracket licence complete using a hexagonal key 5 mm from the tool kit (ref. page 135) (ref. Fig. 69).

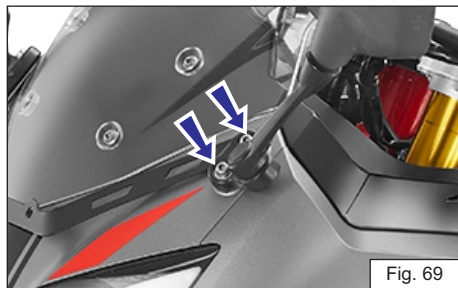

- ♦ Assemble the mirror assembly LH to the bracket licence complete along with grommets (2 nos) on both sides bracket licence complete.
- ♦ Now tighten the allen screw (2 nos) with the bracket licence complete using a hexagonal key 5 mm from the tool kit (ref. Fig. 70).

Tightening torque	7 ± 1 Nm
-------------------	--------------

- ♦ Similarly assemble the mirror assembly RH.

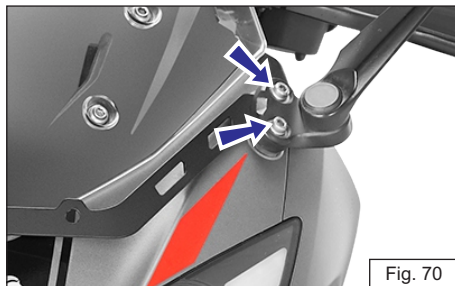

Diagnostic Connector

The diagnostic connector is located below the rider seat. Follow the procedure given below to access the connector.

Removal

- ♦ Park the motorcycle on a flat and firm surface and remove the pillion and rider seats as explained in **page no. 84**.
- ♦ Turn OFF the ignition.
- ♦ Gently pull out connector along with its cap from its location by releasing the lock (1) (ref. Fig. 71).
- ♦ Release the lock of the cap and take out the cap carefully.

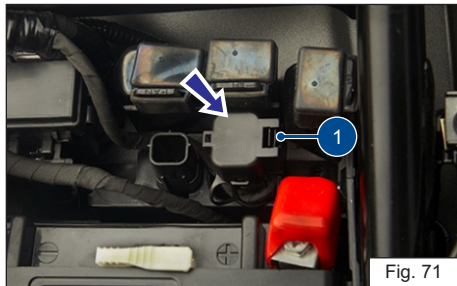


Fig. 71

Re-fixing

- ♦ Re-fix the cap of the connector and ensure the proper locking.
- ♦ Re-fix the connector to its location and lock it properly.



Caution

Diagnostic connector to be accessed and used by the trained personals of TVS Motor Company Authorised Main Dealer or by the other authorised persons of TVS Motor Company Limited during service. Do not fiddle with system at unauthorised service location.

Ensure to re-fix the diagnostic coupler cap after the usage to avoid damages to the electric system due to water entry. Secure the connector in it's location without fail to avoid getting damaged.

Cleaning your Motorcycle

For maintaining the original shine on metal parts surface and painted parts surface, wash and clean your motorcycle at regular intervals depending on usage and particular road conditions.

- ♦ Use only specific products. Avoid aggressive detergents and solvents.
- ♦ Use only water and natural soap to clean glass and the seat.
- ♦ To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.
- ♦ If the parts of the engine are unusually dirty or greasy, use a de-greasing agent while taking care of transmission components (like chain, front and rear sprockets, etc.).



Caution

Never clean the motorcycle using hot or high pressure water jets. Cleaning the motorcycle with high pressure water jet may lead to serious problems in front fork, wheel assemblies, brakes, electrical systems, inlet and exhaust systems which will result in reduced safety.

- ♦ Transmission components can be rinsed with warm water and dried with clean dry cloth.
- ♦ Clean the radiator regularly. Use a hose with low water pressure to clean the radiator fins blockage. This prevents the engine from overheating due to insufficient cooling. Care should be taken not to damage the radiator fins during cleaning.



Warning

There may be a loss of braking efficiency immediately after washing the motorcycle. Greasing or lubricating the brake discs leads to loss of braking. Oil-free solvent to be used for cleaning the brake discs.

The head lamp may get fogged up after washing, rain or moisture. Switch ON the head lamp for a short period of time to dry any condensation.

Maintain minimum distance of 60cm between the water jet nozzle and the vehicle. Do not direct the jet onto electrical component and connectors.

Storage Procedures

For storing your motorcycle for longer periods of over a month and above, we recommend to carry out the following steps:

- ♦ Clean the motorcycle. Park the vehicle on centre stand (if applicable) or in auxiliary stand (refer page 137).
- ♦ Warm-up the engine and drain the engine oil.
- ♦ Empty the fuel tank.
- ♦ Remove the spark plug and feed in several drop of engine oil through the spark plug hole. Crank the engine few times and reinstall the spark plug.
- ♦ Disconnect and remove the battery. Store it away from direct sunlight and freezing temperatures.

Place a suitable support at the bottom of the frame so that both the tyres are off the ground. This will ensure the better tyre life.

- ♦ Protect the vehicle with the suitable cover and store the vehicle inside a garage or similar area to avoid damage due to dust and rain.

- ♦ Make sure that the storage area is well ventilated and free from any source of flame or spark.




Caution

Do not park the vehicle on a slope or soft ground or else it may fall.

During storage the battery must be checked and if required recharged atleast once in a month.

Restoring the Motorcycle to use

- ♦ Take the motorcycle out of garage and clean the motorcycle thoroughly (ref. page 131).
- ♦ Remount the battery after bench charging if required.
- ♦ Fill the engine oil and check the oil level using the gauge.
- ♦ Lubricate the necessary parts.
- ♦ Fill up fresh fuel in the fuel tank (ref. page 81).
- ♦ Check and inflate the tyre pressure to the specified limit.
- ♦ Check and correct the points mentioned in pre-ride check (ref. page 87).

 **Note** Turn on the ignition and start the engine. Allow the to run in idle mode for few minutes and ride out.

Taking Long Trips

When taking the motorcycle a long trip more than 500 km follow the instructions given below:

- A) Keep the following items for use incase of emergency
 - ◆ Complete tool kit and first aid kit.
 - ◆ Recommended spark plug one number.
 - ◆ Clutch cable each one.
- B) Precautions to be taken for the journey:
 - ◆ Ensure engine oil and brake fluid level are upto the mark.
 - ◆ Ensure the coolant level.
 - ◆ Adequate fuel in the tank.
- C) Check the motorcycle for the following:
 - ◆ Tightness of all fasteners for the correct torque value.
 - ◆ Fitness of tyres and tyre pressure.
 - ◆ Working of all the lamps and horn.
 - ◆ Balancing of wheel.
 - ◆ Smooth functioning of all cable and their free plays.
 - ◆ Smoothness of steering operation.

- ◆ Slackness and lubrication of chain.
- ◆ Front and rear brake functioning and rear brake switch working.
- ◆ Front fork for any abnormality.
- ◆ Spark plug cleanliness and condition.
- ◆ Air filter element cleanliness.
- ◆ Lubrication of all necessary parts.
- ◆ Any other jobs as necessary.



Caution

Long journey are to be taken only after the running-in (ref. page 01).

Have your vehicle checked for the above mentioned items at TVS Motor Company Authorised Main Dealer.



Note

Ensure the first aid equipments are changed periodically based on the expiry.

Tool Kit

To assist you in performing certain aspects of periodic maintenance and emergency repairs, a tool kit is supplied along with the vehicle.

- ♦ The tool kit (A, ref. Fig. 72) is located below the pillion seat (ref. page 85 for seat removal procedure).
- ♦ The tool kit consists of one number each of the following:
 1. Tool bag
 2. Double ended open jaw spanner 12x13
 3. Double ended open jaw spanner 10x16
 4. Bit +/-

5. Grip driver
6. Adjuster shock absorber rear
7. Handle ring spanner
8. Hexagonal key 5 mm
9. Ring spanner



Note

It is recommended to use the tool kit incase of any emergency only. It is always advisable to take your vehicle to TVS Motor Company Authorised Main Dealer.



Fig. 72

Auxiliary Stand (Paddock Stand)

Front wheel stand (ref. Fig. 73, 74 & 75)

Place the motorcycle on its centre stand (if applicable) or on rear wheel stand (ref. page 137) on a flat firm surface.

Use the auxiliary stand supplied for lifting the front wheel (the stand is an accessory and it is available with the TVS Motor Company Authorised Main Dealer).

- ◆ Loosen the clamping screws (1) of the stand adopters.
- ◆ Move away the adopters (2 & 3) in such way that the front forks fit between them.
- ◆ Centre the stand relative to the front wheel and push it against the front axle.

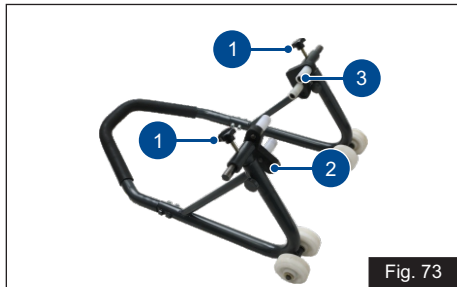


Fig. 73

- ◆ Align the two adapters (2a & 3a) so that the front forks are securely seated.



Fig. 74

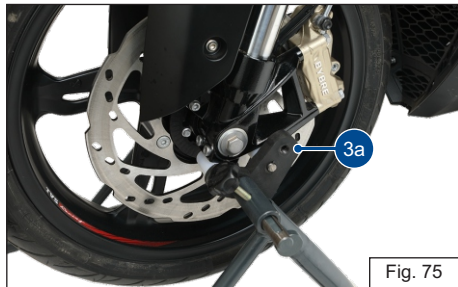


Fig. 75



Fig. 76

- ♦ Apply uniform pressure to push the stand down and raise the motorcycle. (ref. Fig. 76)
- ♦ Tighten the clamping screws (1).



Caution Centre stand (if available in the vehicle and parked using it) retracts if the motorcycle is lifted too high.

When raising the motorcycle, make sure that the centre stand (if available in the vehicle and parked using it) remains on the ground. Else the motorcycle is supported by the rear wheel stand to avoid falling of the motorcycle.

Rear wheel stand

Use the rear wheel stand (the rear wheel stand is an accessory and it is available with the TVS Motor Company Authorised Main Dealer).

- ♦ Ensure that the motorcycle is parked on a flat and firm surface.
- ♦ Loosen the clamping screws (1) of the stand adopters.
- ♦ Move away the adopters (2 & 3) in such way that the swing arm fits between them (ref. Fig. 77).
- ♦ Ensure that the axle is not covered.
- ♦ Position the stand (ref. Fig. 78).

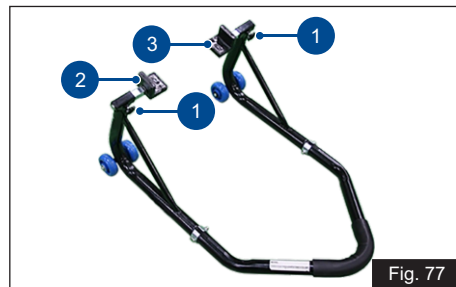


Fig. 77

GENERAL INFORMATION

138

Auxiliary Stand

- ♦ Make sure that the vehicle is secured so that it cannot topple sideways.
- ♦ Push the stand down until the motorcycle is standing upright and the handle of auxiliary stand is resting on the floor properly.



Fig. 78



Caution When raising the motorcycle, make sure that the vehicle is secured so that it cannot topple sideways.

TVS Motor Company Limited ('the Company') gives this warranty with respect to the TVS RR 310 manufactured by the Company.

While the Company has taken every care to maintain quality in the manufacture of the TVS RR 310, the above said warranty is subject to other terms of warranty:

- **Standard Warranty** - During 24 months from the date of purchase or during the first 30,000 km of run*.
- **Additional Warranty** - During 36 months from the completion of standard warranty or during the first 50,000 km of run**.

The vehicle in the hands of original retail purchaser, whichever is earlier, the parts of the vehicle covered under warranty which prove to the satisfaction of the Company to have a manufacturing defect will be repaired or replaced free of cost.

The Company's obligation under this warranty is limited to repairing or replacing, free of cost, those parts of the vehicle which upon examination by the Company may prove to the Company's satisfaction to have a manufacturing defect, and in such cases the Company's decision either to repair or replace the affected parts will be final. In the event of replacement of parts, the Company also reserves the right to use parts of the same brand as the affected parts or any other brand which is used by the Company in the course of manufacture. All parts replaced under this warranty will become the property of the Company and must be returned to the company.


Limitations of Warranty:

This warranty shall not apply to following condition:

1. Any natural wear and tear, including without limitation, aging.
2. Warranty claims on proprietary items such as tyres and batteries etc., should be referred by the user directly on the respective manufacturer, as per their warranty terms and the Company shall not be liable in any manner in respect to the same.

TVS Motor Company Limited ('the Company') gives this warranty with respect to the TVS RR 310 manufactured by the Company.

3. Parts repaired or replaced under this warranty are warranted only throughout the remainder of the original warranty period.
4. The Company is not liable for any delay in servicing due to reasons beyond the control of the Company or any of its Authorised Main Dealers.
5. In any event, the Company is not liable for indirect, remote, incidental or consequential damages.
6. The Company may make any modification or improvement to vehicles in future production at any time without prior notice and without any obligation to install the same on vehicles previously dispatched for sale.
7. Any claim under this warranty will lie only when the customer:
 - takes his vehicle to an Authorised Main Dealer of the Company and reports the problem he / she felt in the vehicle to enable the Authorised Main Dealer to inspect the same and assess the cause for the reported problems.
 - produces to such Authorised Main Dealer the owner's manual for the concerned vehicle for verification of relevant details.
8. This is the only warranty given by the Company for the TVS RR 310. No employee, Dealer or other person is authorised to extend or enlarge this warranty.

 **Warning** Modifications to this vehicle not approved by the TVS Motor Company may cause loss of performance and render it unsafe for use and disqualifies for warranty coverage also.

 **Note** This warranty is applicable only for the vehicles availing warranty service (periodic service) when it falls due at TVS Motor Company Authorised Main Dealer only.

Standard Warranty (24 months or first 30,000 km) - List of parts not covered under warranty*

ITEM	WHAT TO CHECK FOR
Engine	-
Normal Maintenance operations	Engine tune-up, decarbonizing, fuel system cleaning, oil and coolant changes, head light focusing, fastener re-tightening, tuning of EFI system, clutch, brakes, greasing of steering system and pivot pins as well as other normal adjustments.
Wear & tear items	Chain, sprockets, clutch and brake linings, fasteners, shims, washers, oil seals, gaskets etc.
Electrical	Fuse, LEDs are only in head lamp, tail lamp, tsl
Service Maintenance Parts	Oil filter, spark plug, air filter, oil, coolant, clamps
Rubber, rexine & plastic items	All hoses , pipes and plastic aesthetics
Proprietary Items	Battery and tyres (the warranty terms are subject to our agreement with proprietary OEM)
Others Factors	Parts of the vehicle getting affected due to atmospheric effect / environmental factors (rusting, paint peel off etc.). However, depending on the vehicle usage condition, warranty would be accepted up to 2 years from the date of purchase.
	Parts of the vehicle which have been tampered with, altered, repaired or replaced by persons not authorised by the Company and which in the sole judgement of the Company affect the performance of the vehicle.

Standard Warranty (24 months or first 30,000 km) - List of parts not covered under warranty*

ITEM	WHAT TO CHECK FOR
Others Factors	Parts which are used in conjunction with parts not made or recommended by the Company.
	Parts suffering damage or resultant damage by accident, misuse, negligent treatment, use of bad quality lubricants or coolant or impure fuel or by omission to follow the guidance and instructions contained in this owner's manual.
	<p>Vehicles on which engine number or chassis number is deleted, defaced or altered.</p> <p>Vehicles on which any warranty service including scheduled pay service is not availed when it falls due (at TVS Motor Company Authorised Main Dealer).</p>
	<p>Vehicles sold or transferred by original retail purchaser.</p> <p>Vehicles used for racing or any competition or used otherwise than for ordinary personal transportation. Vehicles attached with side cars etc.</p> <p>Vehicles which have been taken out of India.</p> <p>Vehicles affected by natural calamities like flood, earthquake, tsunami, storm etc.,.</p>

Additional Warranty (36 months or first 50,000 km) - List of parts not covered under warranty**

ITEM	WHAT TO CHECK FOR
Engine	Guide cam chain, tensioner cam chain, cam chain, valves (for carbon deposition alone), finger follower and Stem oil seal
Normal Maintenance operations	Engine tune-up, decarbonizing, fuel system cleaning, oil and coolant changes, head light focusing, fastener re-tightening, tuning of EFI system, clutch, brakes, silencer (aesthetic failures), suspensions (leakage failures), greasing of steering system and pivot pins as well as other normal adjustments.
Wear & tear items	Chain, sprockets, clutch and brake linings, control cables fasteners, shims, washers, oil seals, gaskets etc.
Electrical	Fuse, headlamp, tail lamp, TSL, control switches, instrument cluster, wheel speed sensor, ignition coil, injector, relays and horn.
Service Maintenance Parts	Oil filter, spark plug, air filter, oil, coolant, clamps
Rubber, rexine & plastic items	All hoses, pipes and plastic aesthetics
Proprietary Items	Battery and tyres (the warranty terms are subject to our agreement with proprietary OEM)
Others Factors	Parts of the vehicle getting affected due to atmospheric effect / environmental factors (rusting, paint peel off etc.). However, depending on the vehicle usage condition, warranty would be accepted up to 2 years from the date of purchase.
	Parts of the vehicle which have been tampered with, altered, repaired or replaced by persons not authorised by

Additional Warranty (36 months or first 50,000 km) - List of parts not covered under warranty**

ITEM	WHAT TO CHECK FOR
Others Factors	the Company and which in the sole judgement of the Company affect the performance of the vehicle.
	Parts which are used in conjunction with parts not made or recommended by the Company.
	Parts suffering damage or resultant damage by accident, misuse, negligent treatment, use of bad quality lubricants or coolant or impure fuel or by omission to follow the guidance and instructions contained in this owner's manual.
	<p>Vehicles on which engine number or chassis number is deleted, defaced or altered.</p> <p>Vehicles on which any warranty service including scheduled pay service is not availed when it falls due (at TVS Motor Company Authorised Main Dealer).</p>
	<p>Vehicles sold or transferred by original retail purchaser.</p> <p>Vehicles used for racing or any competition or used otherwise than for ordinary personal transportation. Vehicles attached with side cars etc.</p> <p>Vehicles which have been taken out of India.</p> <p>Vehicles affected by natural calamities like flood, earthquake, tsunami, storm etc.,</p>

WARRANTY AND SERVICES



Customer's Name and address

.....
.....
.....

Frame number.....

.....

Engine number.....

Key number.....

Colour.....

Date of sale.....

Km.....

Registration number.....

.....

Selling dealer's code, name, address and
phone number:

.....
.....
.....

Service Information

There are five services planned for your TVS RR 310 during the warranty period. Of these, first three are free services for which labour charges are free. In addition to these three free services, we have a scheme of two pay services. For keeping maintenance track of your vehicle, a service record sheet is also attached. Please have the record sheet filled by the Dealer who is carrying out the maintenance service.

Before you avail your first free service, please enter the particulars of your vehicle on the left side of this page. This will be useful for any reference.

For availing any of the warranty services, please take your vehicle and your owner's manual to any of our Authorised Main Dealer. After completing the warranty service, for your record, the Authorised Main Dealer will affix their stamp on last column of record sheet.

Periodic maintenance always helps good performance of an automobile and our services are planned to keep your TVS RR 310 performing good.

Please note that carrying out the services for your vehicle at scheduled intervals is necessary for availing warranty. And please also remember that, after the services are over, periodic servicing of your vehicle at appropriate intervals, depending upon its extent of use, will keep your vehicle at its best level of performance.

In case need any clarification or assistance, please feel free to write to us mentioning the frame number, engine number and the date of purchase of your vehicle also the name and place of the Authorised Main Dealer from whom you bought the vehicle and getting it serviced.

Service Department

TVS MOTOR COMPANY LIMITED

P.O.Box No. 4, Harita, Hosur - 635109,

TAMILNADU, INDIA.


Toll free no. :- 1800-258-7111

Pre-Delivery Inspection**Sl. No. Description**

- 1 Inspect the vehicle for any visible damages / scratches
- 2 Inspect the battery charge and terminals connections
- 3 Ensure first aid kit and tool kit placed in the vehicle
- 4 Install left and right side mirrors
- 5 Inspect drive chain slackness and adjust if required
- 6 Inspect front and rear tyre pressure and inflate to specification if required.
- 7 Fill the fuel in the vehicle
- 8 Inspect the startability of the vehicle
- 9 Inspect and ascertain the working of all lamps and horn
- 10 Inspect head lamp focus and adjust if required
- 11 Conduct engine start suppression test
- 12 Test drive vehicle and ensure proper working of all controls and system
- 13 Clean the vehicle thoroughly
- 14 Using diagnostic tool, ensure there is no error codes
- 15 Code the service interval (distance and time) using diagnostic tool
- 16 Change the menu in cluster to odometer menu before handing over the vehicle to the customer
- 17 Explain of the product features and operations to the customer
- 18 Inspect the rear brake pedal free play and adjust if required
- 19 Check the front wheel and rear wheel freeness
- 20 Ensure any additional points communicated by TVS Motor Company Limited during the course

Planned Service Schedule (kms or month whichever of the two occurs early)*

Sl.No.	Service	Type	Kms	Months	Remarks
1	1st Service	Free	1000	2	
2	2nd Service	Free	5000	6	
3	3rd Service	Free	10000	12	
4	4th Service	Pay	15000	18	
5	5th Service	Pay	20000	24	

 **Note** Free service entitles the customer to avail service as detailed in service instructions at free of labour charge. Cost of oil, coolant, brake fluid and other materials for the free service is chargeable.

Charge for the pay services, cost of oil, coolant, brake fluid and other materials for the pay service should be borne by the customer.

* Please remember that, after the above schedule, periodic servicing of your vehicle at appropriate intervals, depending upon its extent of use, will keep your vehicle at its best level of performance.

TVS 
**geared
to care**

**Pickup &
Drop**

Busy Life? Easy Servicing!

Now, service your bike anywhere, anytime.

- ★ Service the vehicle at your door step.
- ★ Available for regular maintenance or breakdown service only.
- ★ Offered at nominal convenience charges.

Contact your nearest Dealership for details.*

*Facility available at selected Dealerships only. Terms and conditions apply

Planned Service Record

Service	Completed on	Next service due on	Dealer's stamp & sign
1st	Date& Km	Dateor Km	
2nd	Date& Km	Dateor Km	
3rd	Date& Km	Dateor Km	
4th	Date& Km	Dateor Km	
5th	Date& Km	Dateor Km	

Additional Service Record

Additional Service Record

Service	Completed on	Next service due on	Dealer's stamp & sign
6th	Date& Km	Dateor Km	
7th	Date& Km	Dateor Km	
8th	Date& Km	Dateor Km	
9th	Date& Km	Dateor Km	
10th	Date& Km	Dateor Km	

Recommended Fuel and Lubricants

Fuel

Recommended fuel grade	: ES Gasoline
Fuel capacity (usable)	: 11 ± 0.5 ltr
Minimum required quantity of fuel	: 2 ltr

Engine Oil

Recommended manufacturer	: TVS / MOTUL
Recommended grade	: TVSM TRU4 SAE 15W50 Synthetic oil / MOTUL 15W50 3000 4T Plus MA2 oil
Recommended quantity	: 1700 ml (fresh assembly / full drain along with filter change)

Coolant

Recommended manufacturer	: Glysantine
Recommended grade	: G48
Recommended quantity	: 1 litre (coolant and distilled water ratio 50:50)

Cone set grease

Recommended manufacturer	: As recommended by TVS Motor Company
Recommended grade	: BEM 34-132
Recommended quantity	: 15 gm (in sachet)

Recommended Fuel and Lubricants**Front fork oil**

Recommended manufacturer	: Kayaba
Recommended grade	: KHL 15-10
Recommended quantity	: 440 ml/leg

Chain cleaner

Recommended manufacturer	: MOTUL
Recommended grade	: C1

Chain lubricant

Recommended manufacturer	: MOTUL
Recommended grade	: C2

Brake Fluid

Recommended manufacturer	: BASF HYDRAULAN 404/EQUIVALENT
Recommended grade	: DOT 4

Engine

Bore	: 80 mm
Stroke	: 62.1 mm
Displacement	: 312.2
Compression ratio	: 10.94 ±: 1
No. of valves	: 4
Maximum power (Urban and Rain mode)	: 19 kW @ 7600 rpm
(Sport and Track mode)	: 25 kW @ 9700 rpm
Maximum torque (Urban and Rain mode)	: 25 Nm @ 6700 rpm
(Sport and Track mode)	: 27.3 Nm @ 7700 rpm
Maximum speed (Urban and Rain mode)	: 125 km/h
(Sport and Track mode)	: 160 km/h
Engine idling rpm	: 1700 ± 200 rpm
Idling CO%	: CO < 0.5%
Idling HC ppm	: HC < 500 ppm
Camshaft	: Double over head camshaft
Fuel feed	: Closed loop EFI system
Cooling system	: Liquid cooling
Air filter	: Dry paper type
Oil filter	: Wire mesh and Micronic paper filter
Lubrication system	: Wet sump lubrication
Starting system	: Electric starter

Transmission

Transmission

Clutch system	: Wet multi plate type
Gear shift pattern	: One down five up
Number of gears	: Six speed, toe shift
Primary transmission	: Spur gears
Secondary transmission	: Chain and sprockets
First gear ratio	: 3.000
Second gear ratio	: 2.06
Third gear ratio	: 1.59
Fourth gear ratio	: 1.29
Fifth gear ratio	: 1.10
Sixth gear ratio	: 0.95
Primary reduction	: 3.083
Secondary reduction	: 2.471

Dimension

Overall length	: 2001 ± 20 mm
Overall width	: 786 ± 5 mm
Overall height	: 1135 ± 10 mm
Saddle height	: 811 ± 10 mm
Ground clearance	: 180 ± 5 mm
Wheel base	: 1365 ± 12 mm
Kerb weight	: 174 kg
Payload	: 130 kg
Gross vehicle weight	: 304 kg

Frame and Suspension

Frame type	: Trellis type frame
Front suspension	: USD fork 41 mm diameter
Rear suspension	: Solid Die cast Aluminium swing arm directly hinged monoshox, pre-load adjustable.
Fork stroke length	: 140 mm
Rear suspension travel	: 119 mm
First gear ratio	: 3.000
Steering angle	: $34^{\circ} \pm 2^{\circ}$
Caster angle	: $25^{\circ} \pm 1^{\circ}$
Turning radius	: 2542 ± 145 mm
Gradability	: $\geq 10^{\circ}$
Banking angle	: $49^{\circ} \pm 1^{\circ}$

Wheels and Brakes

Brakes

Brakes type	: Disc brake with ABS
Front brake size	: Hand operated 300 mm disc
Rear brake size	: Foot operated 240 mm disc

Wheel

Front tyre make and model	: MICHELIN M/C 54 W - Road 5 Radial
Rear tyre make and model	: MICHELIN M/C 66 W - Road 5 Radial
Front tyre size	: M/C 54 H Tubeless - 110/70 ZR17 M/C 54 W Tubeless
Rear tyre size	: M/C 66 H Tubeless - 150/60 ZR17 M/C 66 W Tubeless
Front tyre pressure	: 2.25 kg (32 PSI) for both solo and dual
Rear tyre pressure	: 2.25 kg (32 PSI) for both solo and dual

Free Plays

Free plays

Clutch free play	: 8 - 12 mm
Drive chain free play	: 30 - 40 mm

Electricals

Type	: Three phase AC generator
Ignition system	: Dynamically controlled - high energy integrated ignition system
Spark plug	: NGK(LMAR9D - J)
Spark plug gap	: 0.8 ± 0.1 mm
Battery type	: 12V/8 Ah MF wet charge type
Body earthing	: Two grounds are mounted on engine body (1. Engine ground and 2. Ignition ground) and one ground mounted on fuel tank
Generator	: 12V, 290W
Head lamp	: 12V, LED
Position lamp	: 12V, LED
Tail / brake lamp	: 12V, LED (2W / 2W approx.)
Turn signal lamp	: 12V, LED (2W each)
Number plate lamp	: 12V LED
Instrument panel	: TFT/LED indicators
Horn type	: 12VDC two numbers
Fuse	: Minifuse - 7.5A x 2, 10A x 3, 25A x 1 and 30A x 1
Voltage regulator	: Three phase shunt full DC RR unit

Important Torque Details

Front wheel

Quick release axle locking screw	: 50 ± 7 Nm
Axle holder clamping screws	: 19 ± 3 Nm
Caliper assembly mounting bolts	: 28 ± 4.2 Nm

Rear wheel

Drive chain adjuster screw lock nuts	: 19 ± 3 Nm
Rear wheel quick release nut	: 100 ± 15 Nm

Swing arm

Swing arm axle mounting nut	: 135 ± 20.5 Nm
Rear shock absorber top mounting bolt	: 56 ± 8.4 Nm
Rear shock absorber bottom mounting bolt	: 56 ± 8.4 Nm

Basic Troubleshooting

Difficulty in starting the engine or engine not starting

Possible cause	Rectification
Side stand is in ON and gear engaged	Release the side stand
Engine kill switch is ON	Turn off the engine kill switch (ref. page 28)
Gear applied and clutch not disengaged	Either apply the clutch or bring the transmission to neutral position.
No fuel in the fuel tank	Refuel (ref. page 81)
Battery discharged	Recharge the battery or fix a new battery if the old battery is not getting charged.

